


SIAMP


Monaco

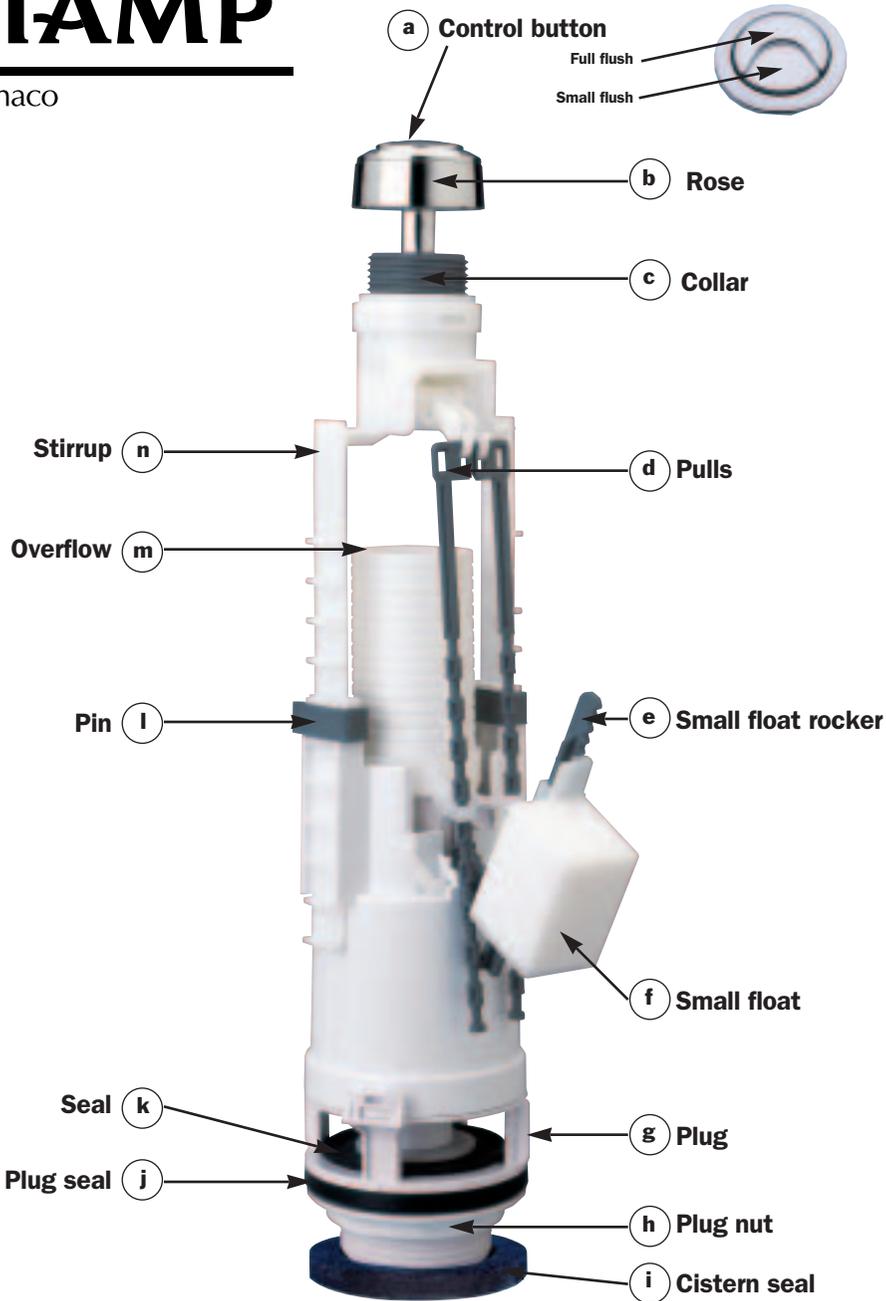

SKIPPER 36A

ASSEMBLY MANUAL

I - PREPARATION OF THE MECHANISM

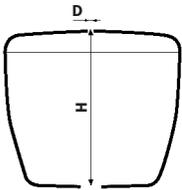


Measure the cistern:


- H (from top of lid to inside bottom of cistern)
- D (diameter of hole in lid)

⚠ Check the positioning of the stirrup if the stirrup (n) is positioned correctly with reference to the table below (pin (i) clipped into the right notch), move on to step 9; otherwise, go through all the following steps in order:

- 1 Unclip the pulls (d)
- 2 Remove the pins (i)
- 3 Remove the stirrup (n)
- 4 If necessary, cut the overflow (m) as shown in the table
- 5 If necessary, cut the pulls (d)
- 6 Set the stirrup in the suitable notch - see table (n)
- 7 Attach the stirrup again using the pins (l)
- 8 Clip the pulls (d) back in place
- 9 Clip the small float (f) in place
- 10 Unscrew the nut (h)

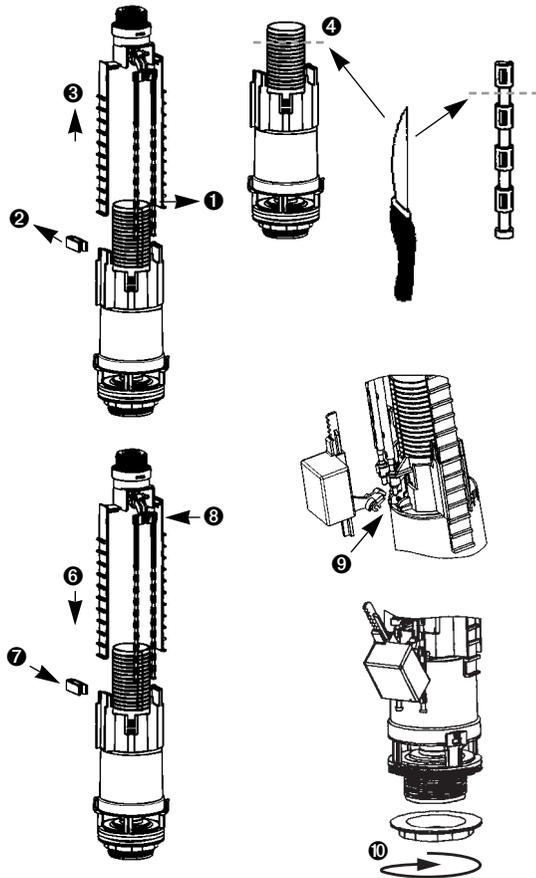


		Height of cistern H	
		Diameter D of hole in lid from 18 to 38 mm	Diameter D of hole in lid from 38 to 44 mm
Stirrup adjusting notch	10*	293 to 310	312 to 329
	9*	308 to 325	327 to 344
	8*	324 to 341	343 à 360
	7	339 to 356	358 to 375
	6	354 to 371	374 to 391
	5	370 to 387	389 to 406
	4	385 to 402	405 to 422
	3	400 to 417	420 to 437
	2	415 to 432	436 to 453
	1	430 to 447	451 to 468

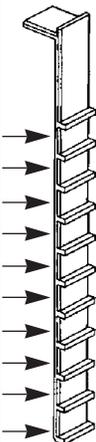

Stirrup notch	Overflow	Pulls
10	Cut between I and J	Cut
9	Cut between F and G	at 50 mm
8	Cut between C and D	from base


II - INSTALLATION

Position the mechanism in the cistern and attach it with the nut (h).

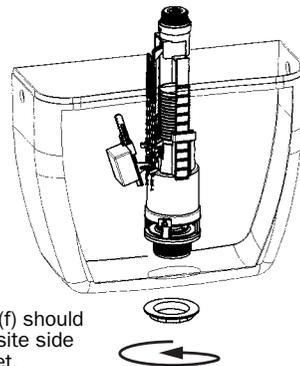


NB: The small float (f) should be on the opposite side to the water inlet.

III - ASSEMBLY OF CISTERN TANK

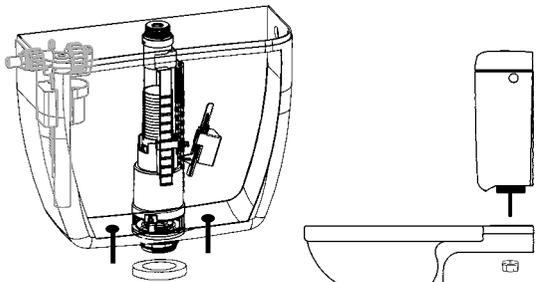


- 1 Attach the screws to the bottom of the cistern (see stack of parts indicated below)
- 2 Position the foam seal on the nut (h)
- 3 Position the cistern on the toilet bowl and attach it with the wing nuts

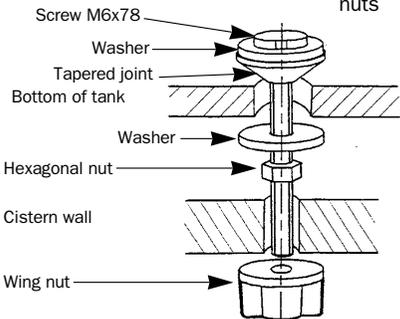

V - INSTALLING THE BUTTON


- 1 Once you have finished adjusting, make sure that the gray collar (c) is unscrewed entirely.
- 2 Fit the lid
- 3 If the lid hole (D) is ≥ 38 mm, remove the rose (b)
- 4 Position the button on the lid and screw down until it locks.

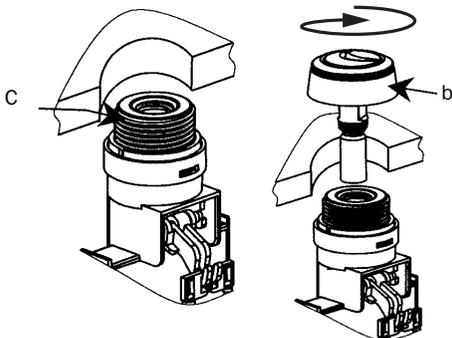

IV - ADJUSTMENT OF HALF FLUSH

First connect your float valve to the water system, open the stop valve and adjust the Full flush level using the float valve (see on back).

NB: the maximum water level should be 20 mm below the overflow (m).

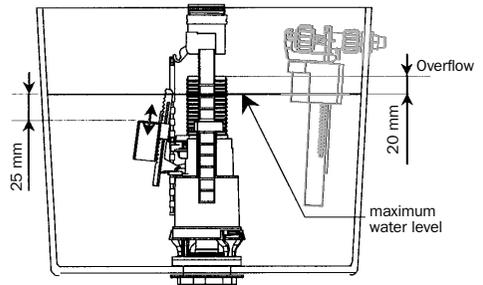


- 1 Fill the cistern to the maximum level (as indicated above)
- 2 Slide the small float (f) along the gray rocker (e) so that it is 25 mm at least below the water level.

NB: The more you depress the small float, the less flushing water you will have (minimum possible 3 liters).

VI - MAINTENANCE

Replacement of the seal


- 1 Open the cistern and turn the mechanism a quarter turn to separate it from the plug
- 2 Remove the seal attaching clip
- 3 Replace the seal
- 4 Fit the clip then relocate the mechanism, locking it on the plug
- 5 Close the cistern making sure that the control button is correctly assembled (see § V)

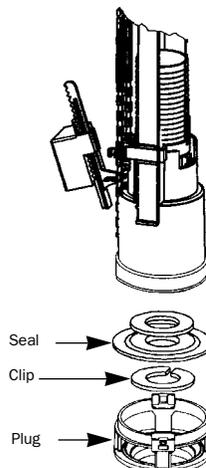

INSTALLING THE FLOAT VALVE

ROBECO 06 and STANDARD 15 EL


- 1 Install the valve
- 2 Attach it with the nut
- 3 Connect to the water supply
- 4 Adjust the water level using the adjusting screw (15 EL) or by bending the rod (06).

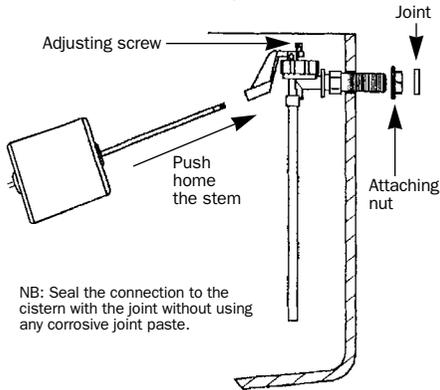

NB: Seal the connection to the cistern with the joint without using any corrosive joint paste.

COMPACT 95L


- 1 Install the valve
- 2 Attach it with the nut
- 3 Connect to the water supply
- 4 Adjust the water level using the adjusting screw.

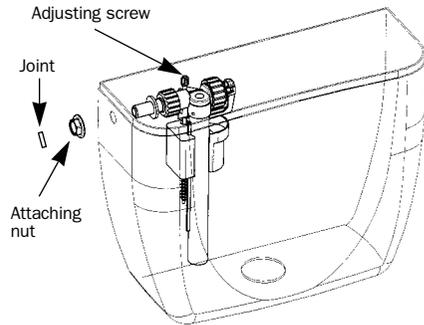

NB: Seal the connection to the cistern with the filter joint without using any corrosive joint paste.


COMPACT 99B and HANDY 93B

- 1 Install the valve
- 2 Attach it with the nut
- 3 Connect to the water supply
- 4 Adjust the water level using the adjusting screw.

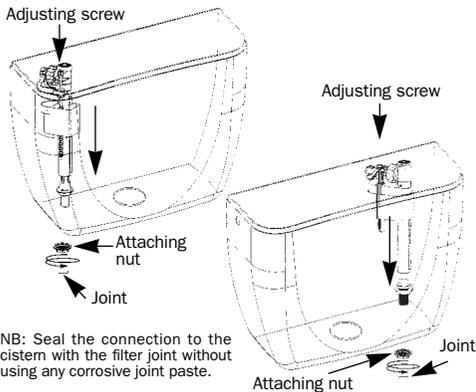

NB: Seal the connection to the cistern with the filter joint without using any corrosive joint paste.

MAINTENANCE (95L & 99B)

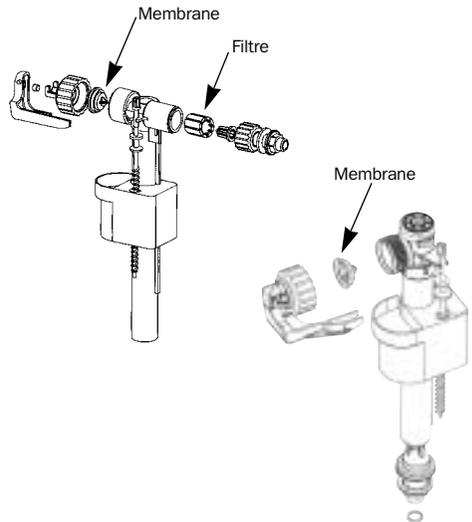

SIAMP

Monaco

4, quai Antoine 1^{er} - BP 219 - MC 98007 MONACO Cedex

Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04 - E-mail: contact@siamp.com