


SIAMP

Monaco


GB

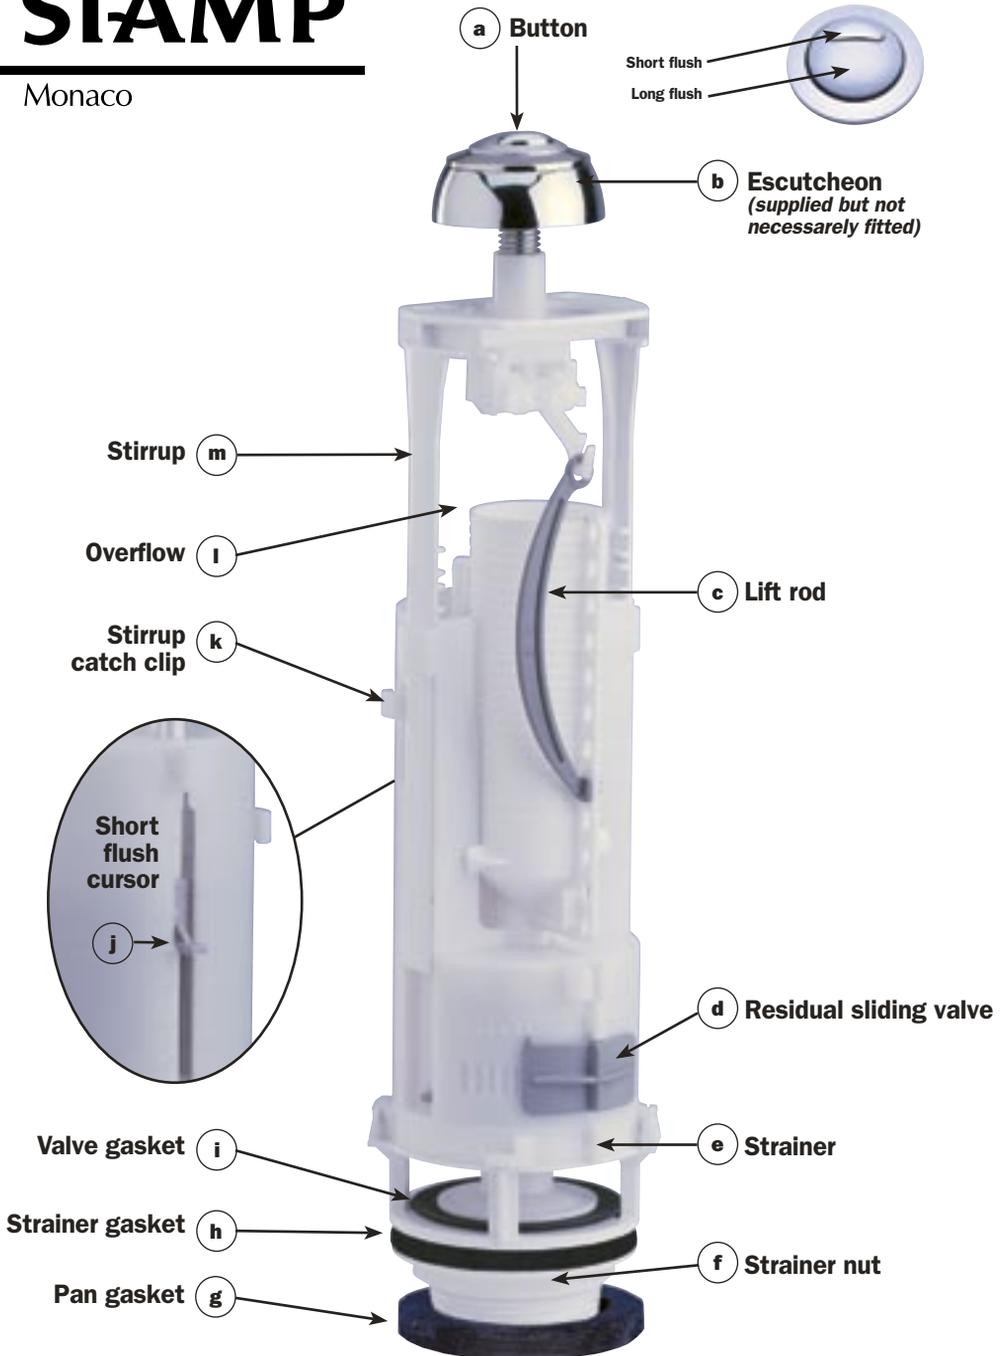


OPTIMA 49

I - INSTALLATION



Position the mechanism in the cistern and secure it in place with the nut (f)

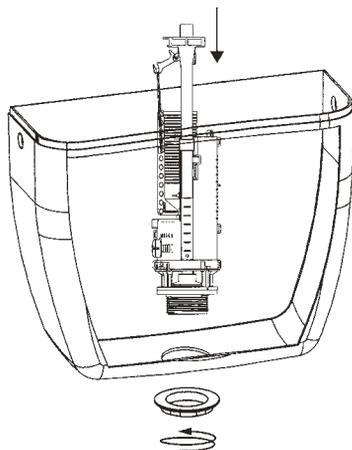

II - ASSEMBLING BOWL AND CISTERN

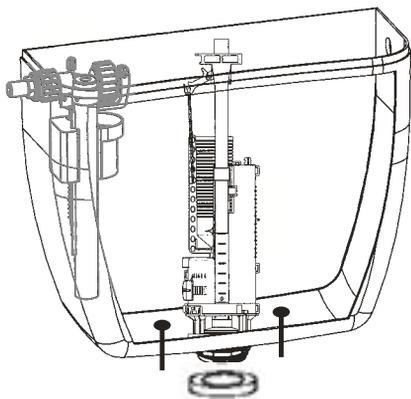


- 1 Fix screws at the bottom of the cistern (see order of parts below)
- 2 Position the latex foam gasket on the nut (f)
- 3 Position the cistern on the bowl and secure it with wing nuts

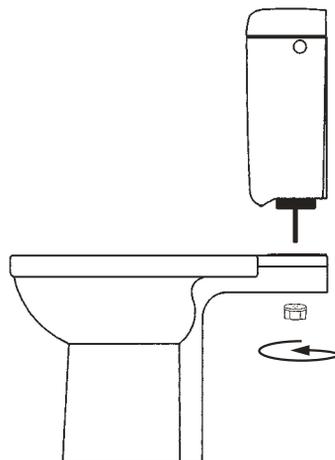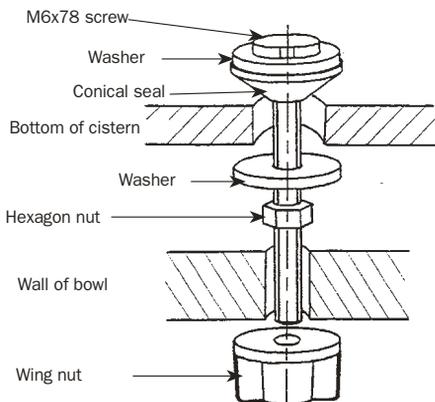


III - INSTALLATION OF BUTTON

- 1 Once the set-up has been completed, put on the lid on the cistern
- 2 If the hole in the lid (D) is > 38 mm and < 45 mm, remove the escutcheon (b)
- 3 Position the button on the lid and screw until tight.

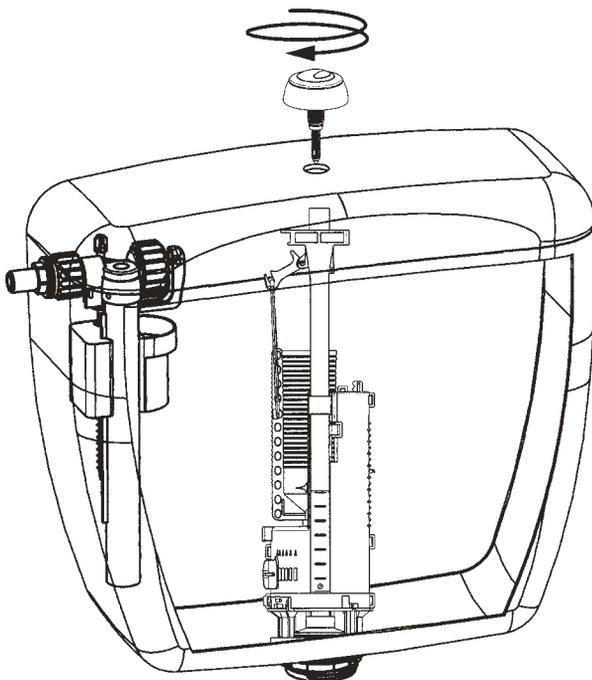

IV - MAINTENANCE

Changing the valve gasket

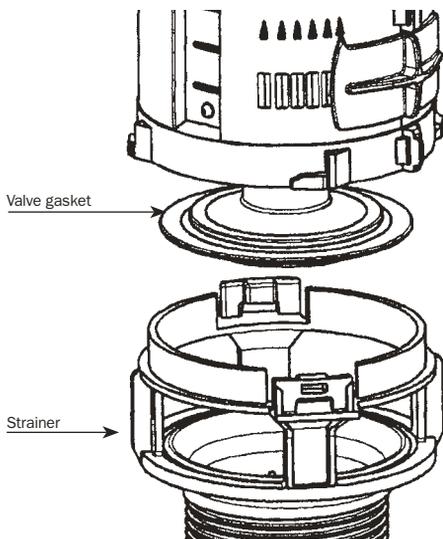


- 1 After having opened the cistern, turn the mechanism 90° to separate it from its strainer
- 2 Change the valve gasket
- 3 Reposition the mechanism, locking it into the strainer
- 4 Close the cistern again.

INSTALLING THE FLOAT VALVE


ROBECO 06 and STANDARD 15EL

- 1 Position valve
- 2 Fasten with nut
- 3 Connect to water supply
- 4 Adjust water level with the adjustment screw (15 EL) or by bending the rod (06)

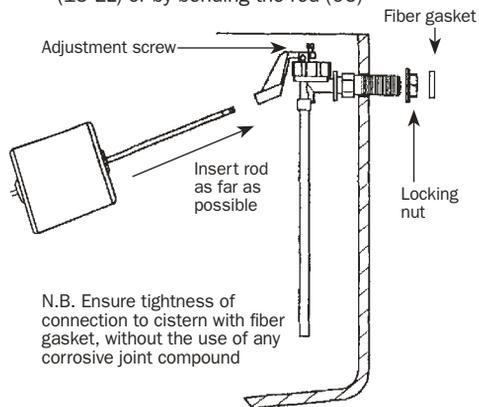


COMPACT 95L

- 1 Position valve
- 2 Fasten with nut
- 3 Connect to water supply
- 4 Adjust water level with the adjustment screw

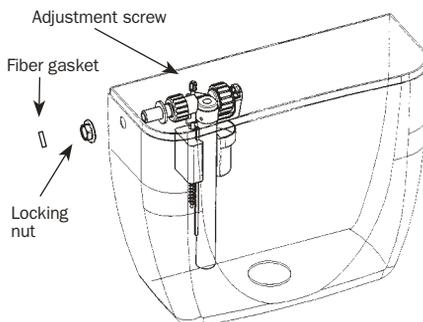

COMPACT 99B and HANDY 93B

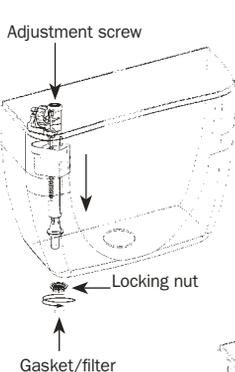


N.B. Ensure tightness of connection to cistern with filter gasket.

WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet valve.

SIAMP will be not responsible in case these warnings are not respected.

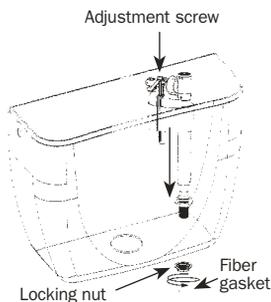

MAINTENANCE (95L & 99B)

