


# SIAMP

Monaco

GB

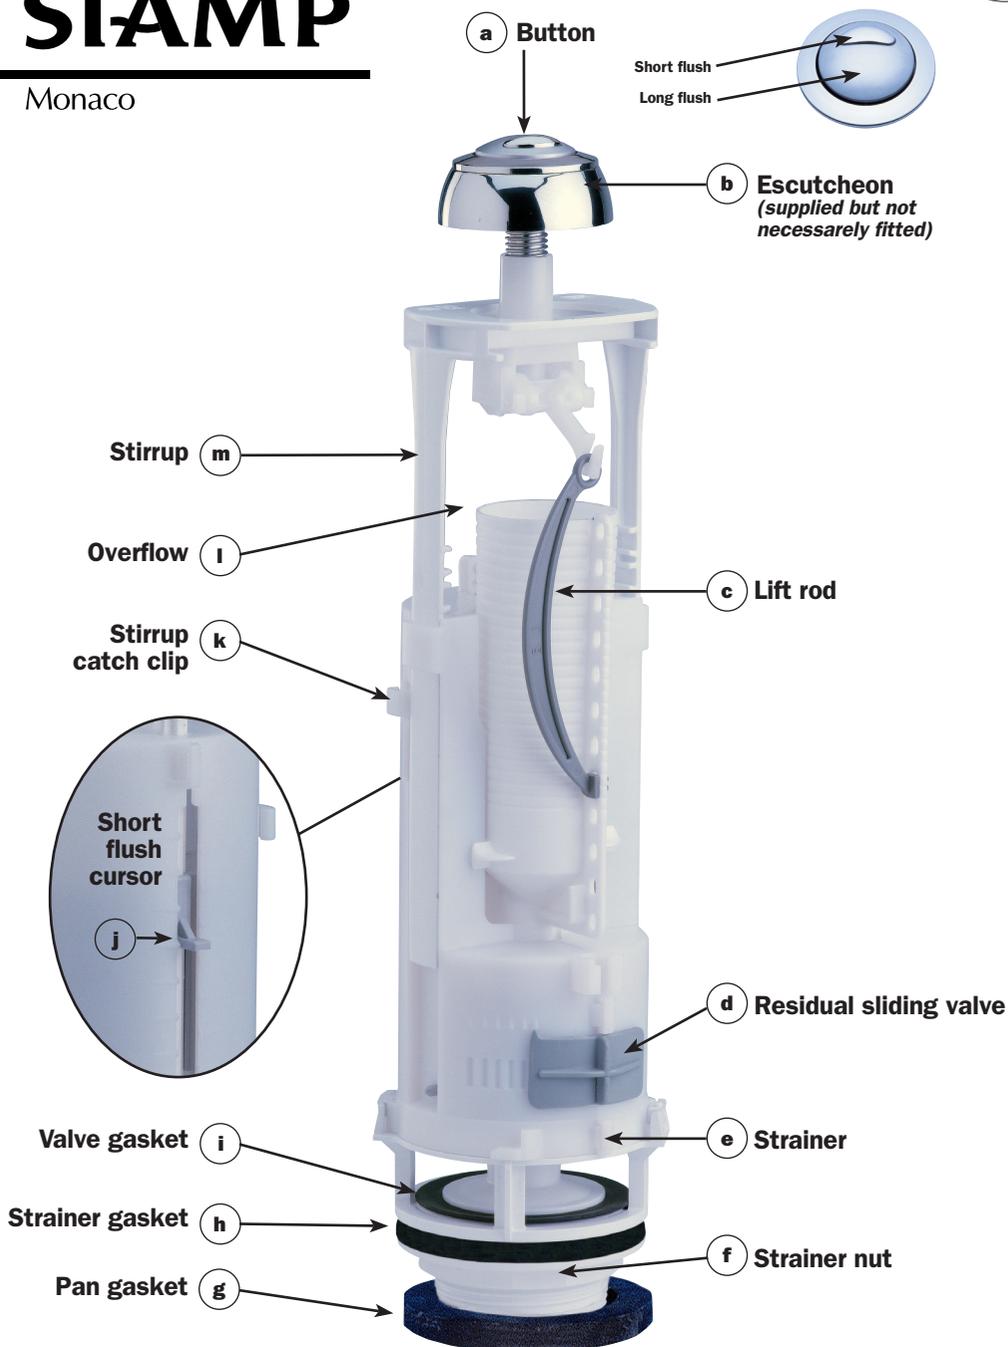


# OPTIMA 49


## I - INSTALLATION

Position the mechanism in the cistern and secure it in place with the nut (f)  
Manually screw the flush valve nut (f) until it is in contact with the ceramic.  
If necessary give an extra quarter turn (maximum) with the appropriate spanner.



NB : Excessive tightening can damage the mechanism and would not be covered by the guarantee.

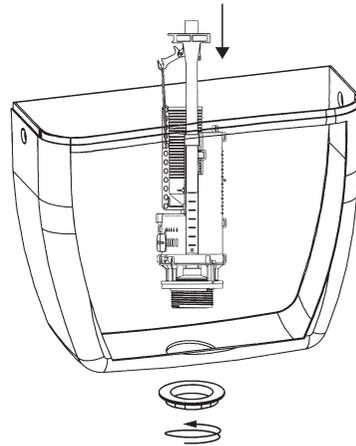

## II - ASSEMBLING BOWL AND CISTERN

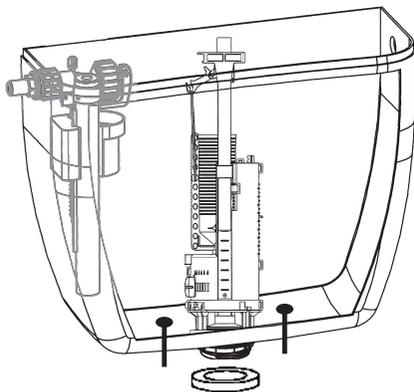


- 1 Fix screws at the bottom of the cistern (see order of parts below)
- 2 Position the latex foam gasket on the nut (f)
- 3 Position the cistern on the bowl and secure it with wing nuts

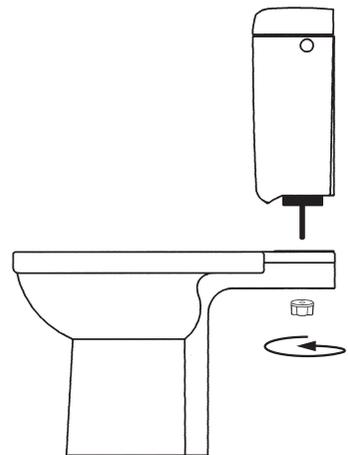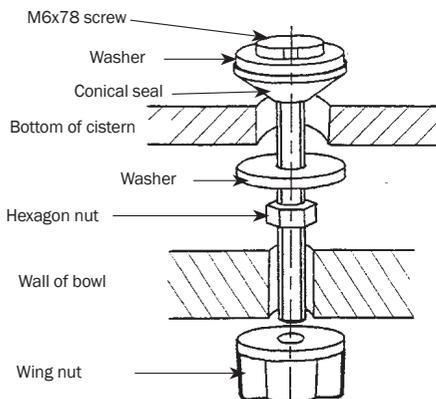


### III - INSTALLATION OF BUTTON

- 1 Once the set-up has been completed, put on the lid on the cistern
- 2 If the hole in the lid (D) is  $> 38$  mm and  $< 45$  mm, remove the escutcheon (b)
- 3 Position the button on the lid and screw until tight.

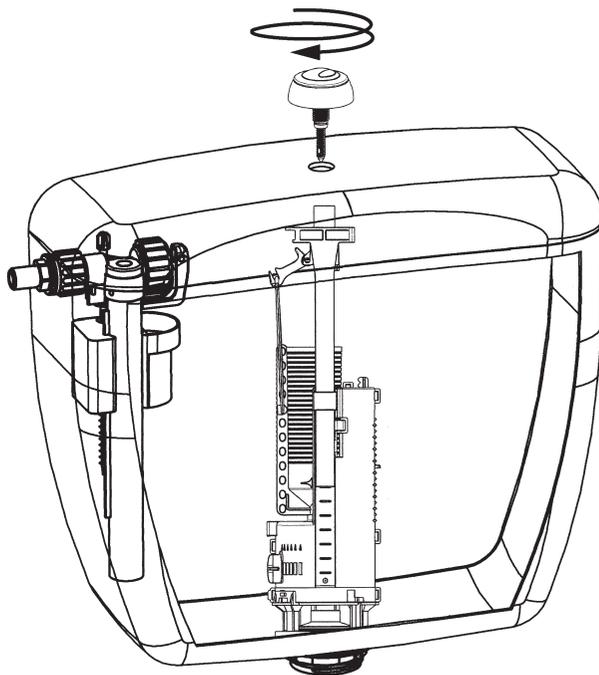

### IV - MAINTENANCE

Changing the valve gasket

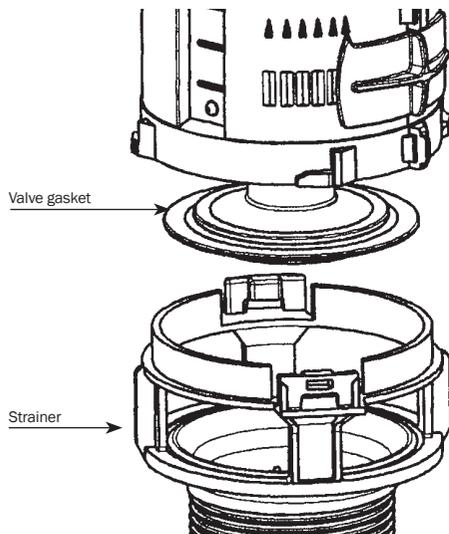


- 1 After having opened the cistern, turn the mechanism  $90^\circ$  to separate it from its strainer
- 2 Change the valve gasket
- 3 Reposition the mechanism, locking it into the strainer
- 4 Close the cistern again.

## INSTALLING THE FLOAT VALVE

### ROBECO 06 and STANDARD 15EL

- ① Position valve
- ② Fasten with nut
- ③ Connect to water supply
- ④ Adjust water level with the adjustment screw (15 EL) or by bending the rod (06)

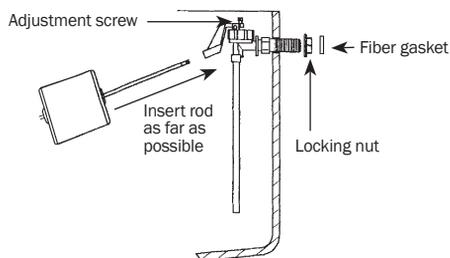


Manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum). N.B.: Excessive tightening can damage the mechanism and would not be covered by the guarantee.

Ensure tightness of connection to cistern with filter gasket.

#### WARNINGS:


- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet

### COMPACT 99B and HANDY 93B

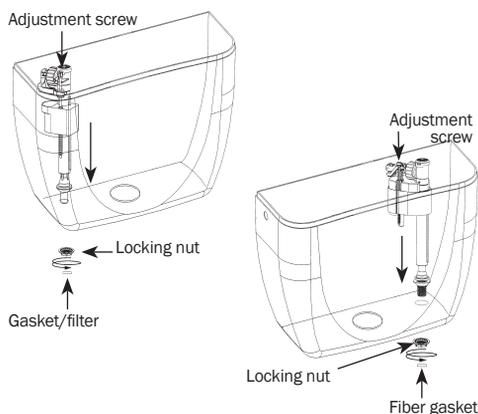

### COMPACT 95L

- ① Position valve
- ② Fasten with nut
- ③ Connect to water supply
- ④ Adjust water level with the adjustment screw

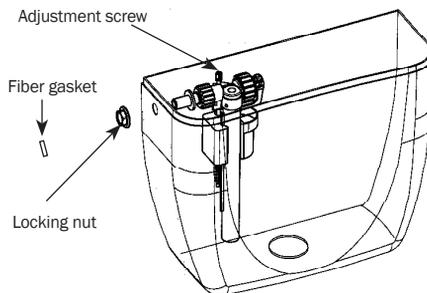


valve.

**SIAMP will be not responsible in case these warnings are not respected.**

N.B.: In the tank, do not use any anti limescale products or chlorine based products which could damage the mechanism and would not be covered by the guarantee. For the maintenance of your unit, we recommend you to use the MULTICARE WC overall maintenance system.

### MAINTENANCE (95L & 99B)

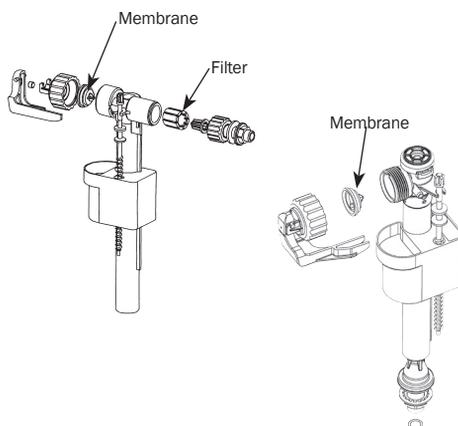

# SIAMP

Monaco  
SIAMP UK LIMITED

SIAMP UK LIMITED  
SIAMP HOUSE - UNIT 2  
7 Monsall Road - Newton Heath  
MANCHESTER  
M40 8FY