


CENTER

STORM 33A + 99B Single Flush Component Pack

Assembly instructions


P00992

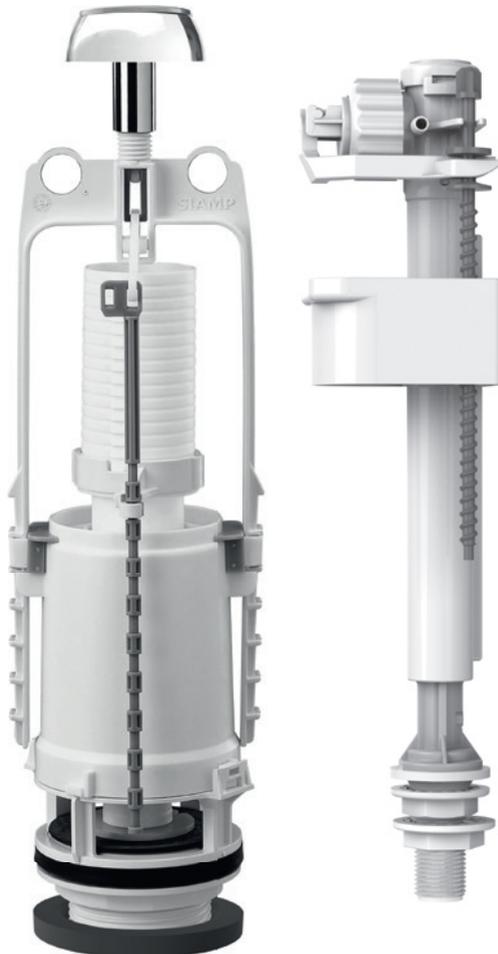

 **WRAS**
APPROVED PRODUCT

OUTLET VALVE INSTRUCTIONS

1. Preparing the mechanism

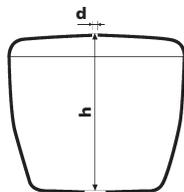


Measure the cistern
 - **h**: (from the top of the lid to the inside base of the cistern)
 - **d**: (diameter of the hole in the lid)


⚠ Check the position of the stirrup

If the stirrup (K) is correctly positioned on the basis of the below table, proceed to step 8. Otherwise, carry out all of the following steps:

- 1 Unclip the lift rod (C)
- 2 Remove the stirrup, by pressing on the two catch clips (D)
- 3 Cut the overflow (J) if necessary according to the table
- 4 Reposition the stirrup in its seat and slide it to the required position (desired setting notch number visible)
- 5 Clip lift rod (C) back into the hole of the overflow (D) which has the same number as that of the setting notch
- 6 Unscrew the strainer nut (F)

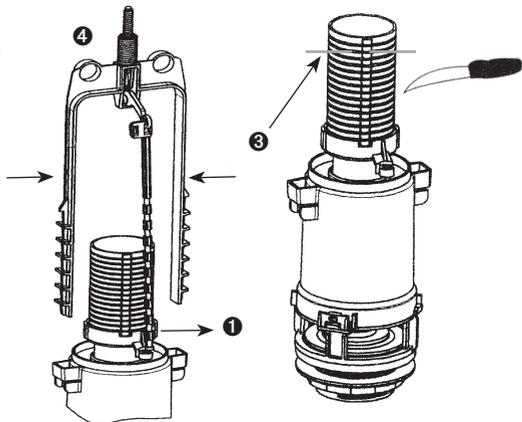

		Height h of cistern	
		Diameter d of hole in lid 16 to 36 mm and 43 to 50 mm	Diameter d of hole in lid 37 to 42 mm
Position (P)	1*	307 to 325	325 to 343
	2*	326 to 340	344 to 358
	3	341 to 355	359 to 373
	4	356 to 370	374 to 388
	5	371 to 385	389 to 403
	6	386 to 400	404 to 418

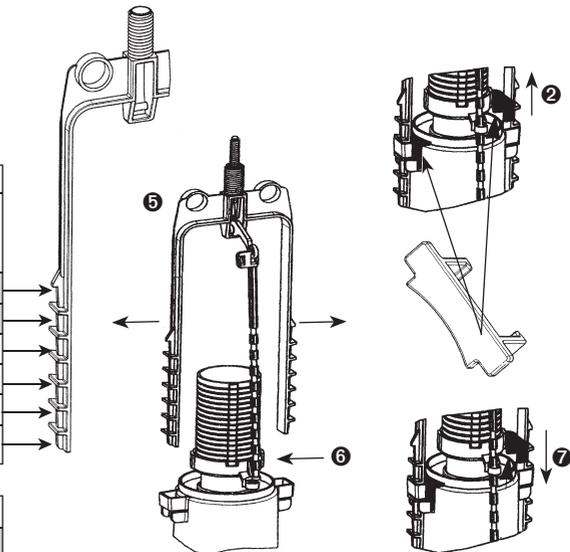

Stirrup notch	Cut on overflow tube
1	F mark visible
2	C mark visible

2. Installation


Position the mechanism in the cistern and secure it in place with the nut (F)

Manually screw the flush valve nut (F) until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum) with the appropriate spanner.

NB : Excessive tightening can damage the mechanism and would not be covered by the guarantee.



3. Assembling bowl and the cistern

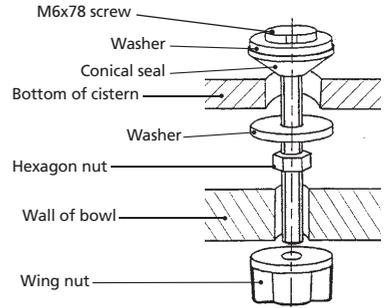


- ❶ Fix screws at the bottom of the cistern (see order of parts below)
- ❷ Position the latex foam gasket on the nut (F)
- ❸ Position the cistern on the bowl and secure it with wing nuts

4. Setting water level


After having connected your inlet valve to the water supply, open the tap and set the level of the long flush using the inlet valve (see overleaf).

Note: The max. water level should be 20 mm lower than the overflow tube (J).

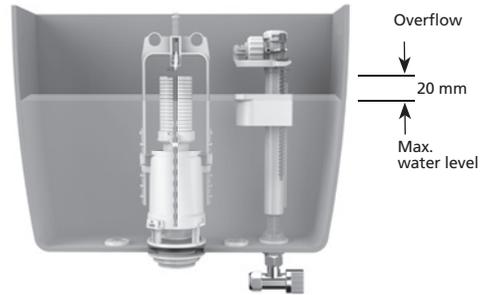


5. Installation of button

- ❶ Once the set-up has been completed, put on the lid on the cistern
- ❷ If the hole in the lid (d) is > 37 mm and < 42 mm, remove the escutcheon (B)
- ❸ Position the button on the lid and screw until tight without pushing the central part of the button

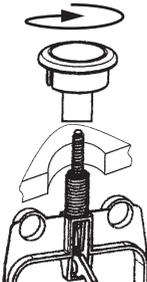

6. Changing the seal



- ❶ After having opened the cistern, turn the mechanism 90° to separate it from its strainer
- ❷ Remove the retaining clip
- ❷ Change the valve gasket
- ❸ Reposition the mechanism, locking it into the strainer
- ❹ Close the cistern again with the right button position (part 5)

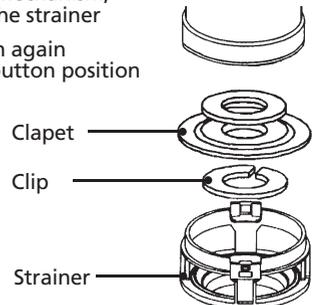


Changing the valve gasket

INLET VALVE INSTRUCTIONS


1. Inlet installation

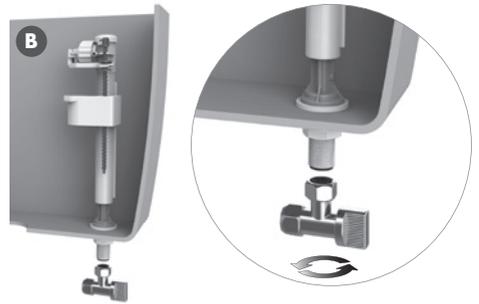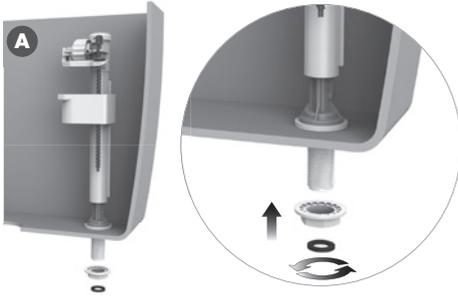

2. Water level adjustment

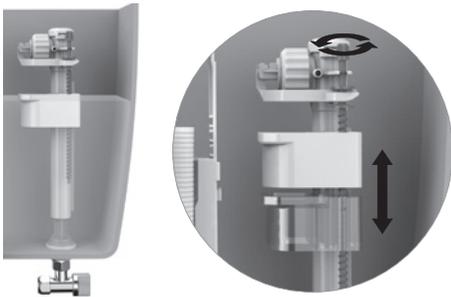

3. Maintenance

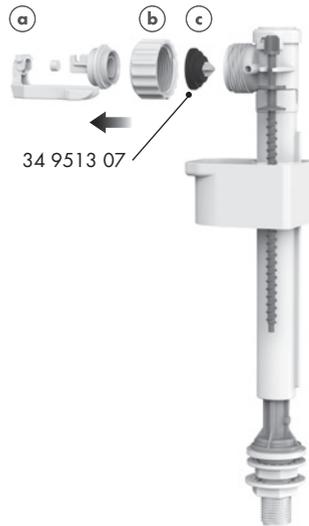

WARNINGS:

- An approved single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.
- Do not over tight in any case.
- Do not use any sealing paste and/or compound in any case

Center will be not responsible in case these warnings are not respected.

Ref.: 50 7613 00B

CENTER

Wolseley UK Ltd, Harrison Way, Leamington Spa,
Warwickshire CV31 3HH. UK
Technical helpline: 0161 681 2120
www.wolseley.co.uk