


# SIAMP

Monaco

GB

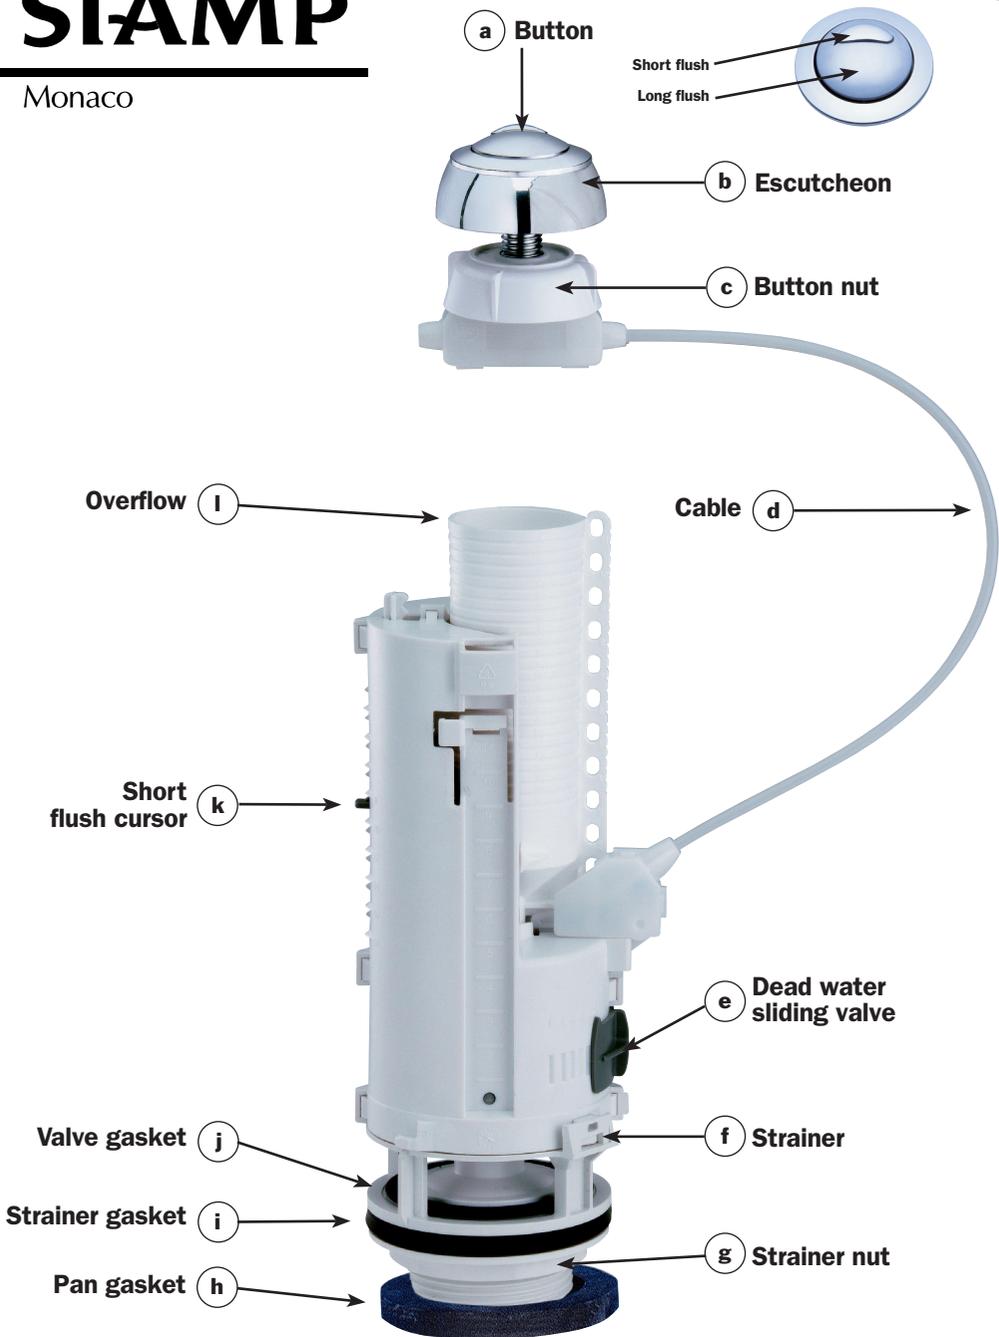


# OPTIMA 50


## I - INSTALLATION

Position the mechanism in the cistern and secure it in place with the nut (g)  
Manually screw the flush valve nut (g) until it is in contact with the ceramic.  
If necessary give an extra quarter turn (maximum) with the appropriate spanner.



NB : Excessive tightening can damage the mechanism and would not be covered by the guarantee.

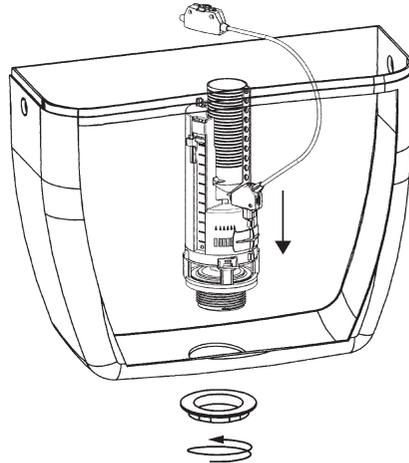

## II - ASSEMBLING BOWL AND CISTERN

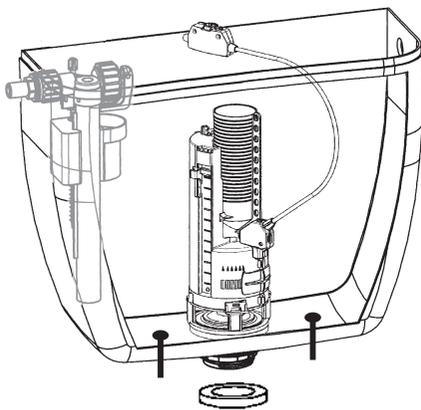


- 1 Fix screws at the bottom of the cistern (see order of parts below)
- 2 Position the latex foam gasket on the nut (g)
- 3 Position the cistern on the bowl and secure it with wing nuts

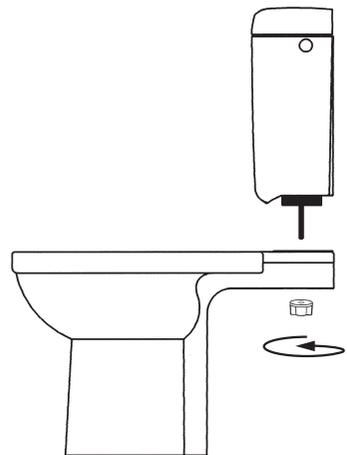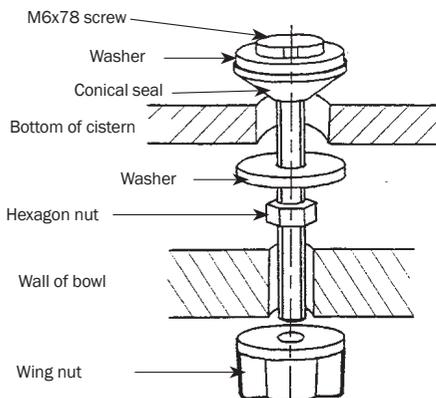


### III - INSTALLATION OF BUTTON

- 1 Once the set-up has been completed, place button (a) on lid and screw button nut (c), (if the hole in the lid (D) is > 38 mm and < 45 mm, remove the escutcheon (b))
- 2 Clip cable case
- 3 Place lid back on top of cistern

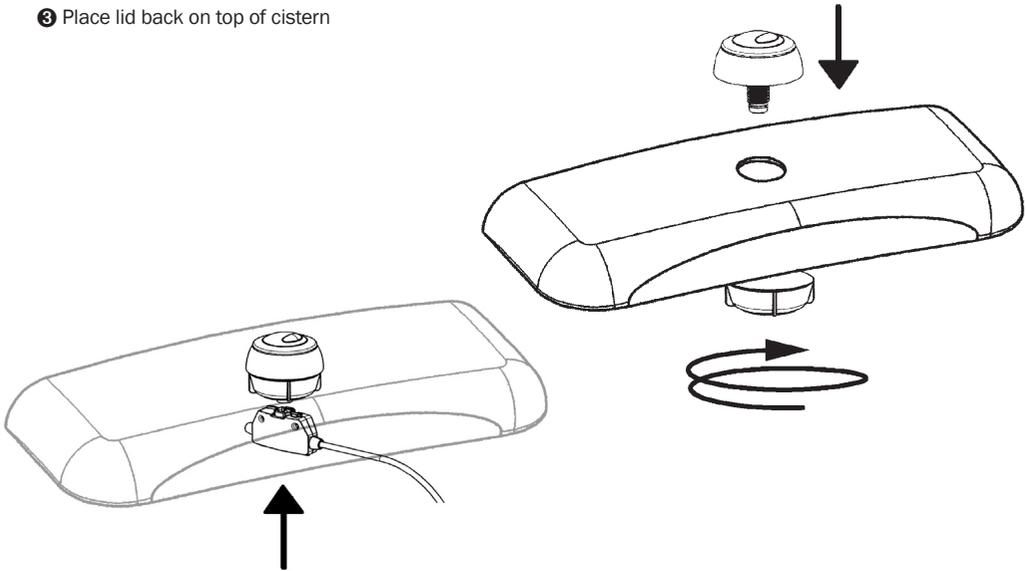

### IV - MAINTENANCE

Changing the valve gasket

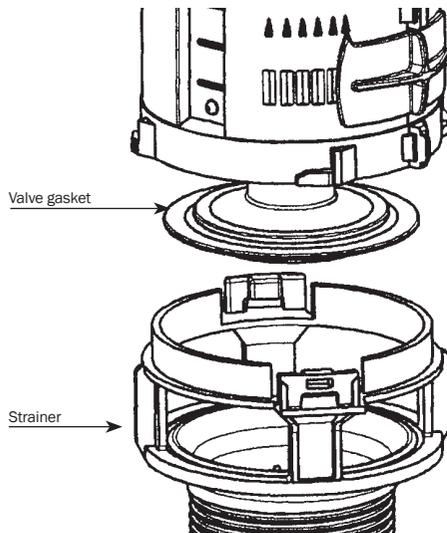


- 1 After having opened the cistern, turn the mechanism 90° to separate it from its strainer
- 2 Change the valve gasket
- 3 Reposition the mechanism, locking it into the strainer
- 4 Close the cistern again.

## INSTALLING THE FLOAT VALVE

### ROBECO 06 and STANDARD 15EL

- 1 Position valve
- 2 Fasten with nut
- 3 Connect to water supply
- 4 Adjust water level with the adjustment screw (15 EL) or by bending the rod (06)

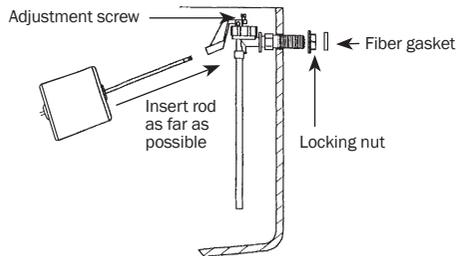


Manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum). N.B.: Excessive tightening can damage the mechanism and would not be covered by the guarantee.

Ensure tightness of connection to cistern with filter gasket.

#### WARNINGS:


- 1 - Do not overtighten in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet

### COMPACT 95L and HANDY 93B

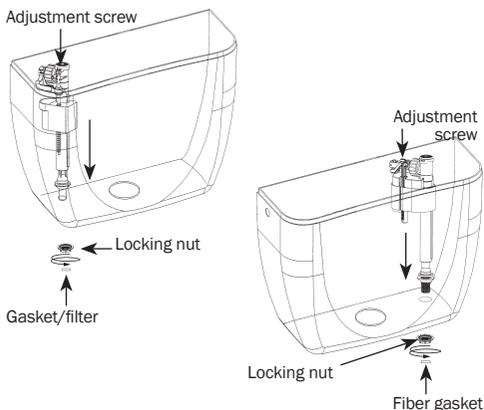

### COMPACT 95L

- 1 Position valve
- 2 Fasten with nut
- 3 Connect to water supply
- 4 Adjust water level with the adjustment screw

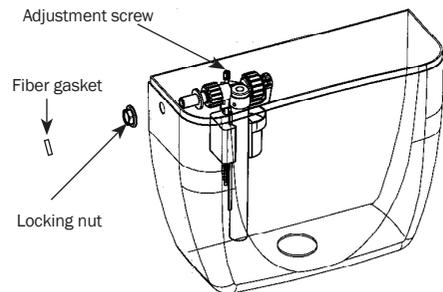


valve.

**SIAMP will be not responsible in case these warnings are not respected.**

N.B.: In the tank, do not use any anti limescale products or chlorine based products which could damage the mechanism and would not be covered by the guarantee. For the maintenance of your unit, we recommend you to use the MULTICARE WC overall maintenance system.

### MAINTENANCE (95L & 99B)

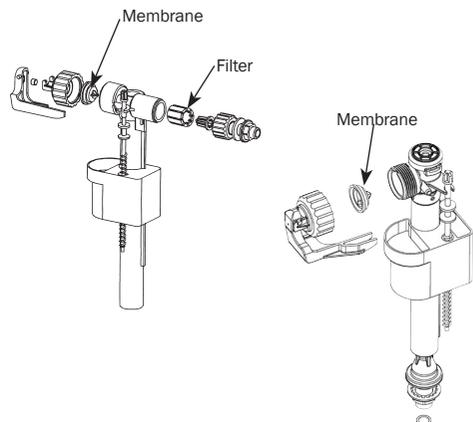

**SIAMP**  
Monaco

4, quai Antoine 1<sup>er</sup> - BP 219 - MC 98007 MONACO Cedex  
Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04 - E-mail: [contact@siamp.com](mailto:contact@siamp.com)

SIAMP UK LIMITED - UNIT 4E WILSONS PARK - MONSALL ROAD - NEWTON HEATH  
MANCHESTER M40 8WN - UNITED KINGDOM - PHONE: +44.1612051200