


UNISIPHON


INSTRUCTIONS

Water level adjustment

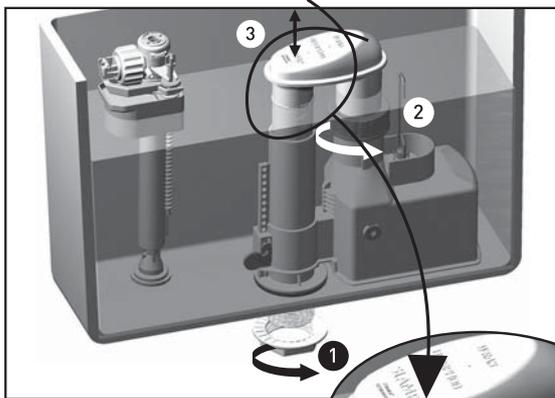


Adjust top mark to cistern water level

Flush volume adjustment

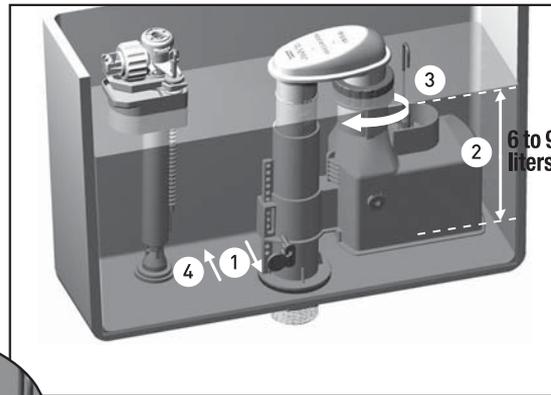

- 2 • turn off inlet valve,
- flush,
- Fill in cistern using a graduated cup in order to know flush water volume,
- Whenever flush water volume is not enough lower body level, if it is too much lift it.

Important width cistern

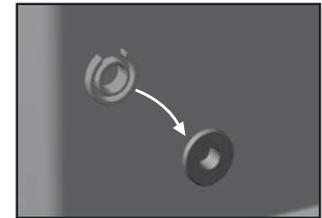

- ⚠ • Backnut tightening torque < 15 Nm ⚠ • Do not use any lubricant or grease

Unisiphon top must be below any cistern opening that could allow water to run out of it, or cistern must be equipped with an overflow.