


SIAMP

GB

Monaco

INLET VALVES ASSEMBLY INSTRUCTIONS

AS/NZS 3500.1

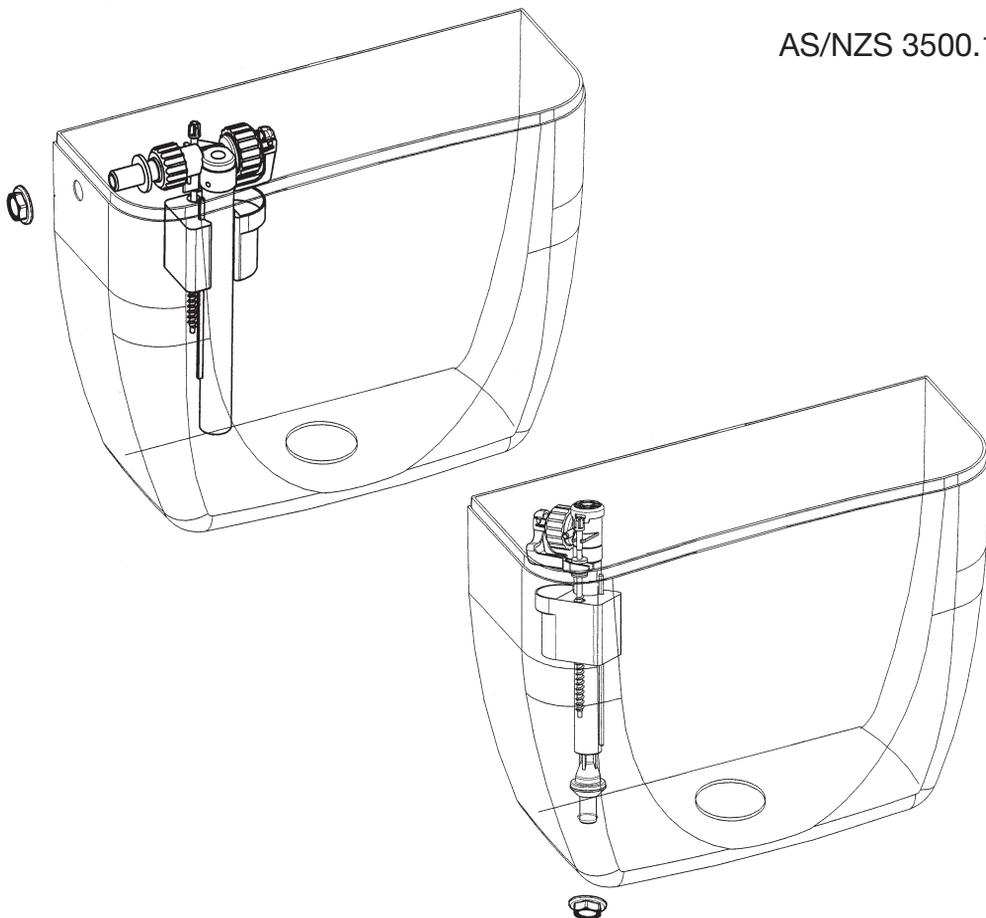

SIAMP Monaco : 4, quai Antoine 1^{er} / BP 219 / MC 98007 MONACO Cedex
Fax : 00 377 92 05 71 04 - E-mail: contact@siamp.com - Web : www.siamp.com

SIAMP Ltd, Unit C2, Meadowbank Business Park,
Tweedale Way, Hollinwood, Oldham, Greater Manchester, OL9 8EH
Tel: 0161 681 2120 - Fax : 0161 681 2130 - Email : info@siamp.co.uk
Technical support : aftersales@siamp.co.uk W : www.siamp.co.uk

On 99B and 95L inlets, an approved single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.




Do not use any sealing paste




ROBECO 06 and STANDARD 15 EL

- 1 Place inlet valve through inlet hole
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with adjusting screw.

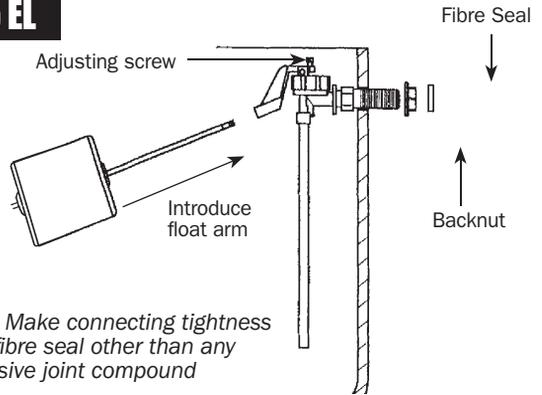

N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound

COMPACT 95L/93L

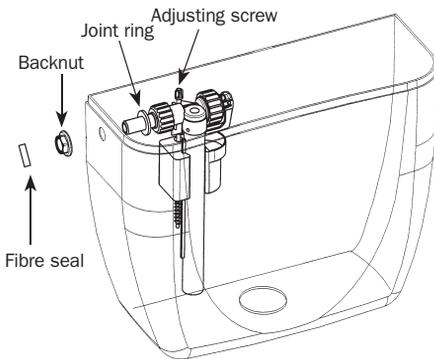


- 1 Place inlet valve through inlet hole
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with grey adjusting screw.


N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound

MAINTENANCE for 95L

- 2 Opening the inlet

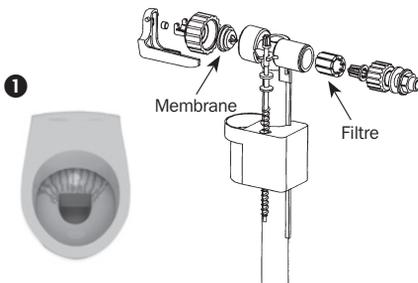


- 3 Rinse the filter and membrane. Change the membrane if damaged.

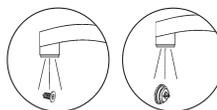


ref. 34 9513 01

- 4 Δ Replace carefully the membrane

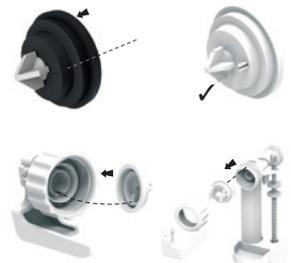

COMPACT 99B

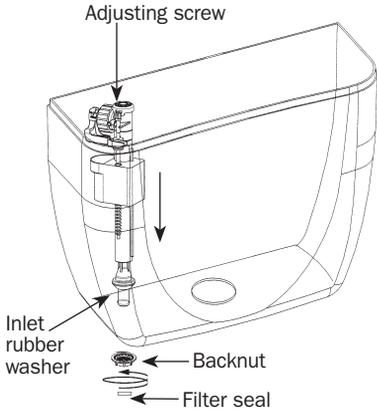


- 1 Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with grey adjusting screw.

N.B. Ensure tightness of connection to cistern with filter gasket.

An approved single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.

COMPACT 99B with telescopic tube

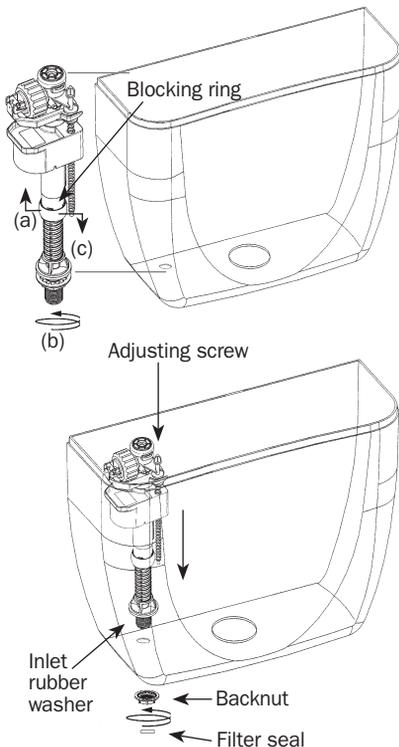

- 1 Adjust telescopic tube
 - (a) raise the grey blocking ring
 - (b) screw or unscrew the graduated tube in way so that the inlet top not exceed the top of the tank
 - (c) position back the grey ring
- 2 Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- 3 Secure with backnut
- 4 Connect the supply
- 5 Adjust water level with grey adjusting screw.

N.B. Ensure tightness of connection to cistern with filter gasket.

WATER LEVEL ADJUSTMENT

When adjusting water level, make sure the overflow sticks out by a minimum of 20mm




MAINTENANCE for 99B


1




2 Opening the inlet

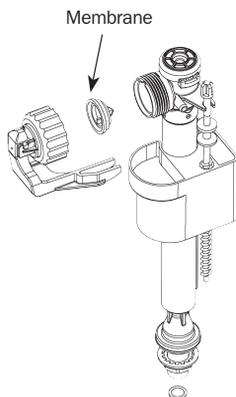

3 Rinse the filter and membrane. Change the membrane if damaged.

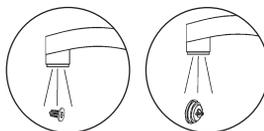

4 Replace carefully the membrane

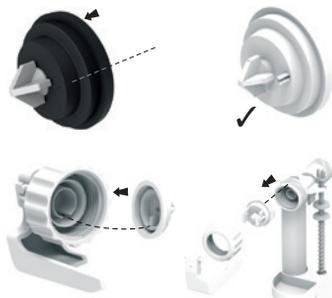

WARNING

For all inlet valves : manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum).

Excessive tightening can damage the valve and would not be covered by the guarantee. Ensure tightness of connection to cistern with filter gasket.

SIAMP will be not responsible in case these warnings are not respected.

In the tank, do not use any anti limescale products or chlorine based products which could damage the mechanism and would not be covered by the guarantee.