

Warning

Inlet Valve 99B

*In case of low pressure water supply
(< 1 bar or longer than 2 minutes to refill your tank)
you can increase the flow of water by removing the flow restrictor*



flow restrictor



1 *remove the flow restrictor*



2 *install the filter*