


# **INLET VALVES**


## **ASSEMBLY INSTRUCTIONS**

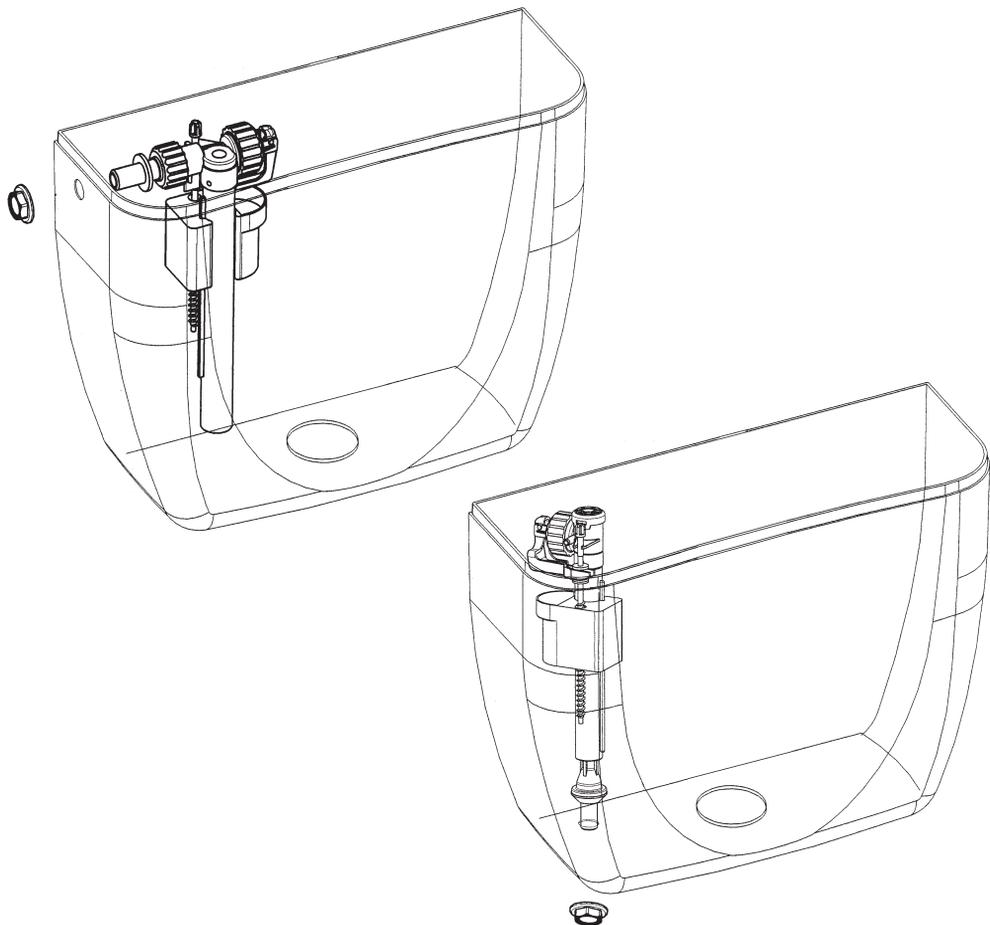

**WOLSELEY UK**  
**THE WOLSELEY CENTER - HARRISON WAY - SPA PARK**  
**ROYAL LEAMINGTON SPA - CV31 3HH**  
**TECHNICAL HELPLINE 0161 205 1200**

## ROBECO 06 and STANDARD 15 EL



- 1 Place inlet valve through inlet hole
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with adjusting screw.

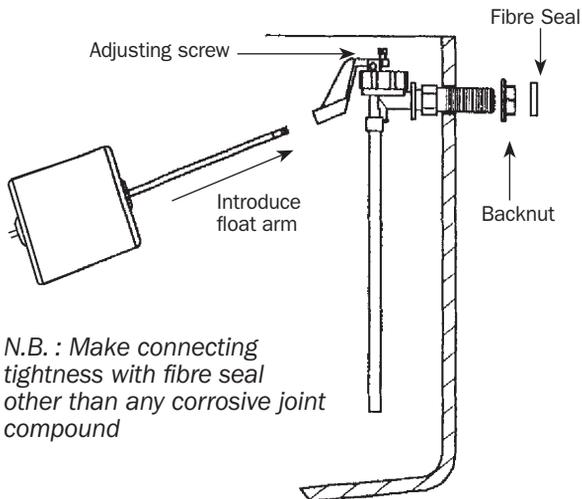

*N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound*

## COMPACT 95L/93L

## MAINTENANCE 95L

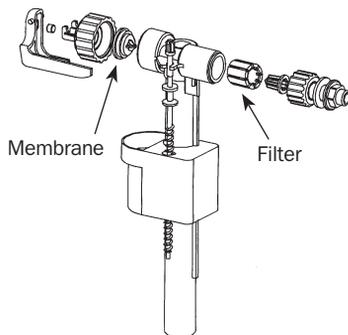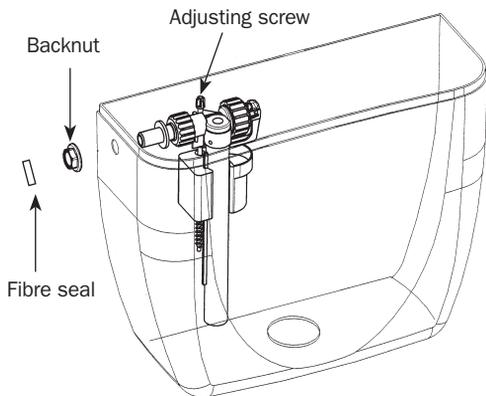


- 1 Place inlet valve through inlet hole
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with grey adjusting screw.

*N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound*

An approved single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.

## COMPACT 99B

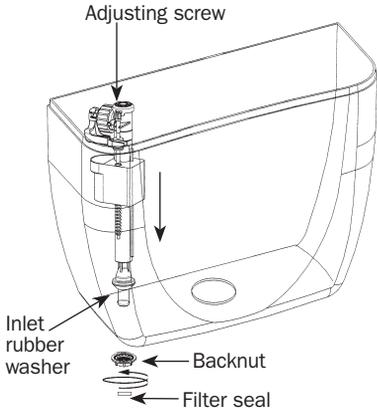

- ❶ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❷ Secure with backnut
- ❸ Connect the supply
- ❹ Adjust water level with grey adjusting screw.

*N.B. Ensure tightness of connection to cistern with filter gasket.*


### WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case

**SIAMP will be not responsible in case these warnings are not respected.**

An approved single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.

## COMPACT 99B with telescopic tube

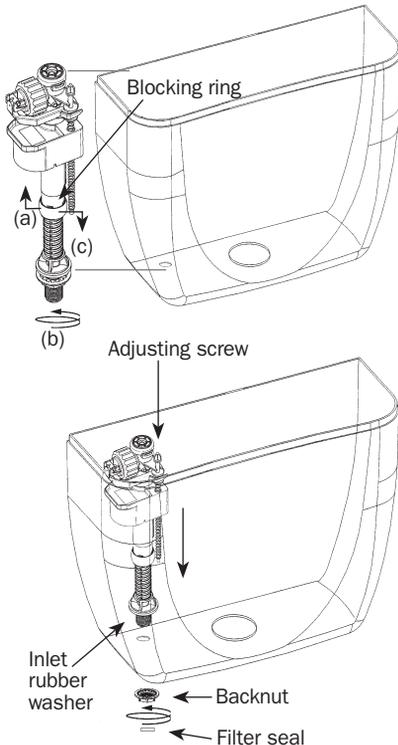

- ❶ Adjust telescopic tube
  - (a) raise the grey blocking ring
  - (b) screw or unscrew the graduated tube in way so that the inlet top not exceed the top of the tank
  - (c) position back the grey ring
- ❷ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❸ Secure with backnut
- ❹ Connect the supply
- ❺ Adjust water level with grey adjusting screw.


*N.B. Ensure tightness of connection to cistern with filter gasket.*

## MAINTENANCE

### WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case

Membrane

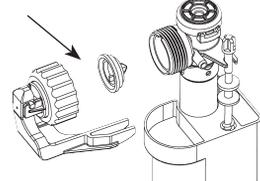


**SIAMP will be not responsible in case these warnings are not respected.**



## HANDY 93B

- 1 Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- 2 Secure with backnut
- 3 Connect the supply
- 4 Adjust water level with grey adjusting screw.

*N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound*

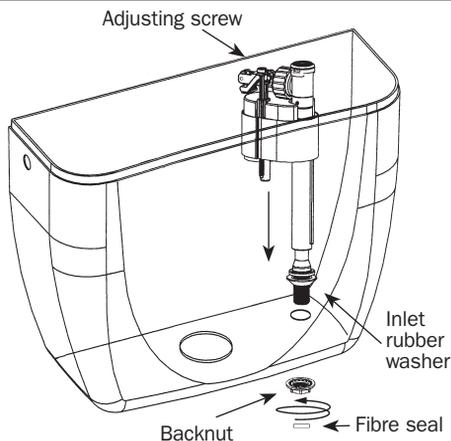

## HANDY 93B with telescopic tube

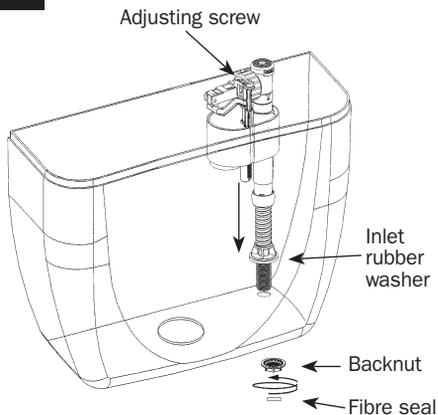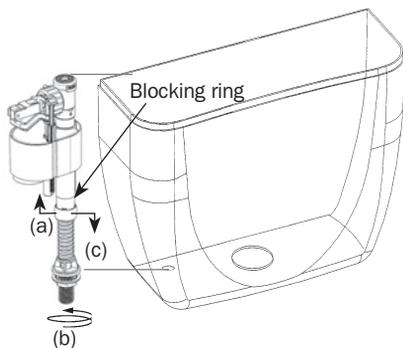

- 1 Adjust telescopic tube (a) raise the grey blocking ring, (b) screw or unscrew the graduated tube in way so that the inlet top not exceed the top of the tank, (c) position back the grey ring
- 2 Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- 3 Secure with backnut
- 4 Connect the supply
- 5 Adjust water level with grey adjusting screw.

*N.B. : Make connecting tightness with fibre seal other than any corrosive joint compound*

For all inlet valves : manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum).

N.B.: Excessive tightening can damage the valve and would not be covered by the guarantee. Ensure tightness of connection to cistern with filter gasket.

**SIAMP will be not responsible in case these warnings are not respected.**