


INSTALLATION INSTRUCTIONS




1. Remove damaged inlet.



2 Adjust the height of
new inlet.

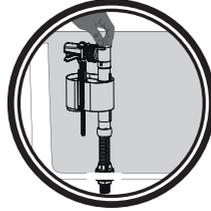

3. Install tightly new inlet.

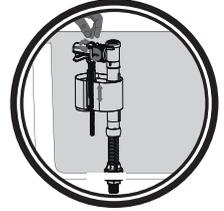

4. Adjust water level by
turning floating screw.

