



HOW TO ADJUST FLOATING VALVES 95L

537 cistern 6L

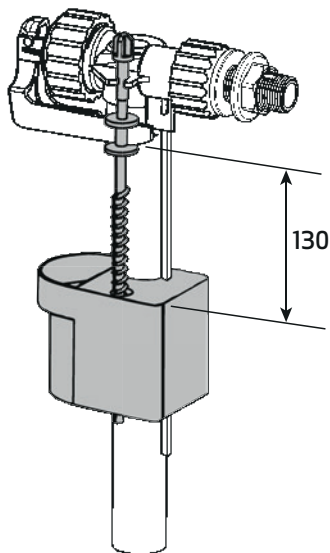

537 cistern 4L

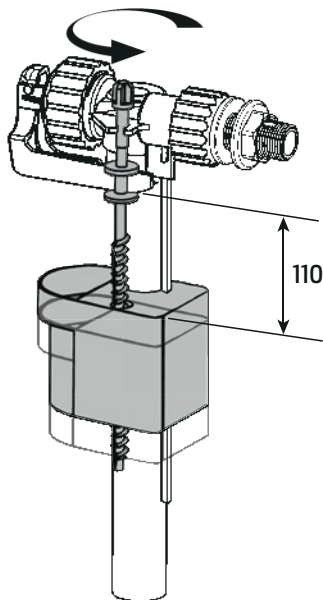

536 cistern 6L

