

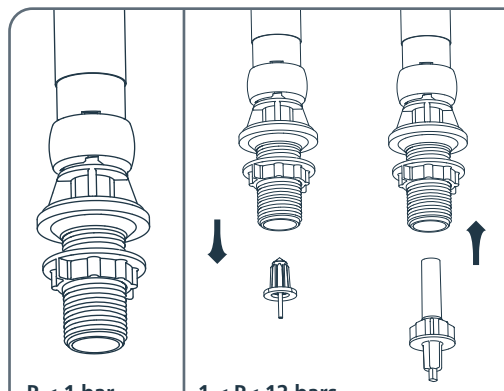
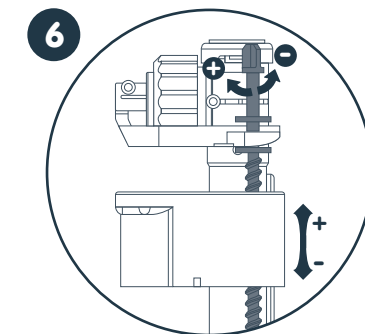
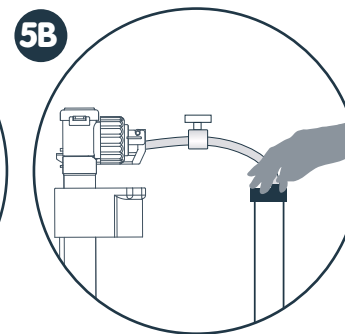
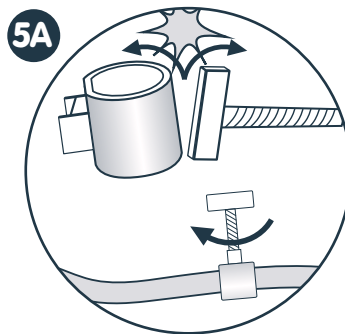
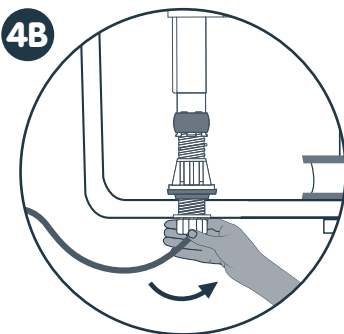
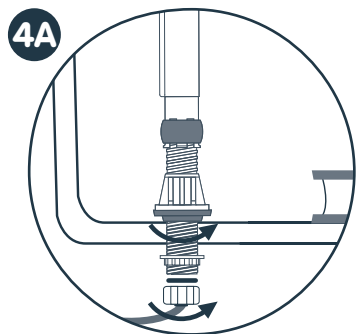
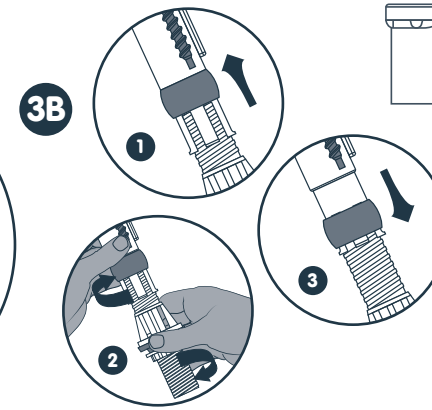
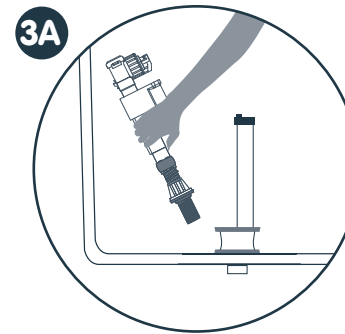
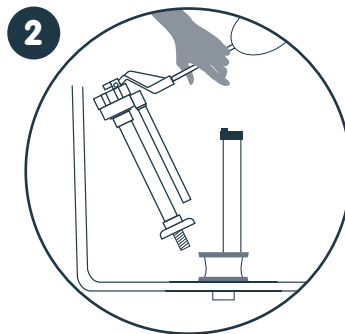
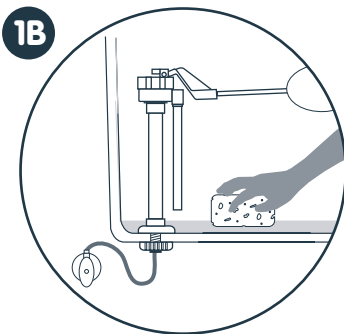


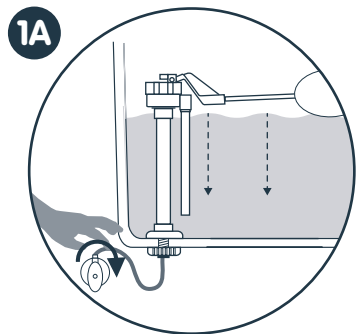

P < 1 bar

1 < P < 12 bars



Visser à la main l'écrou du robinet jusqu'au contact de la céramique. Si nécessaire visser d'un quart de tour supplémentaire (maxi) à l'aide de la clé spécifique. Un serrage excessif peut entraîner une détérioration du robinet qui ne serait pas couverte par la garantie. Effectuer l'étanchéité du raccordement au réservoir avec le joint fibre ou filtre, à l'exclusion de toute pâte à joint corrosive. Siamp ne pourrait être responsable en cas de dommages si ces précautions ne sont pas respectées.

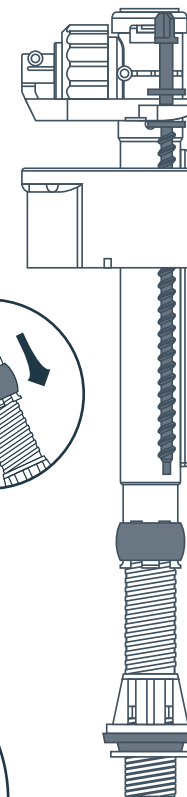

Manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum). Excessive tightening can damage the valve and would not be covered by the guarantee. Ensure tightness of connection to cistern with filter gasket. Do not use any sealing paste and/or compound in any case SIAMP will be not responsible in case these warnings are not respected.

MAINTENANCE

Membrane

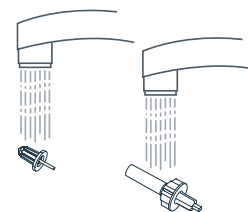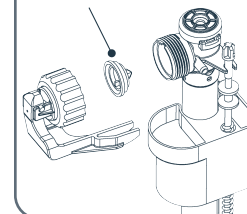

SIAMP
Monaco

4, quai Antoine 1^{er} - BP 219
MC 98007 MONACO Cedex
Tél : +377 93 15 53 75 / Fax : +377 92 05 71 04
contact@siamp.com / www.siamp.com