


8 TILING SPACERS

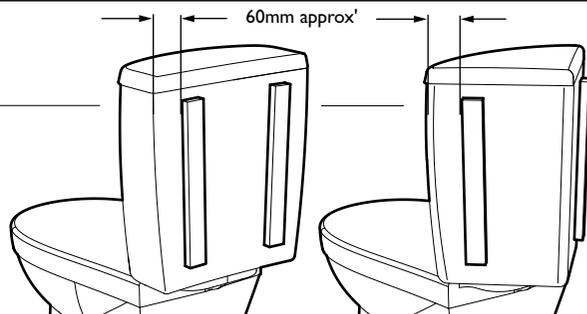


If required, apply the Self Adhesive Tiling Spacers onto the rear of the cistern approximately 60mm from each side. Replace the Lid and Pushbutton.

9 FINAL FIX



Once the whole assembly is in place, the unit can be fixed to the floor using the fixings and instructions provided.

10 CHECKS

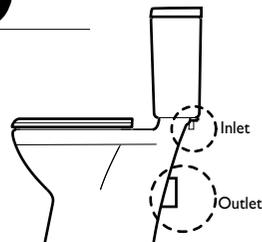

ALL Plumbing Connections & Water Level Adjustments should now be made and all of these need to be checked for leaks.

CARE INSTRUCTIONS

All ceramic products should be cleaned regularly with warm soapy water. They can then be rinsed and, if desired, dried and polished with a soft cloth; regular cleaning will prevent the build-up of soluble salts. Some proprietary cleaners can damage the glazed surface and we strongly recommend that the instructions on the bottle of your chosen cleaner are followed. We advise against the practise of leaving strong cleaners in or on the ceramic products overnight since the glazed surface can be damaged.

Due to continuing development we reserve the right to update and amend technical details without prior notice


Twyford
bathrooms

Lawton Road, Alsager, Stoke-on-Trent ST7 2DF, UK
T: +44(0) 1270 879777 F: +44(0) 1270 873864
www.twyfordbathrooms.com Part of the Sanitec Group

WC



TOTALINSTALL

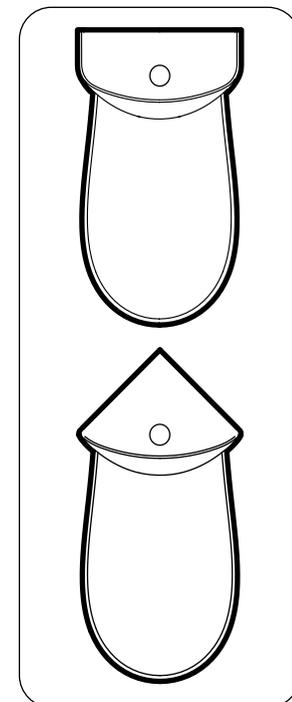


To assemble and install the product read through the instructions first, then refer to them throughout the installation. Make sure the area in which you are working is free from any objects that may scratch the product, as for some stages the product may be face down. It is advisable to lay down cardboard or sheeting for this reason. No responsibility can be accepted for obvious defects found after installation.

Please leave this leaflet for the end-user.


Twyford
bathrooms




CISTERN CONTENTS

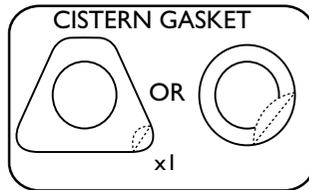


Sticks to the underside of the Cistern to provide a confident seal between the Cistern and the Pan.

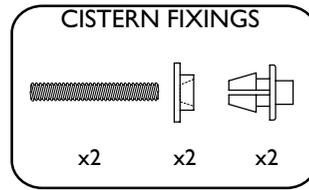

Stainless Steel Studs that fix to the underside of the cistern and nylon nuts that secure the Cistern to the Pan

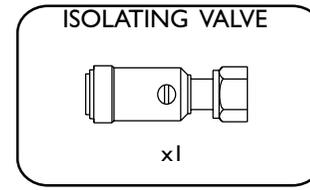

Chromed Isolator that enables a positive push-fit seal on installation and the Valve to shut off supply for maintenance

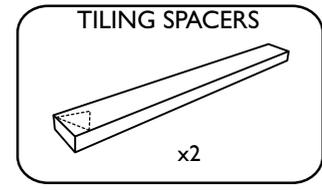

Foam Strips that enable the WC to be installed prior to tiling the walls, without the need for WC removal and re-fitment.

1 CISTERN Same process to be used for standard & corner cisterns

Ensure ALL bags and loose parts are removed from the cistern.

2 GASKET

Peel off Cistern Gasket Backing and position onto the underside of the cistern.

3 FIXINGS

Screw the Cistern Studs into the pre-fitted Bosses on the underside of the cistern.

4 ISOLATOR

Fit the Inlet Tail with Isolating Valve onto the Cistern.

5 CISTERN TO WC

Multiple Hole Type

Lift whole Cistern Assembly onto the Pan. (If multiple hole options are available in the pan - fig 1 - please refer to its specific instruction.)

N.B. Always ensure the Cistern Gasket is correctly located onto the pan.

6

Push Nylon Fast-Fix nuts and washers onto the cistern studs (a) and Tighten (b) using the Tool provided

7 WC SEAT

Fit the seat as per the instructions on the box. **NB.** Re-Fit the box for added protection after final WC installation.