
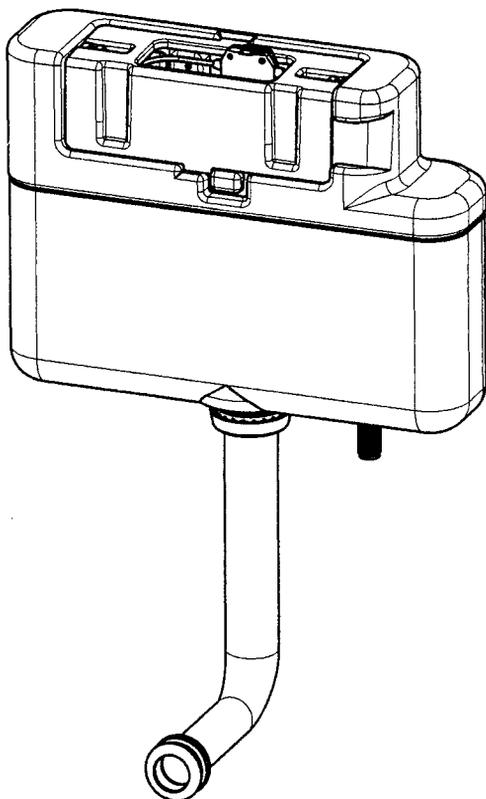


SIAMP



Monaco

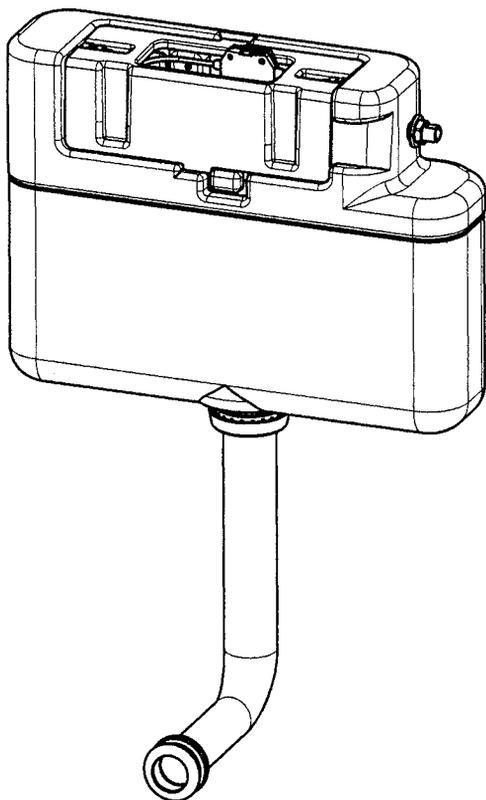

CISTERN FOR FURNITURE AND BACK TO WALL
STYLE DUAL FLOW

ASSEMBLY INSTRUCTION

GROUND FIXED PAN MODEL

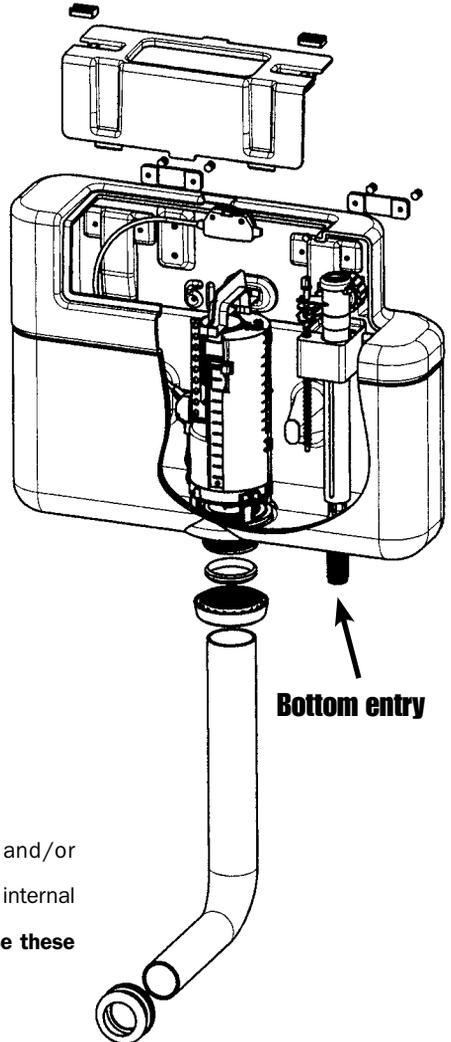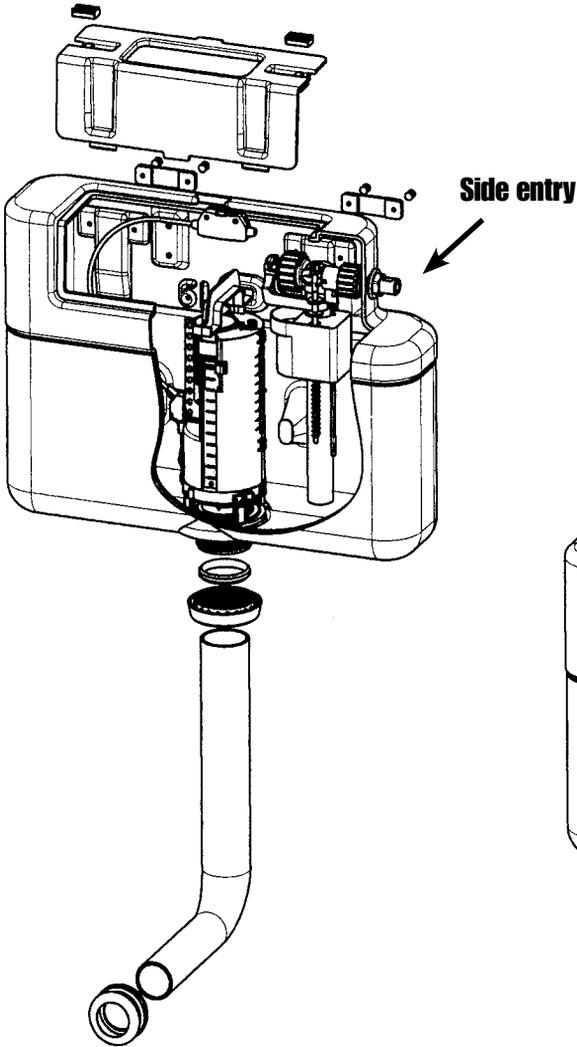

For supply connecting


Ensure tightness of connection to cistern with filter gasket.

WARNINGS:


- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet valve.


SIAMP will be not responsible in case these warnings are not respected.

I - ATTACHING THE CISTERN

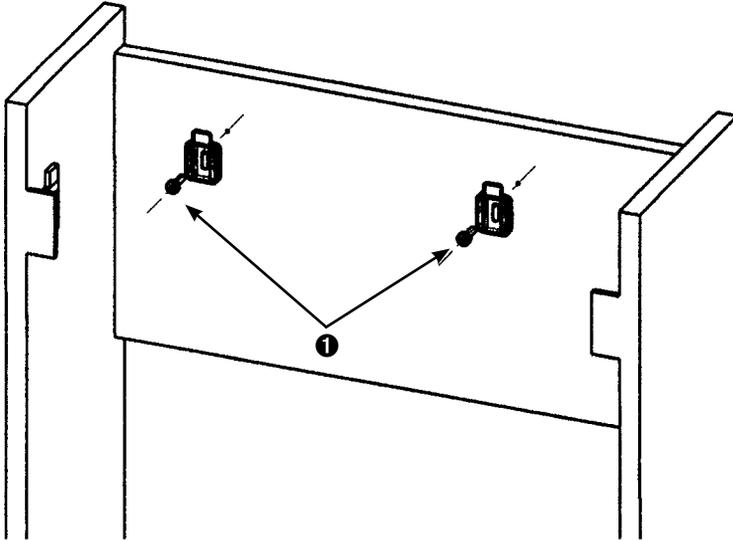


- 1 Attach the cistern attachment lugs
- 2 Position the cistern

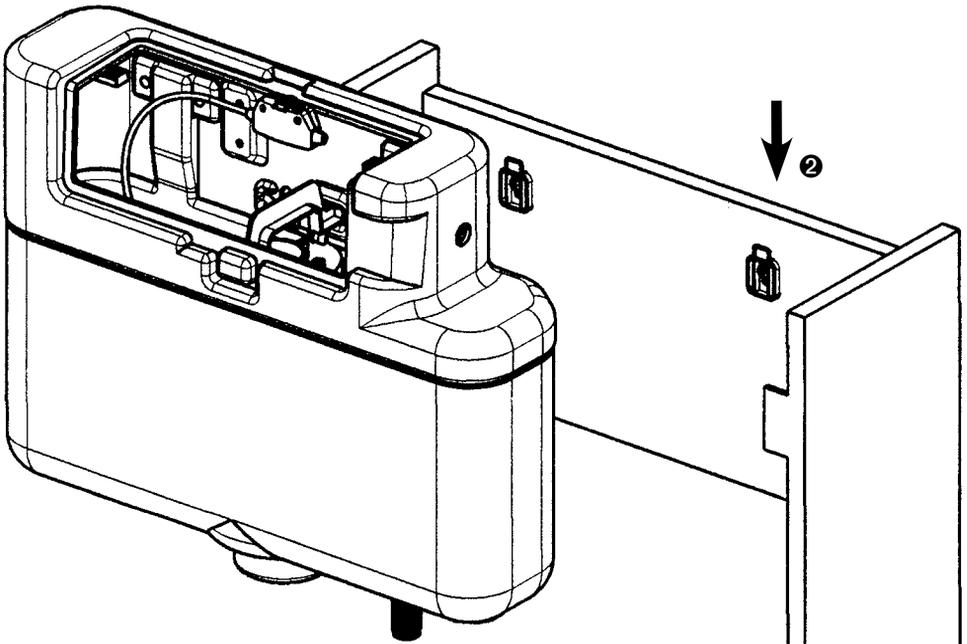


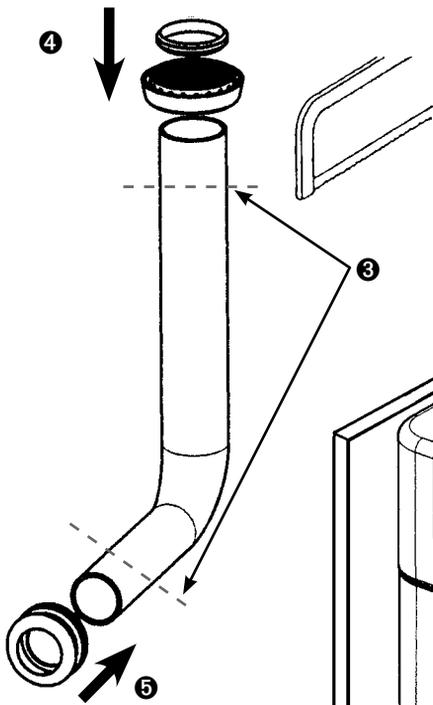


- ③ Adjust the supply sleeve to the position of the toilet bowl (height and length)
- ④ Fit the supply sleeve nut and the seal
- ⑤ Position the toilet bowl seal
- ⑥ Insert the supply sleeve in the cistern
- ⑦ Tighten the supply sleeve nut
- ⑧ Connect the supply sleeve and the drain sleeve, reinstall the front of the cabinet and position the toilet bowl.

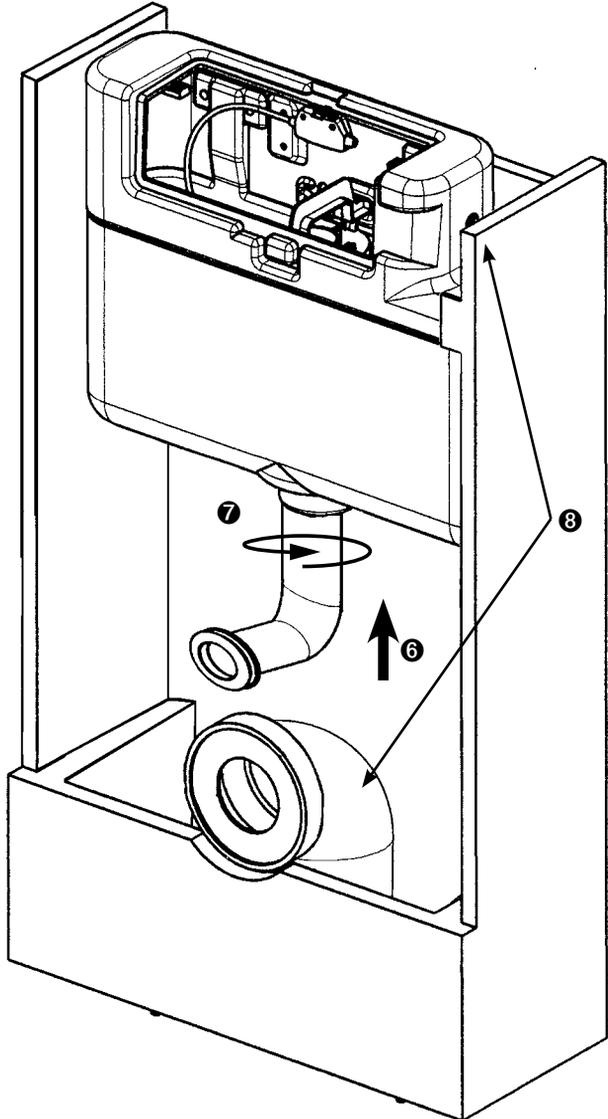


II - FLUSH BUTTON INSTALLATION

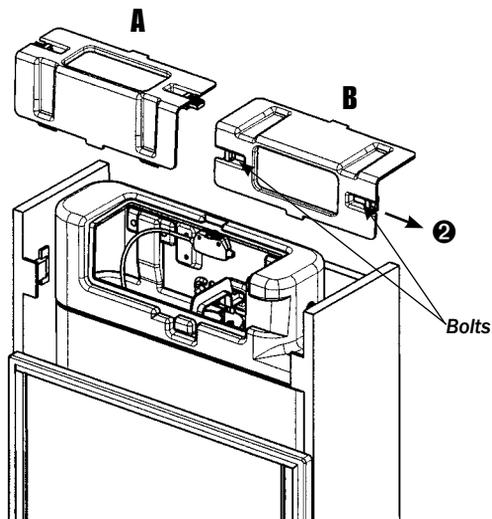


- 1 Position the closing plate according to the type of control (top control (A) or front control (B))
- 2 Attach the plate with the bolts
- 3 Position the button:
 - place button and screw button nut
 - clip cable case
 - Place lid back on top or front of furniture
- 4 Close the furniture or panel.

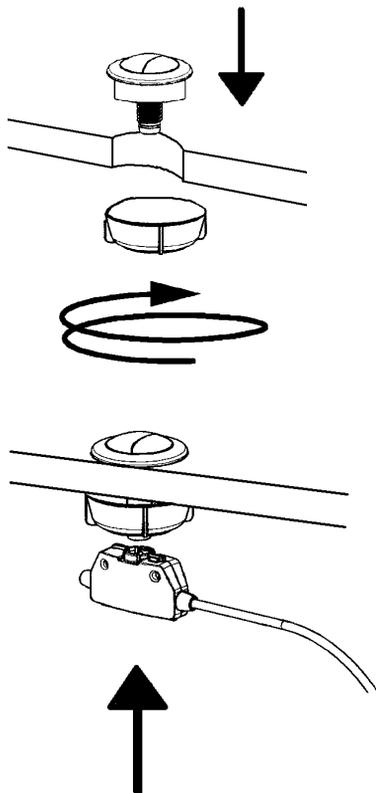


III - TOILET BOWL CONNECTION

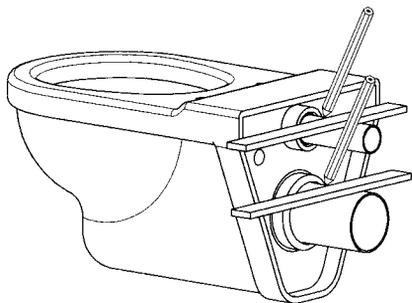

- 1 Using a rule placed as shown in the above drawing, draw a mark on the toilet bowl side, on the two sleeves.

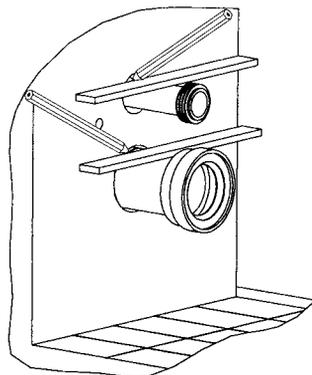



- 2 Remove the sleeves from the toilet bowl and fit them to the frame. Using a rule placed as shown in the drawing above, make a mark on the wall side, on the two sleeves

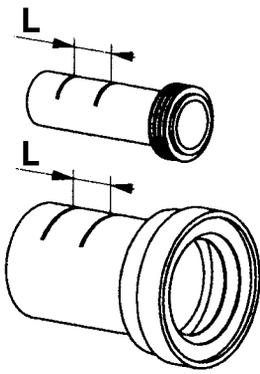

- 3 For each of the sleeves, measure the dimension (L) between the two marks.

- 4 Transfer this dimension (L) by increasing by 3 mm at the end (frame side) the size obtained on each sleeve. For instance, if L = 50 mm, shorten the sleeve by 53 mm.

- 5 Cut the sleeves using a hack saw.

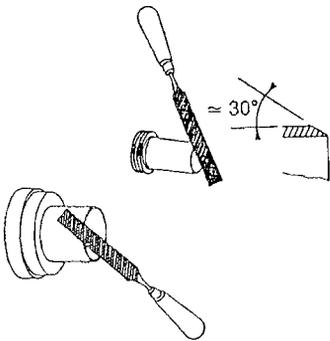
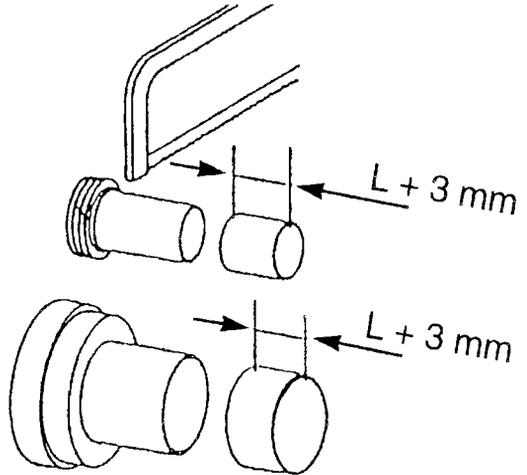



- 6 Deburr the cut pipes using a file

- 7 Measure the thickness at the rear of the toilet bowl (B)

- 8 If necessary, cut the attaching rods (I) so that the part protruding from the wall measures (B) + 20 mm




- 9 Shorten the flexible sheaths (j) so that the part protruding from the wall measures (B) - 15 mm

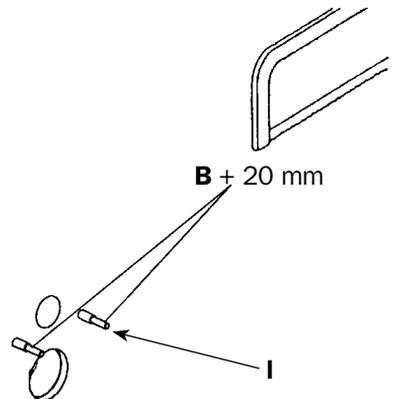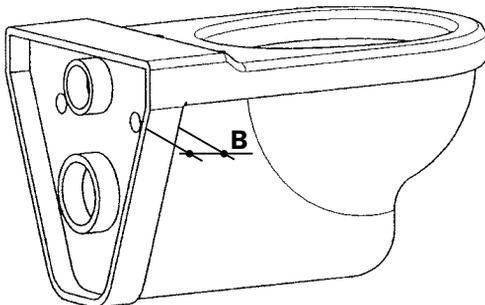

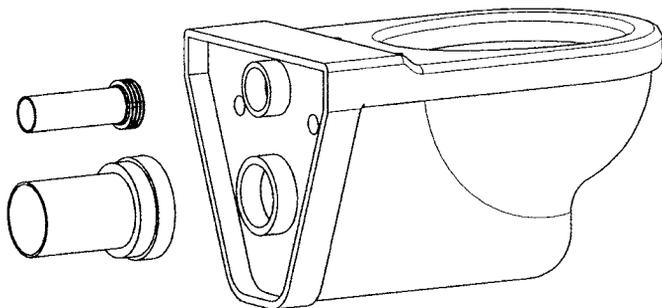

⑩ Fit the supply sleeve (h) and the drain sleeve onto the toilet bowl. Then position the toilet bowl on the two attaching rods.

⚠ To facilitate the fitting of the drain sleeve onto the bowl and the pipe, use soapy water.

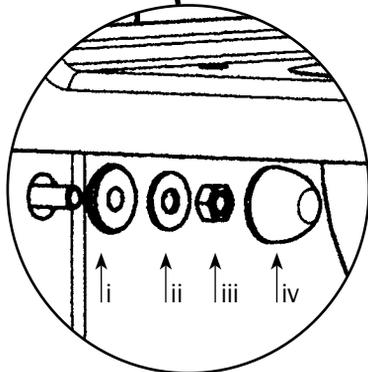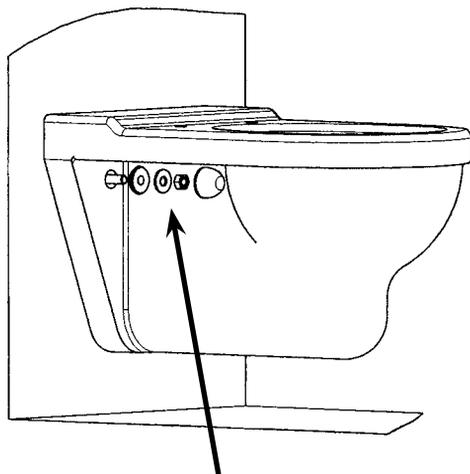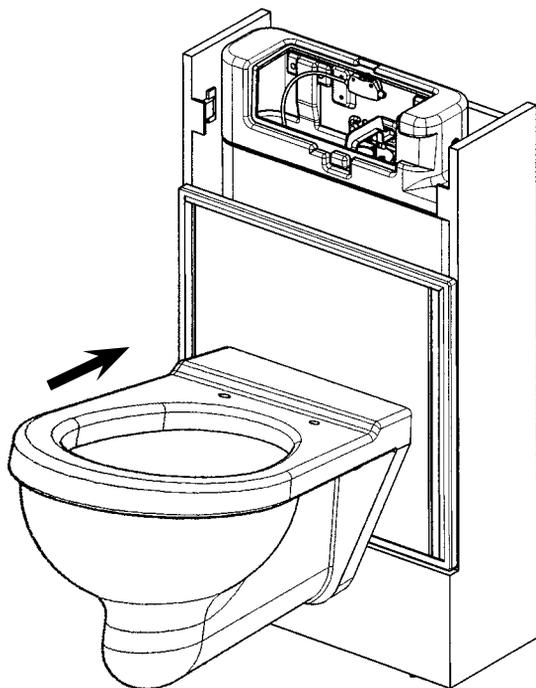

⑪ When the toilet bowl is correctly positioned, attach it using the toilet bowl fixing kit complying with the part stacking order:
 i = centering washer
 ii = metal washer
 iii = nut
 iv = cover

⑫ Connect the supply sleeve

You have just installed a concealed cistern for furniture and back to wall STYLE DUAL FLOW by SIAMP and we would like to thank you for your confidence in our products.

As expert in technical equipment and accessories for the toilet, SIAMP has taken every possible measure to apply all the necessary care to the design and production of this product, offering a ten-year guarantee except for rubber parts and manpower.

For any complementary information, or indicated claim, please contact:

Style products Ltd
4a Wilsons Park, Monsall Road, Newton Heath, Manchester M40 8WN
Tel : 0161 205 1200 - Fax : 0161 205 1212

Or directly:

SIAMP

Monaco

4, quai Antoine 1^{er} - BP 219 - MC 98007 MONACO Cedex

Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04

E-mail: contact@siamp.com

Site Internet : [http://: www.siamp.com](http://www.siamp.com)