

SIAMP

Monaco



< 1 bar :




> 1 bar :



COMPACT 99B AIR GAP
INSTRUCTIONS

1. Installation

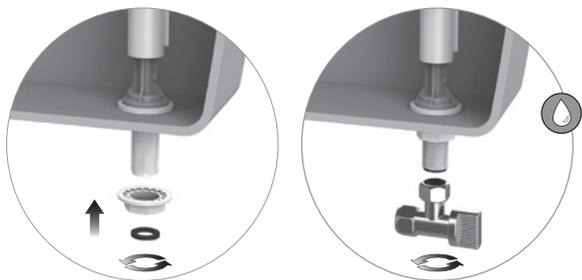


- 1 Place the fill valve with the seal inside the cistern
- 2 Screw the nut
- 3 Link to the water supply

Hand screw the nut until contact with the ceramic

⚠ Do not over tight in any case. Do not use any sealing paste and/or compound in any case

2. Water settings

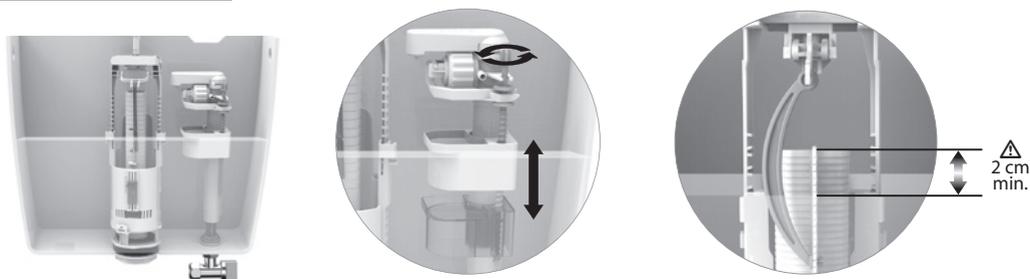

Adjust the water level with the screw

3. Maintenance

You may rinse the filter or the membrane to maintain your fill valve.

If the membrane is damaged, you need to replace it.

