



SIAMP






Monaco

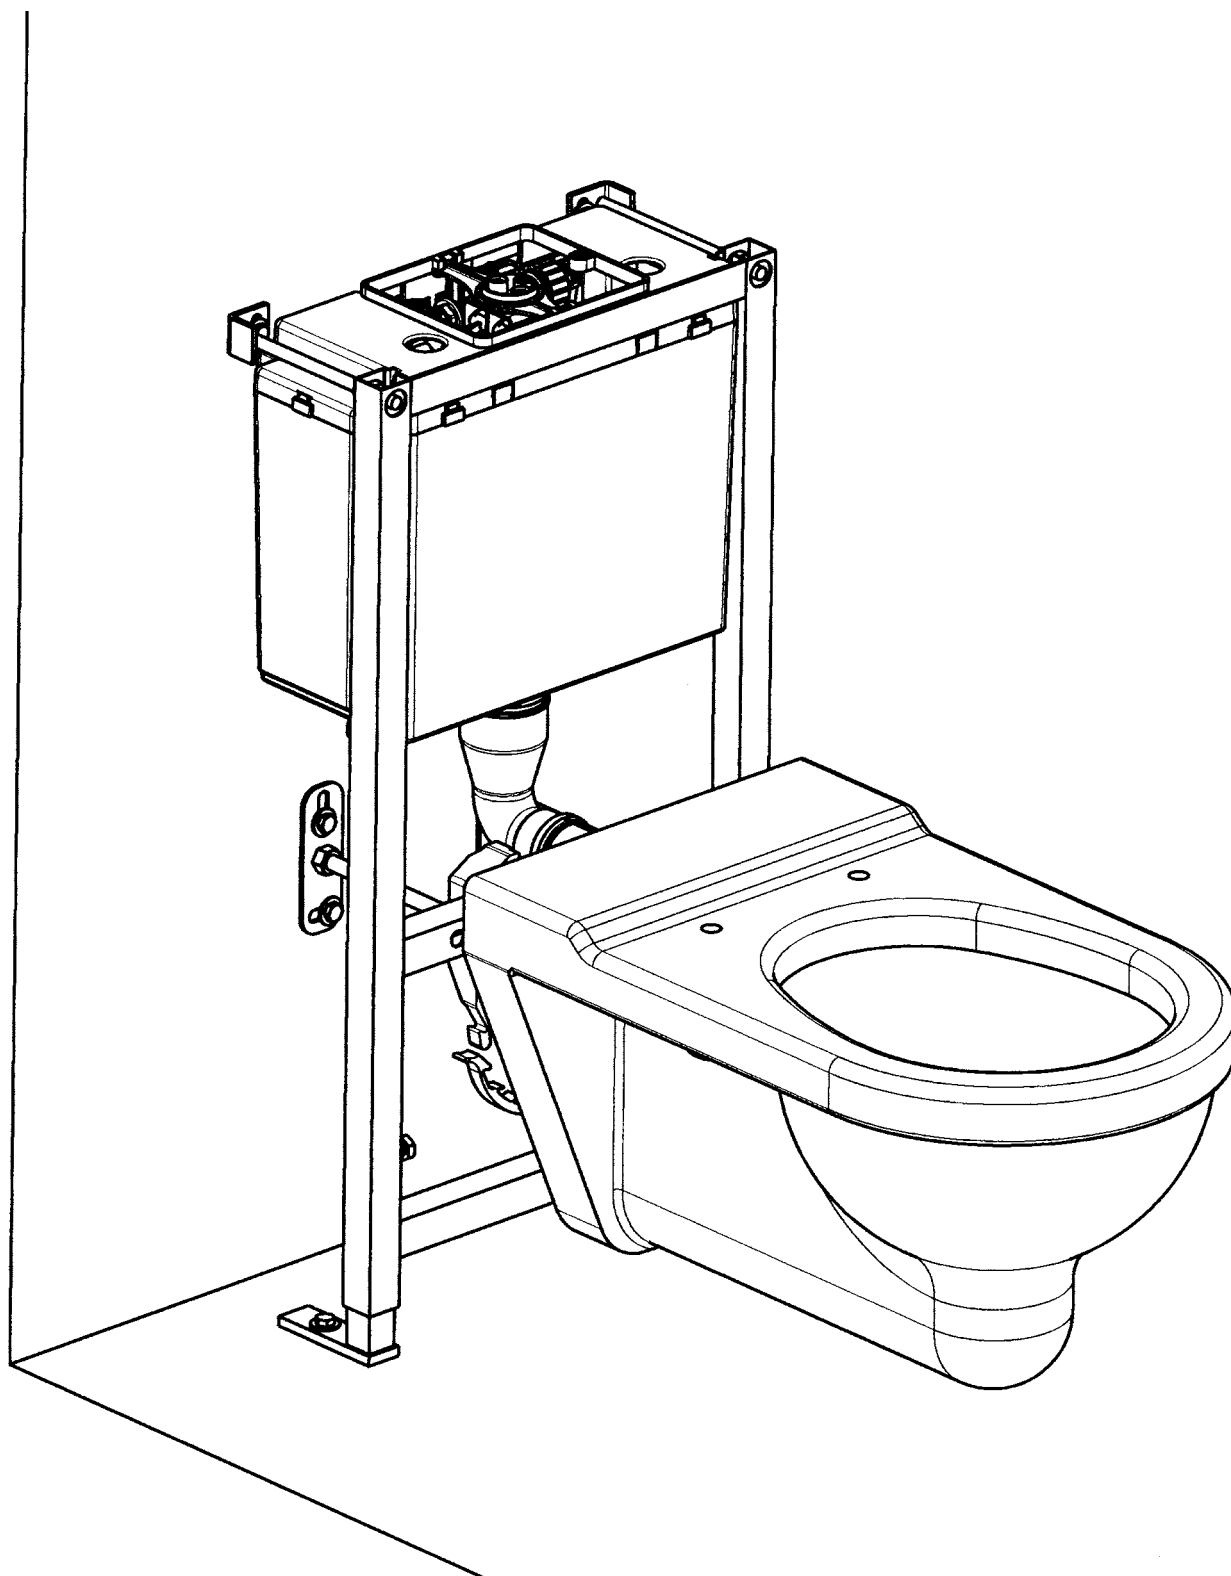


BATI CHASSE

VERSO BCM 800


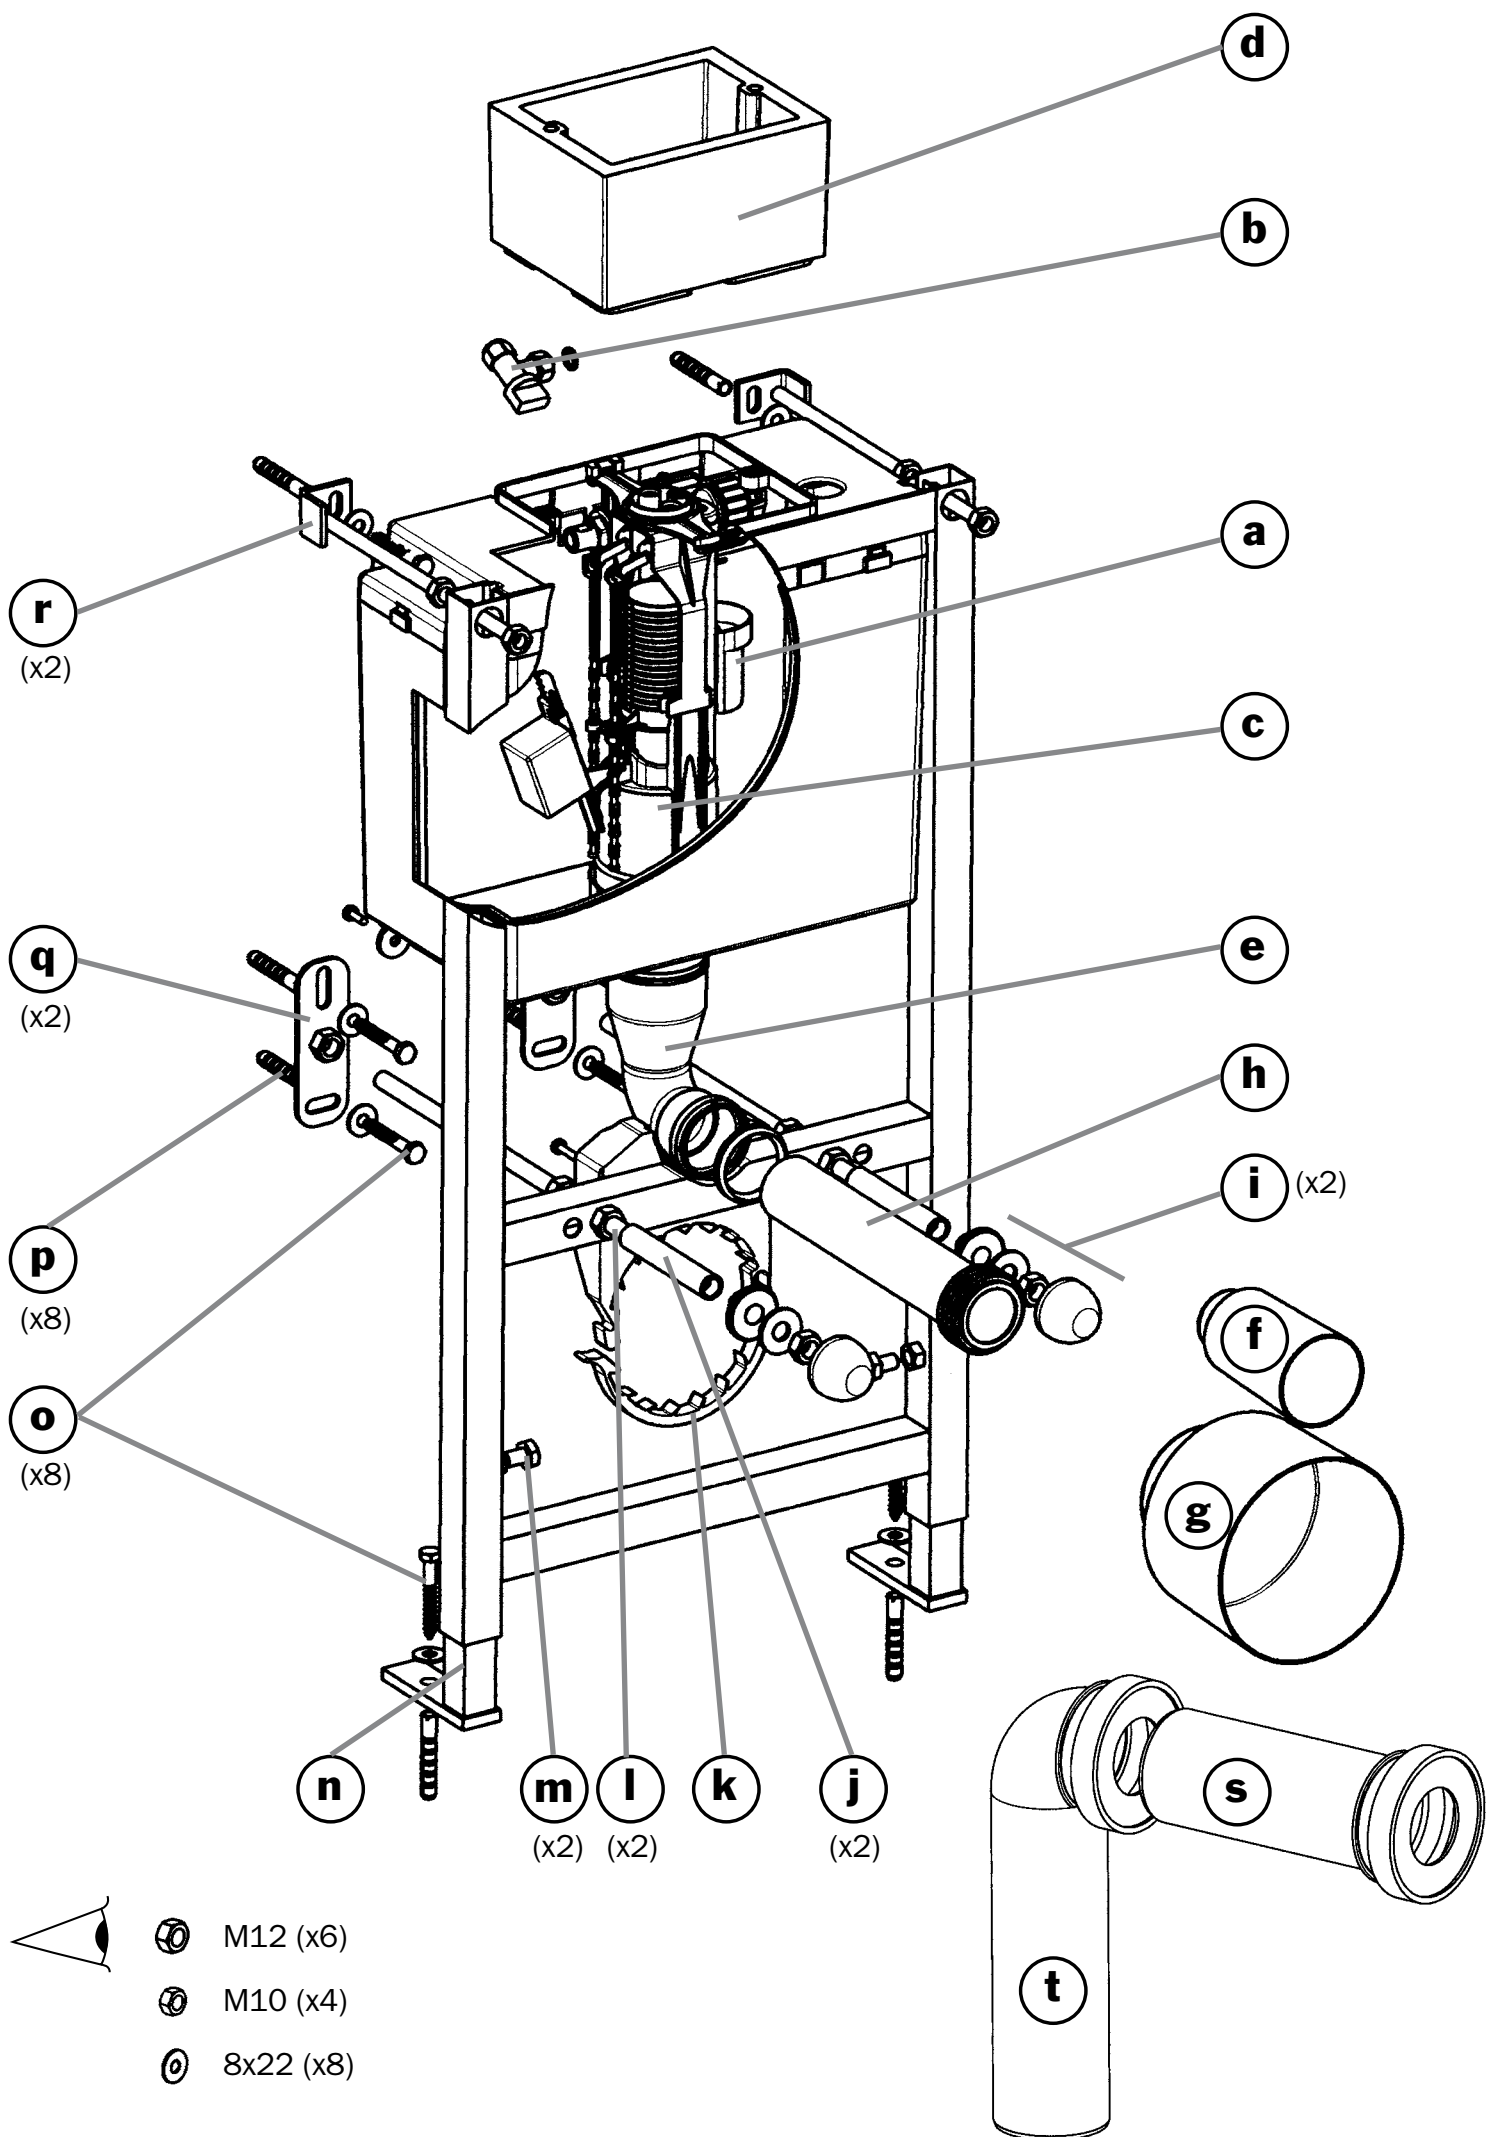


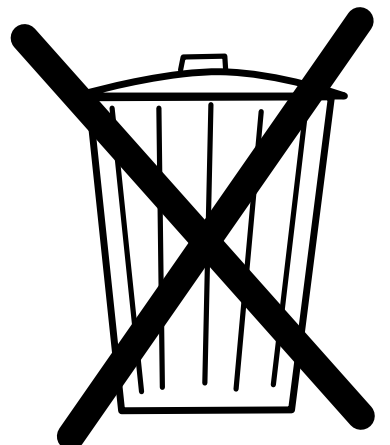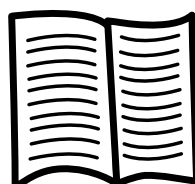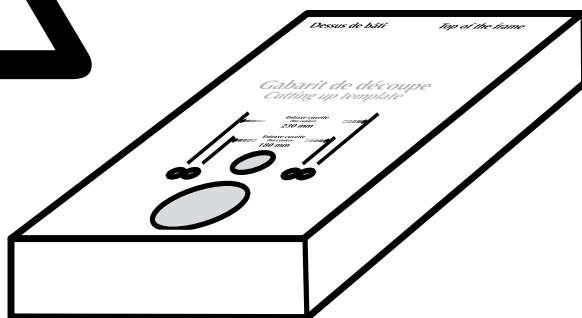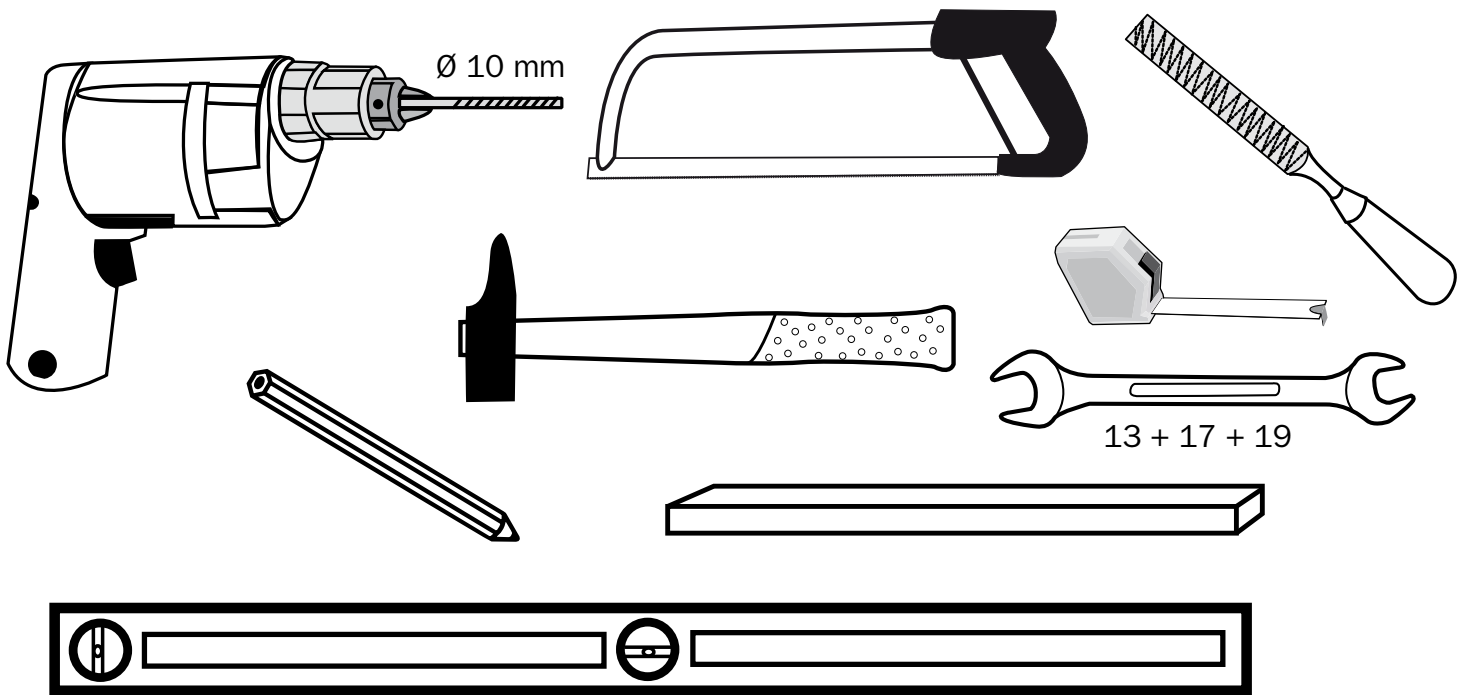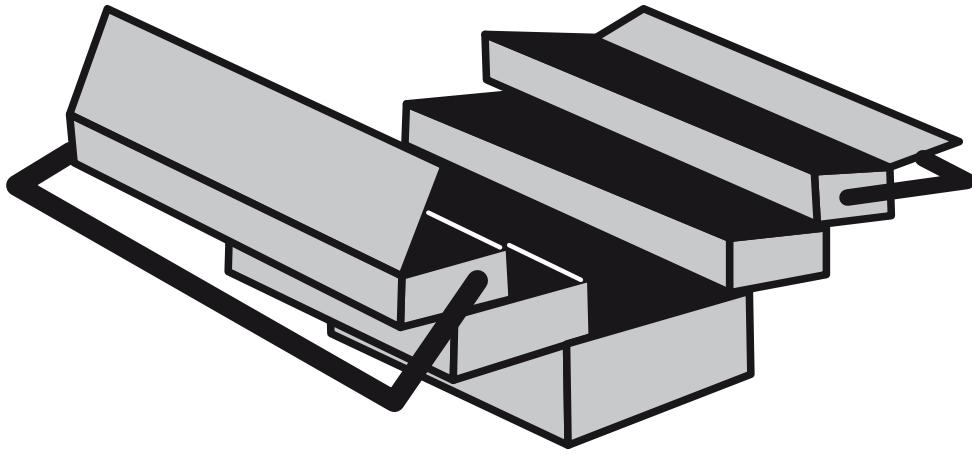

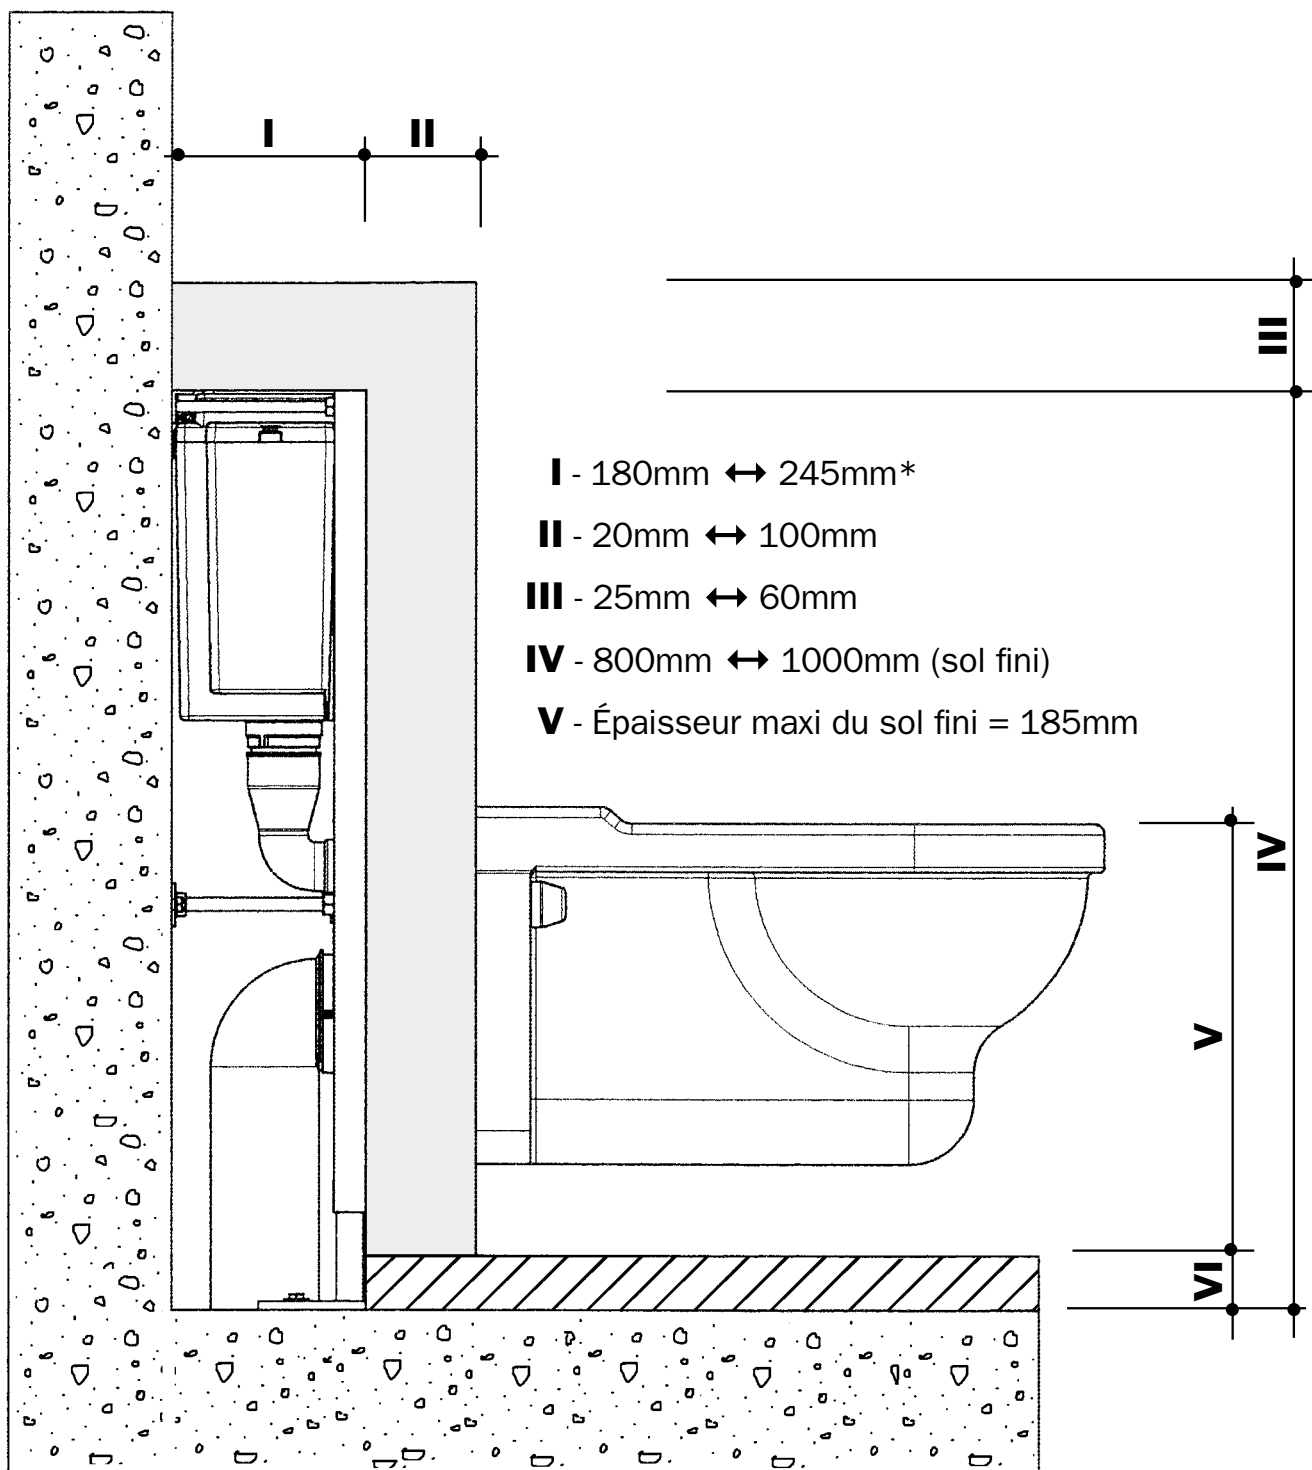


MEUBLEO

*

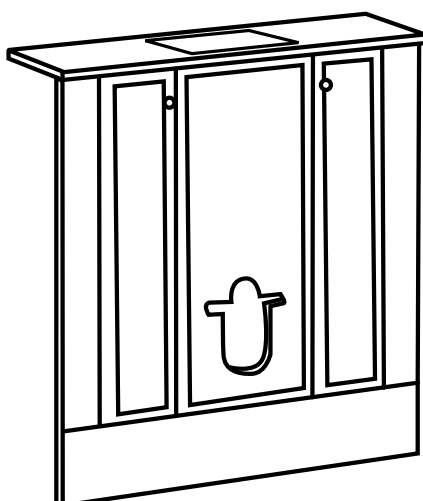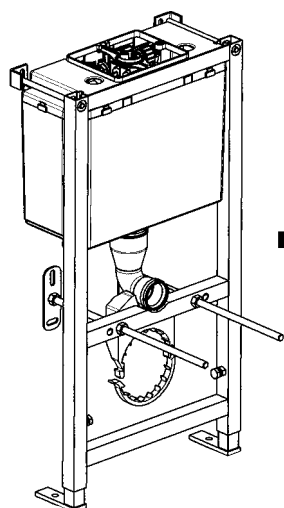

I - 210mm ↔ 245mm


1

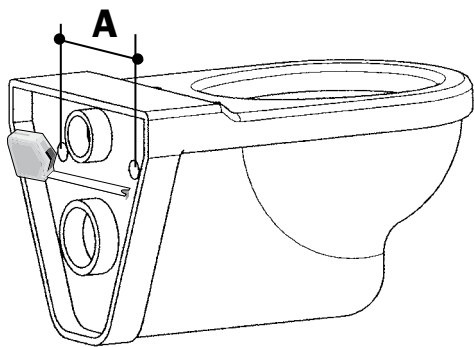


A = 180mm → 2-1

A = 230mm → 2-2

2-1

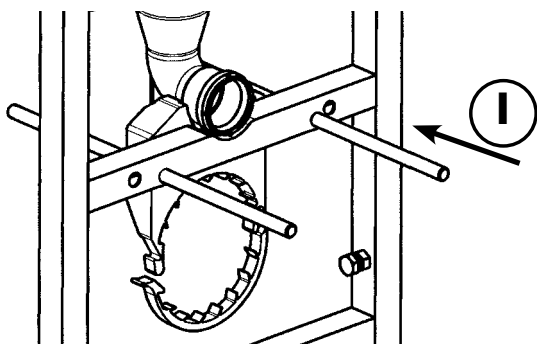


2-2


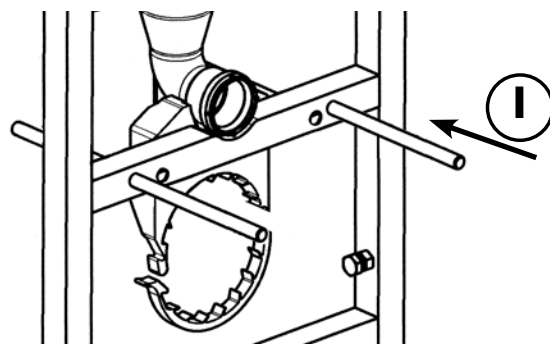


3


2

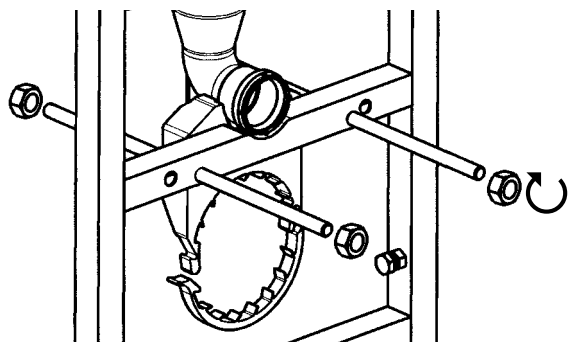


2

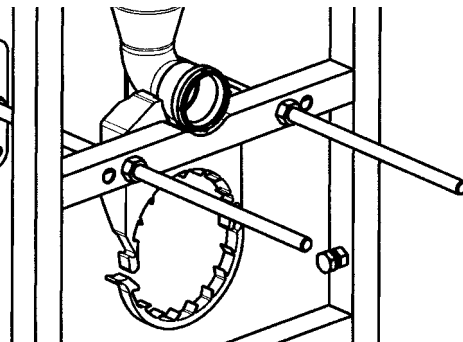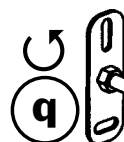


4

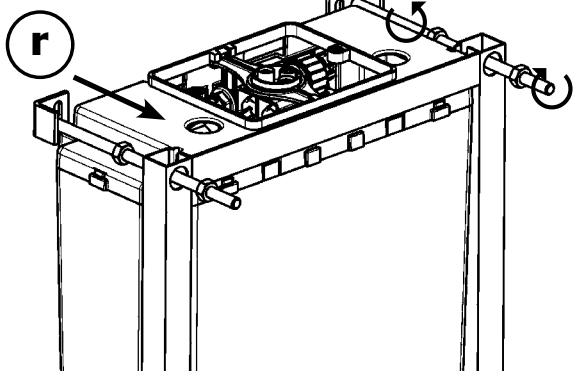


5

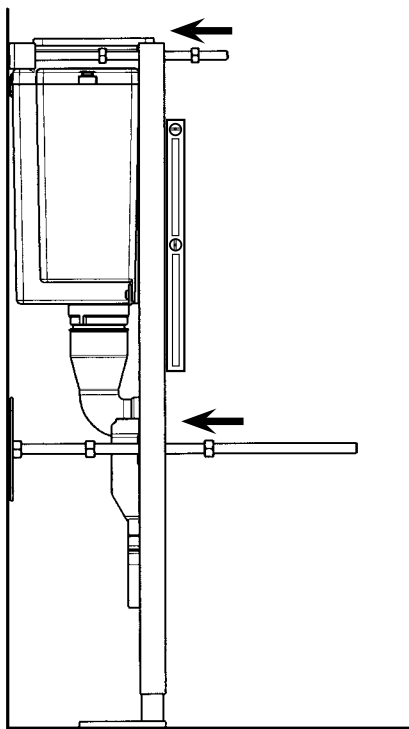


6

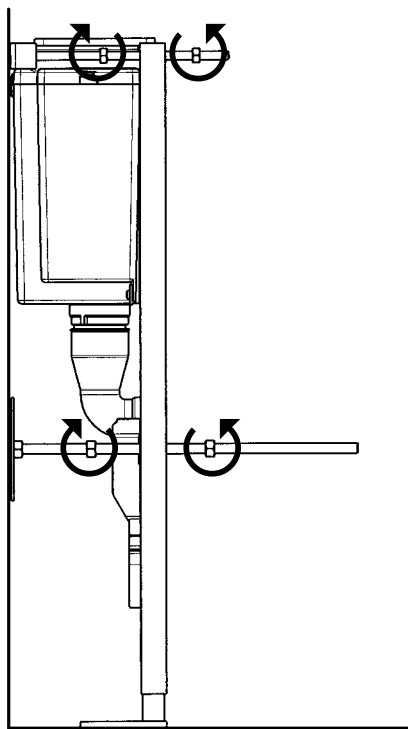


7

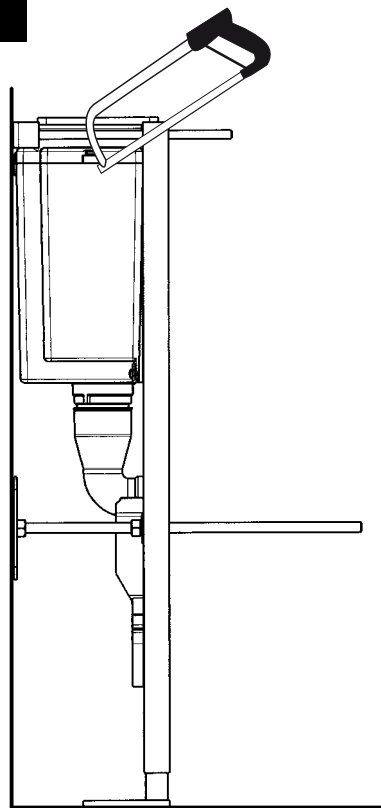


8

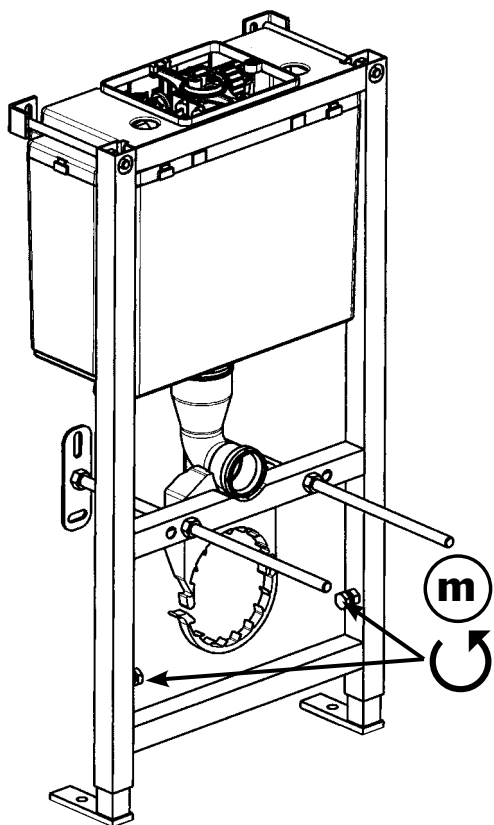


9

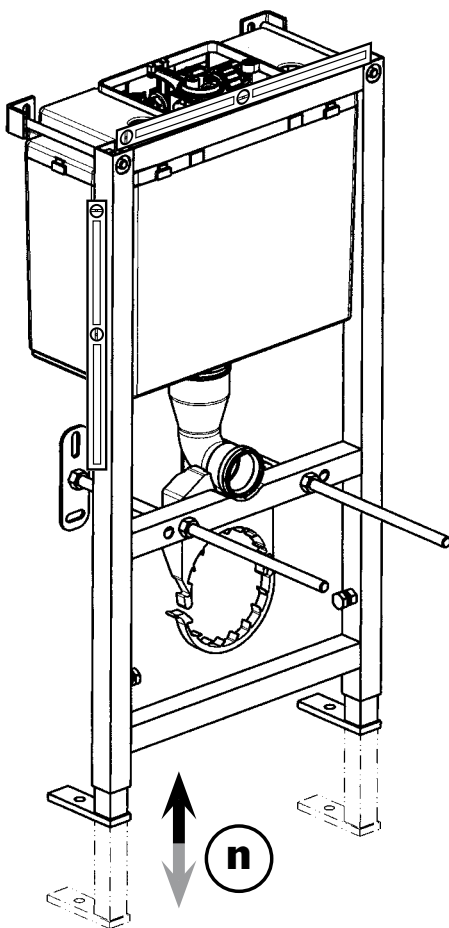


10

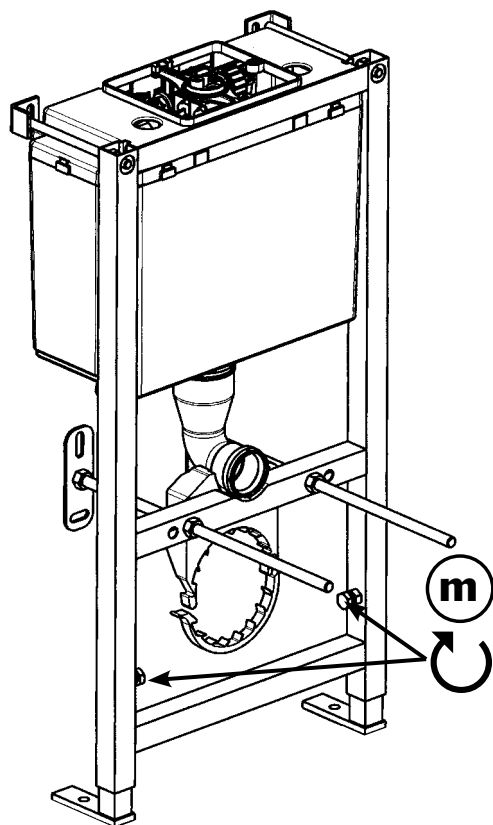


11

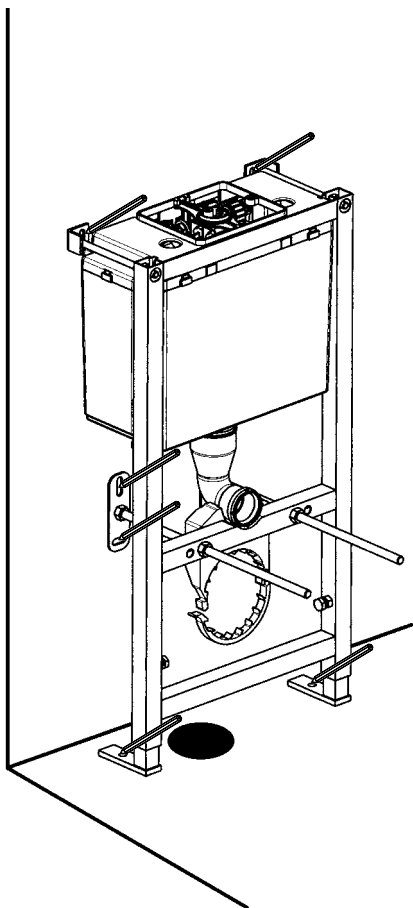


12

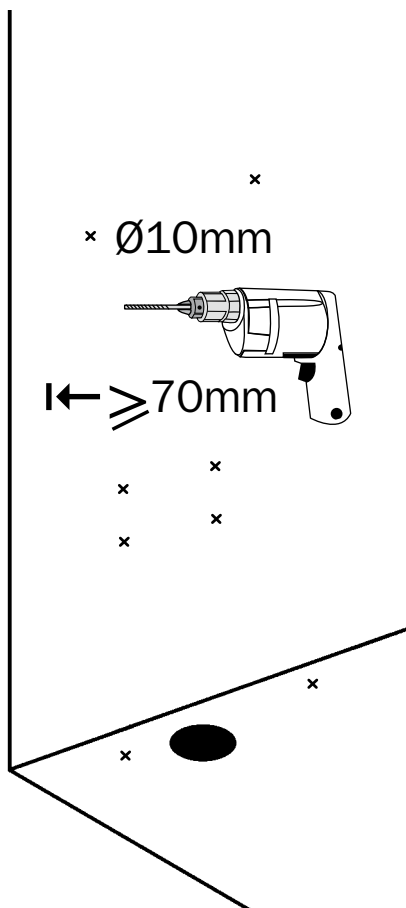



13

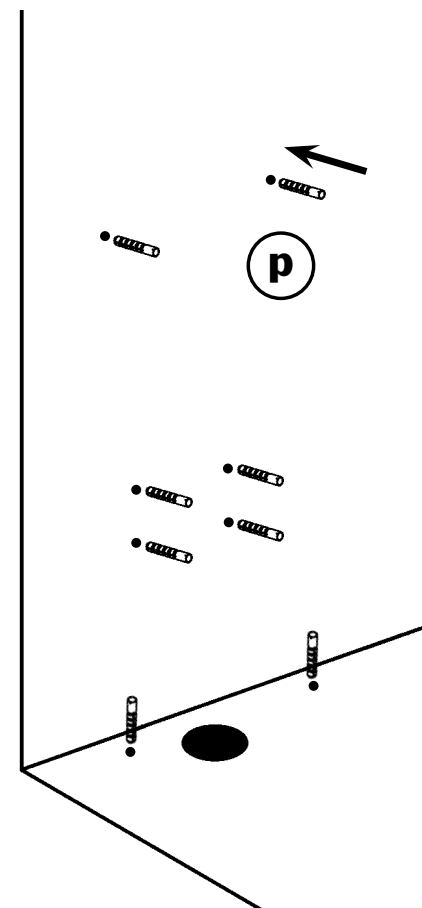


14

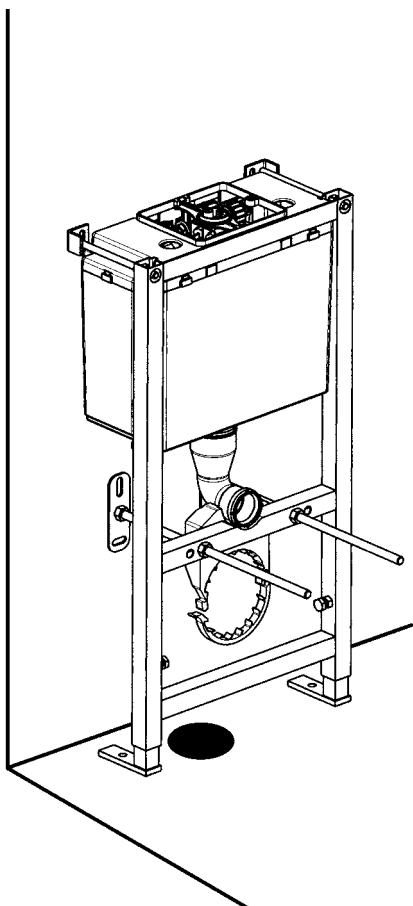

15

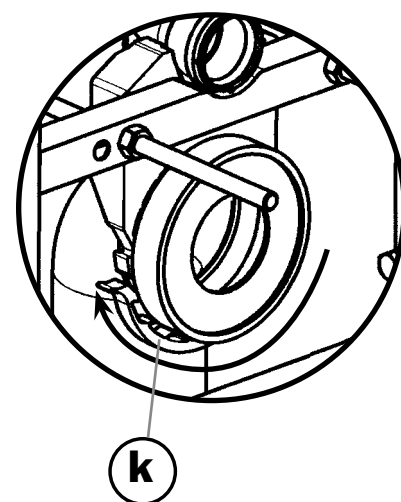
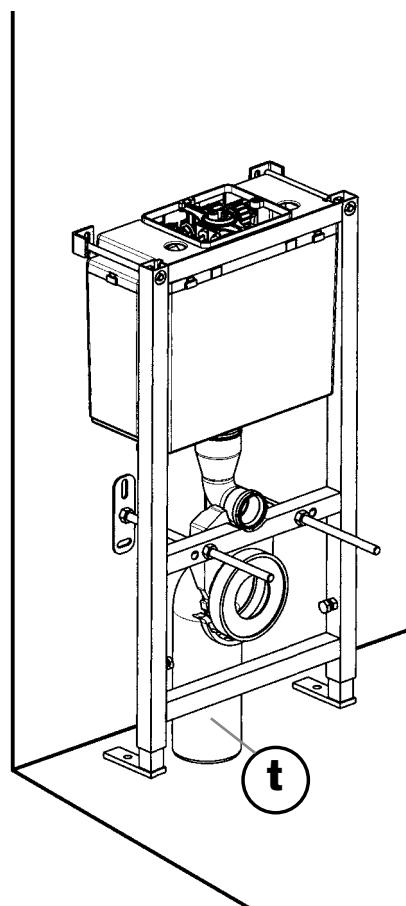


16


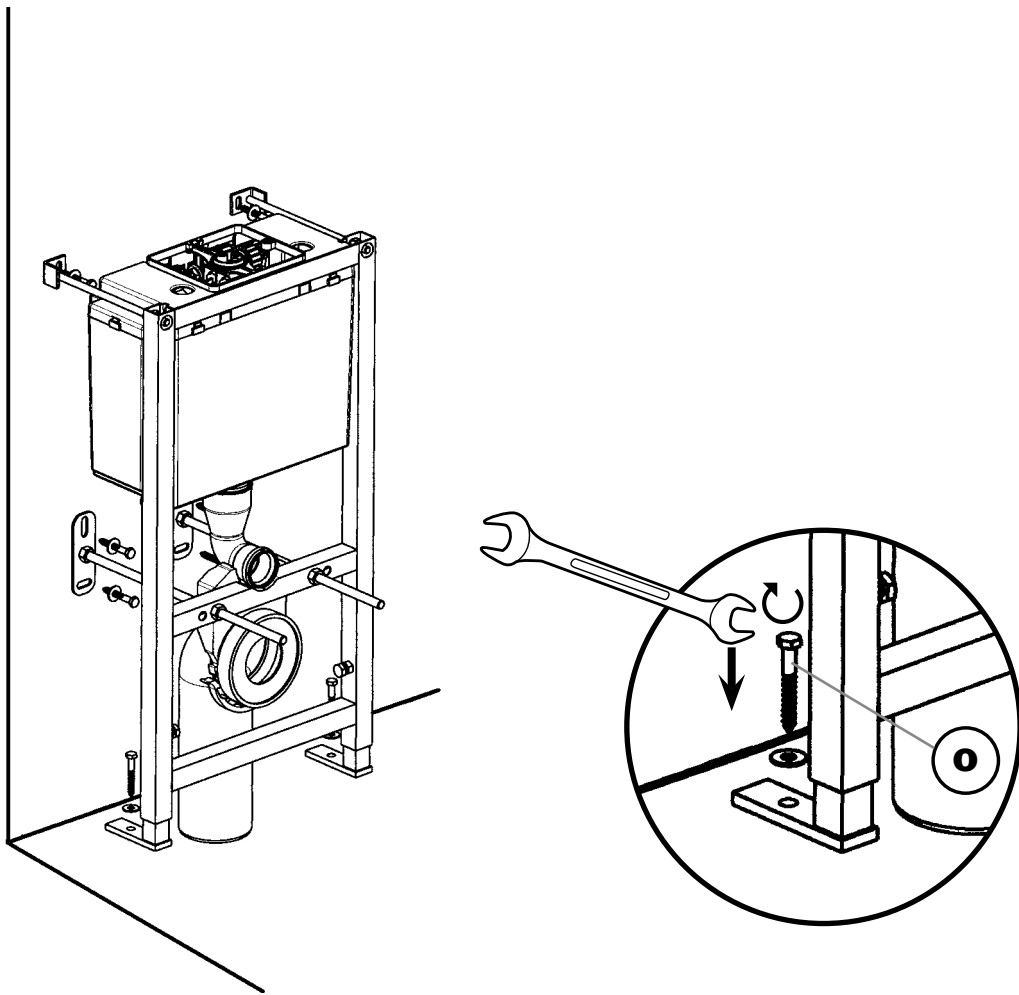







17

1

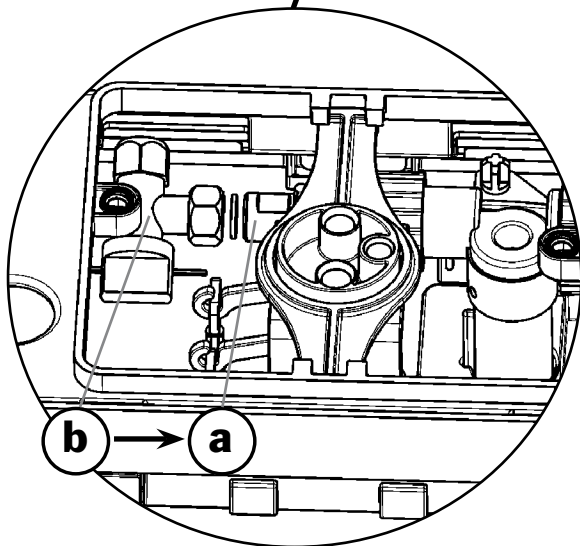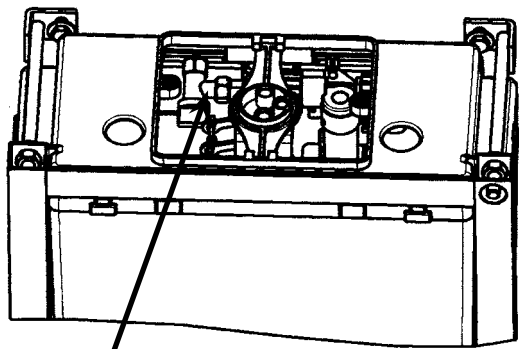


2

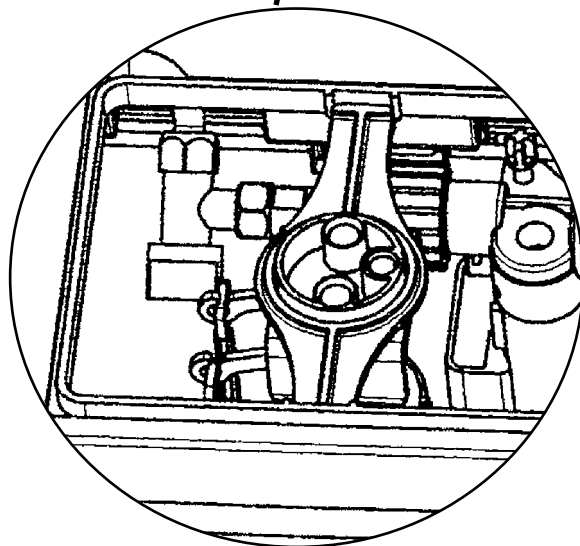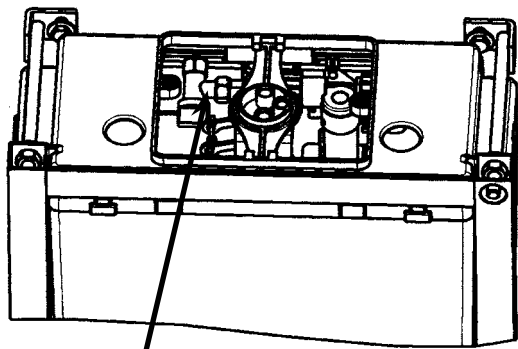


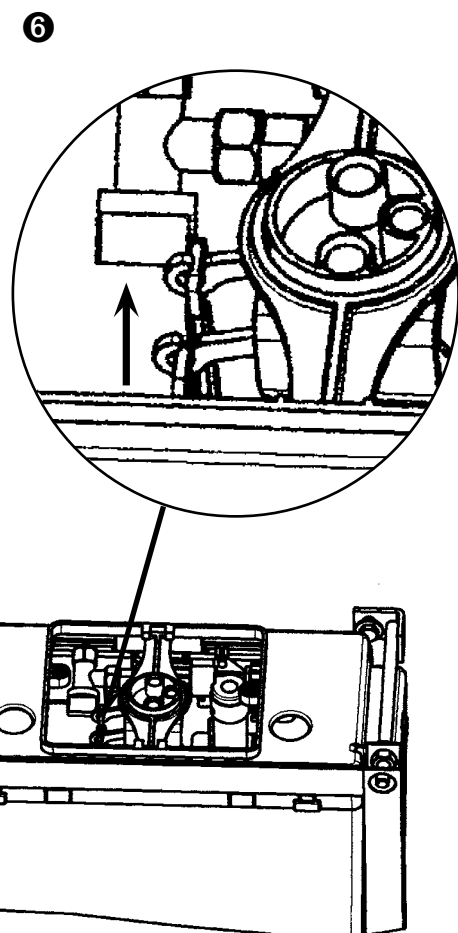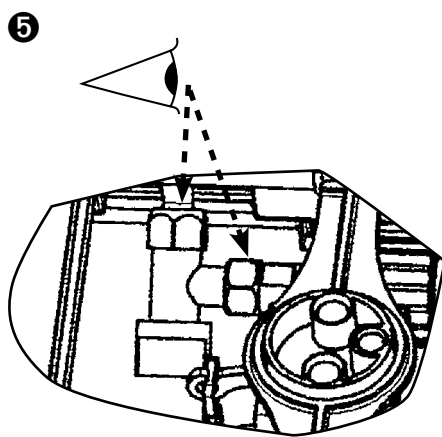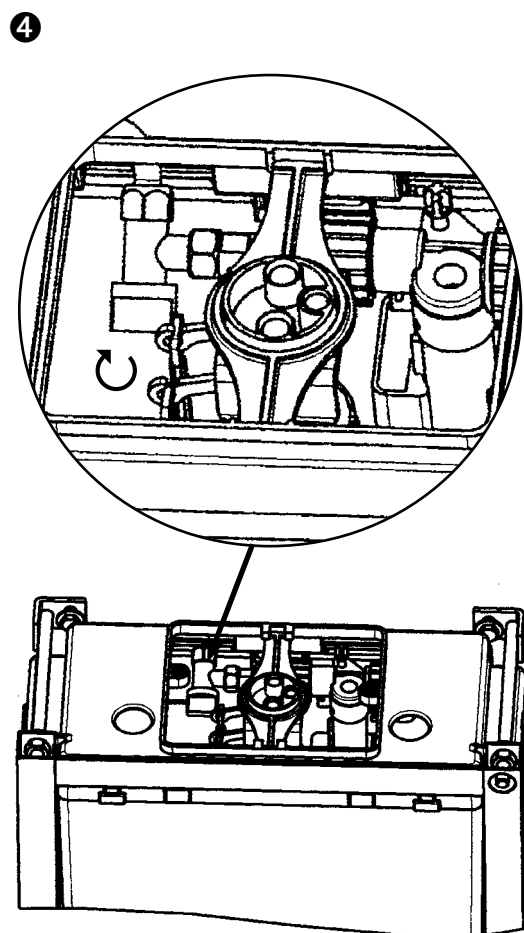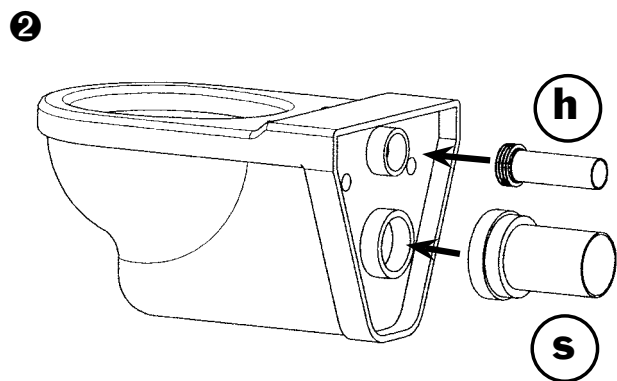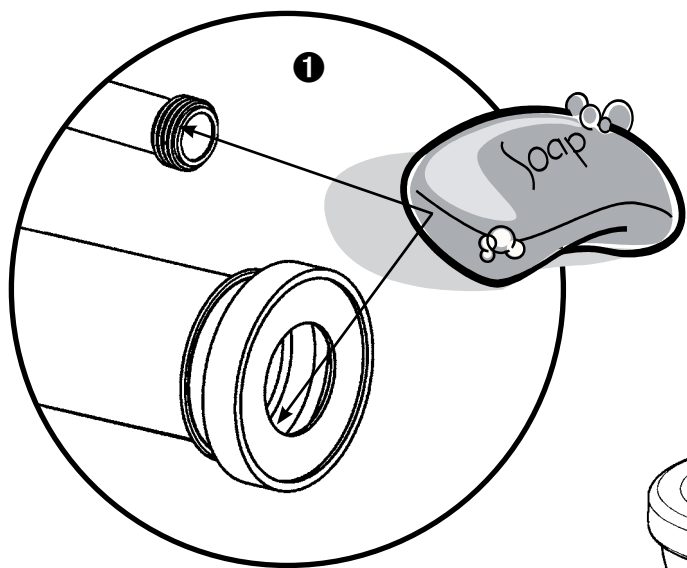


7

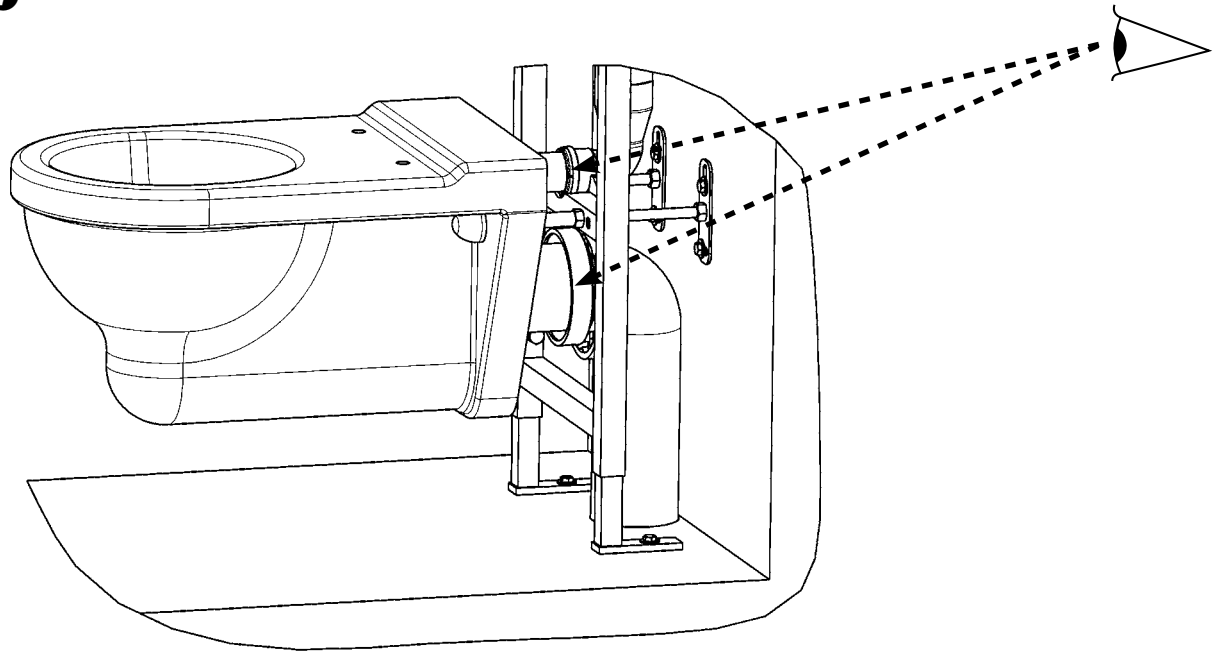


8

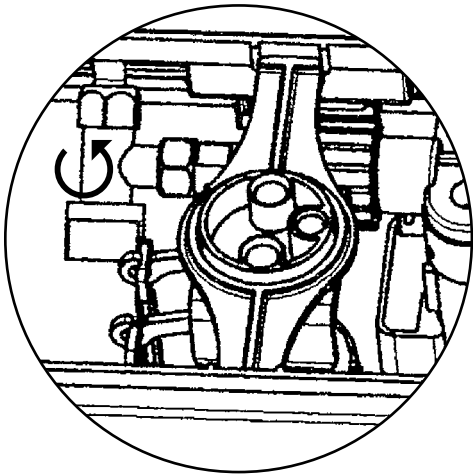

9

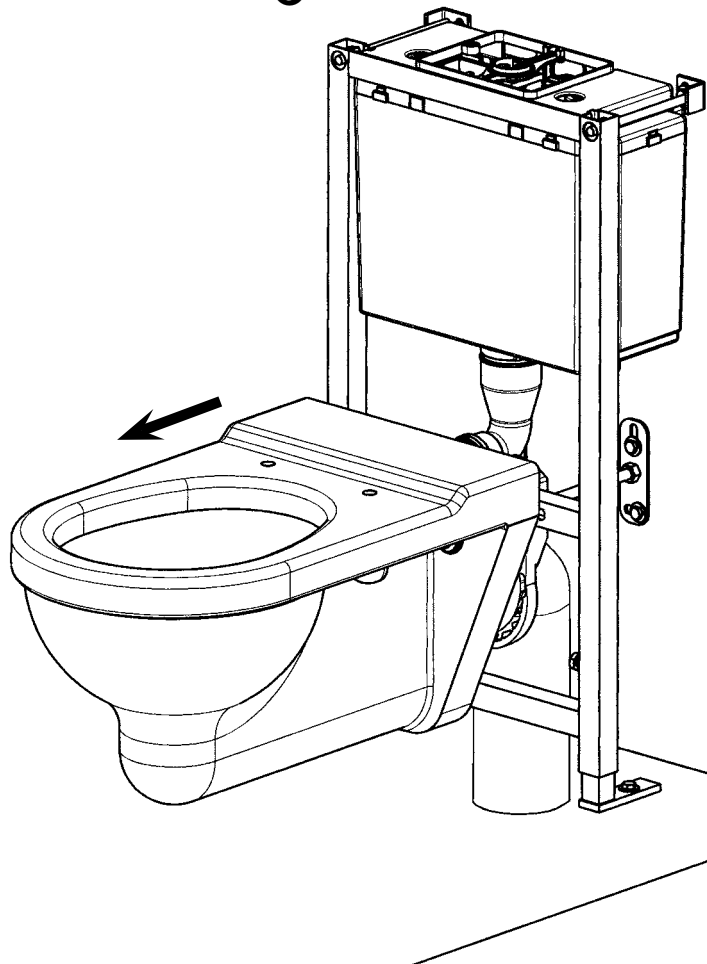

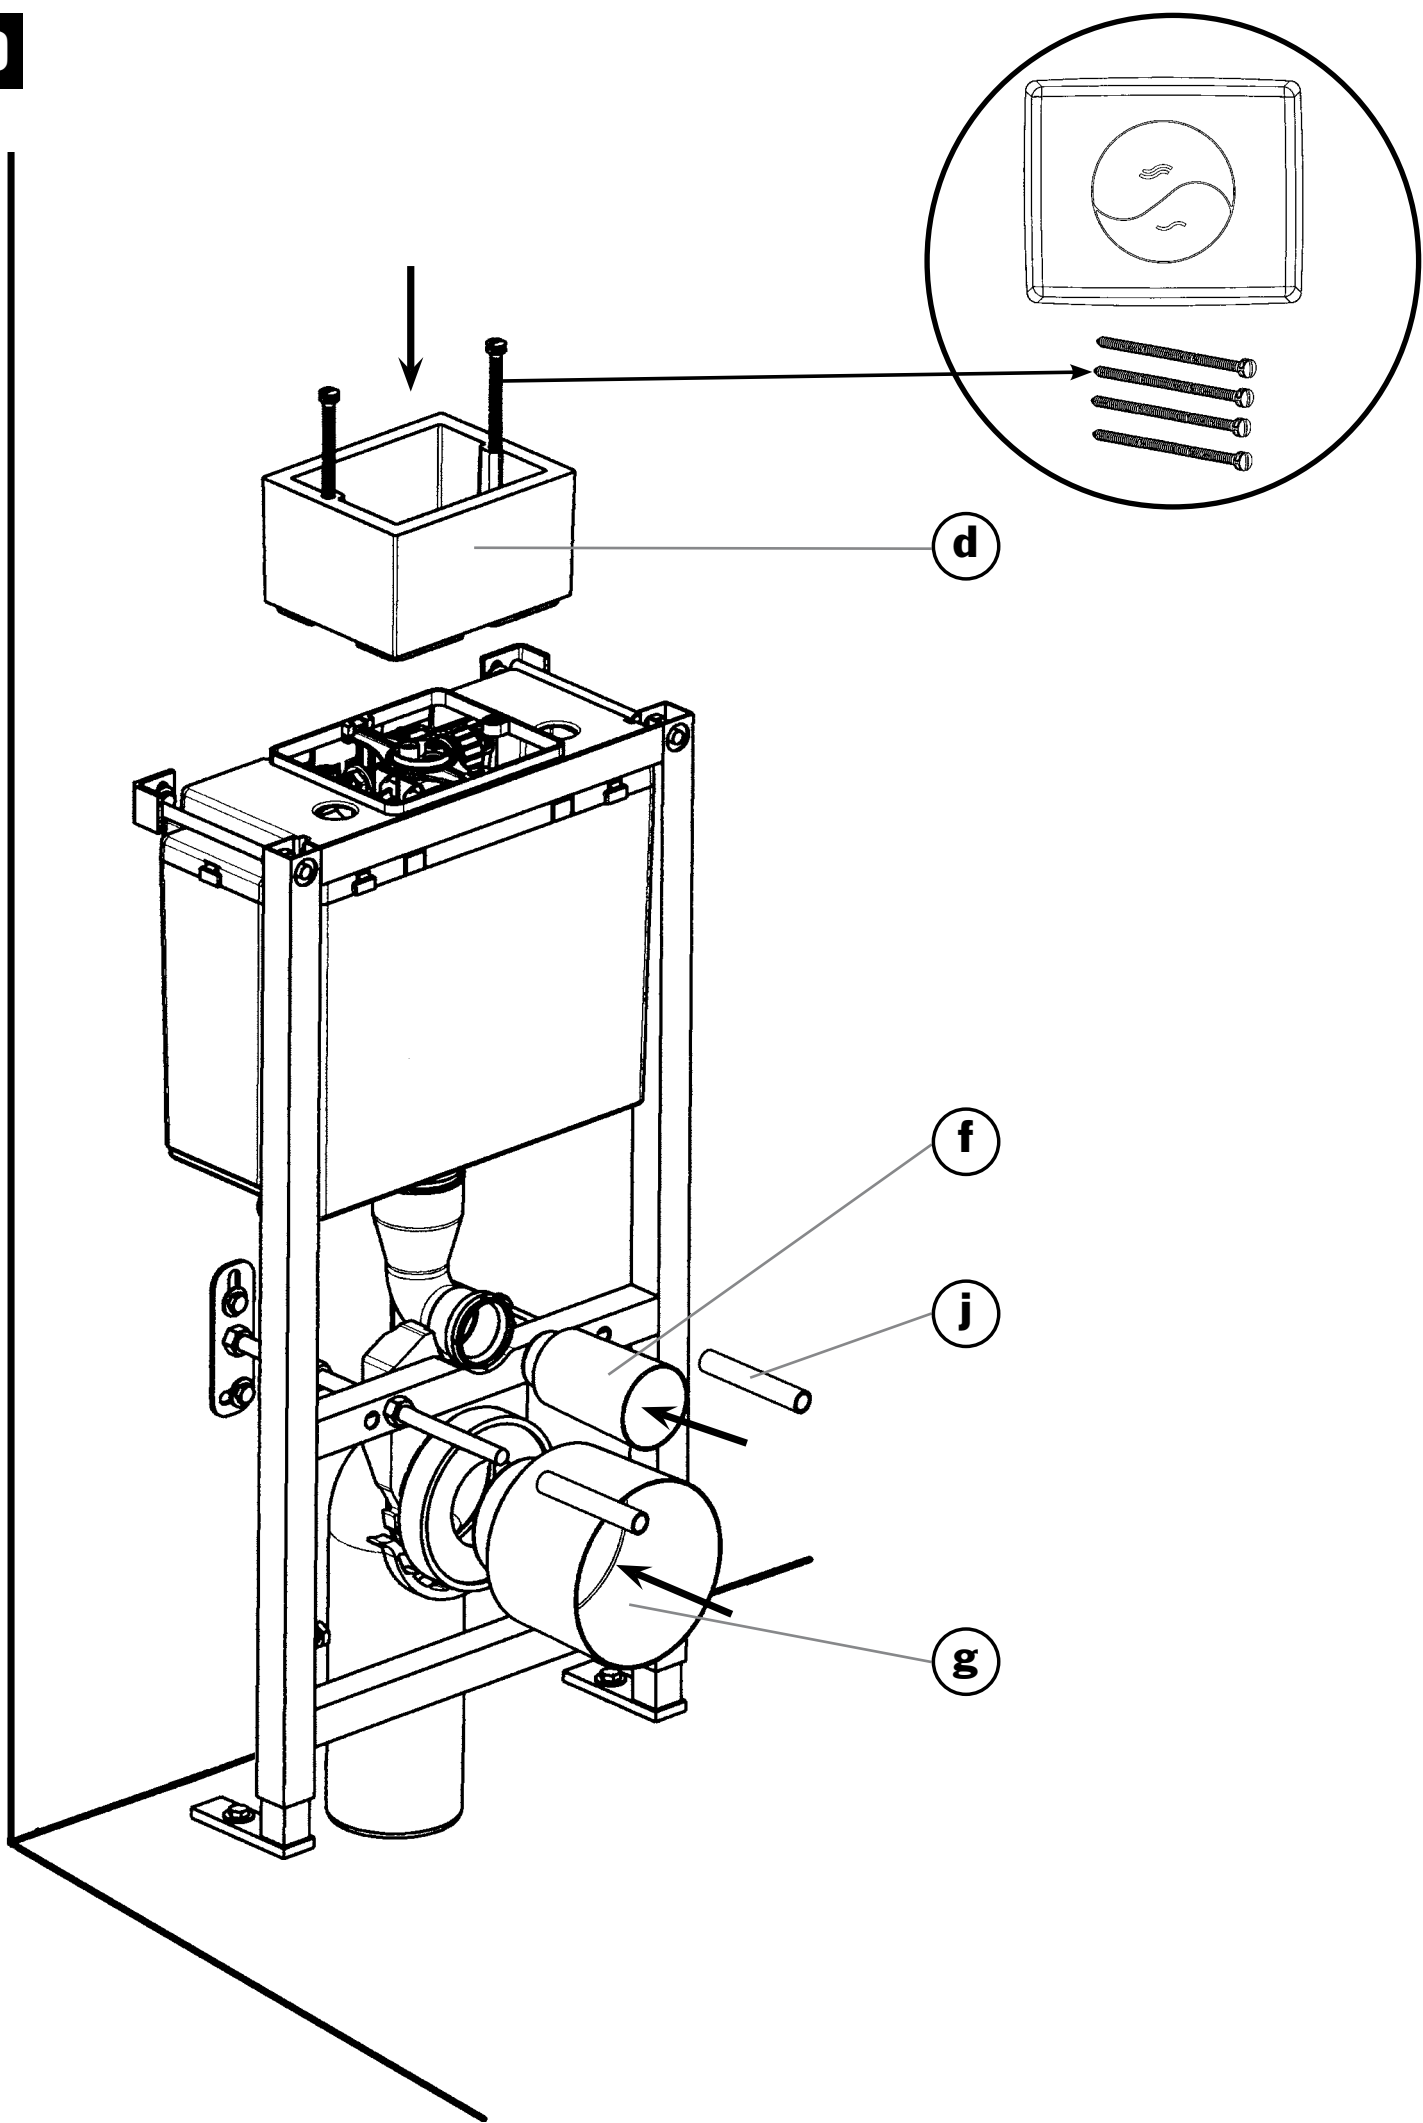

GB :

F : Réaliser l'habillage, pour la découpe des différents trous utiliser le gabarit au dos du carton. L'habillage doit être impérativement solidaire à la structure du bâti.

D :

E :

S :

N :

DK :

FL :

PL :


RU :

LT :


RO :

NL :


22

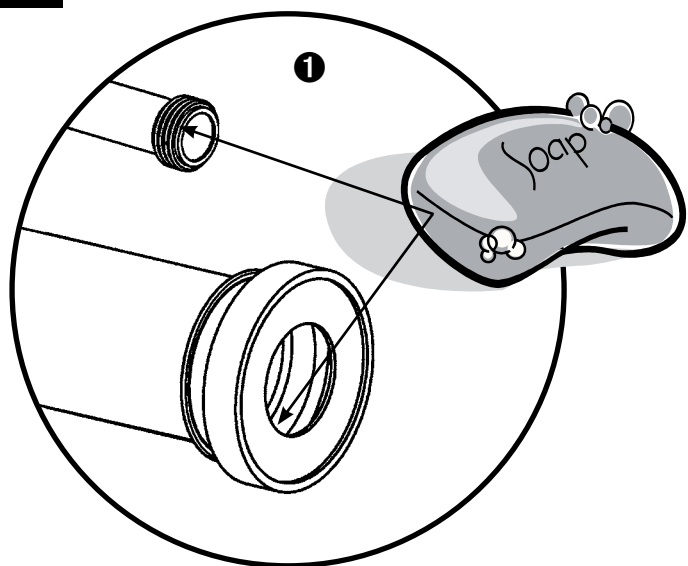


2

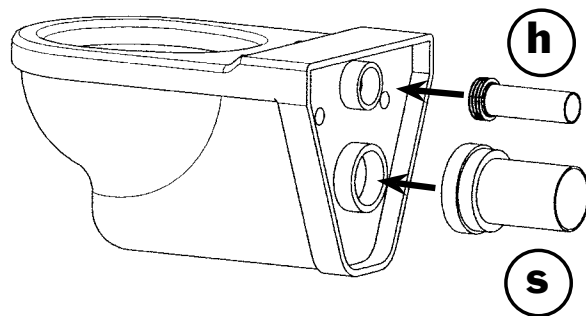



3

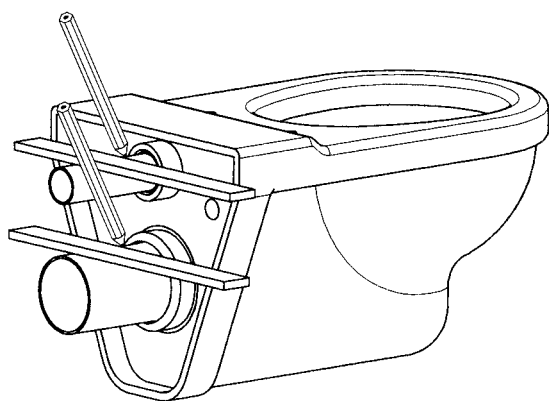

4

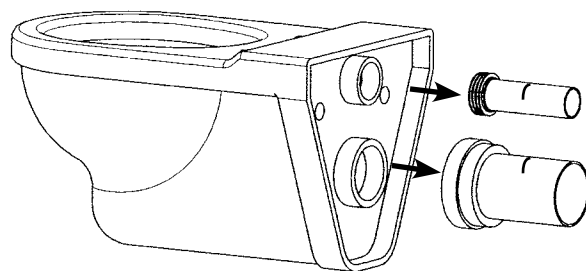


23

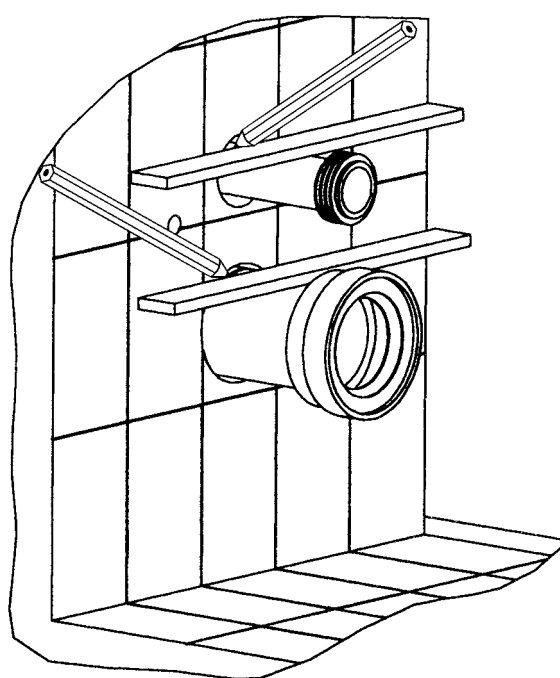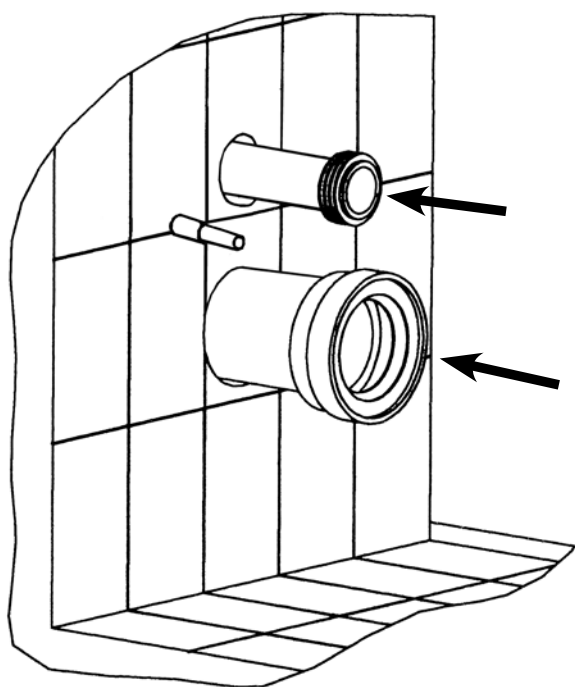


24


①

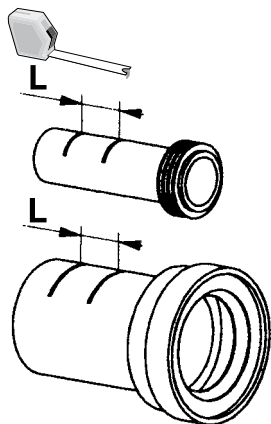


②

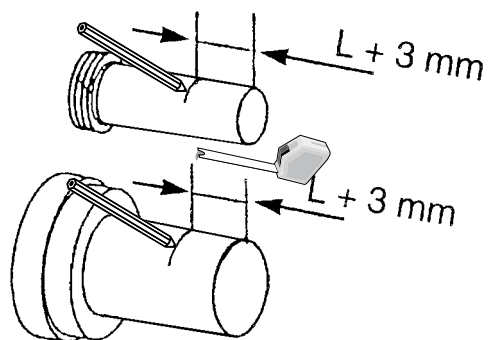

③

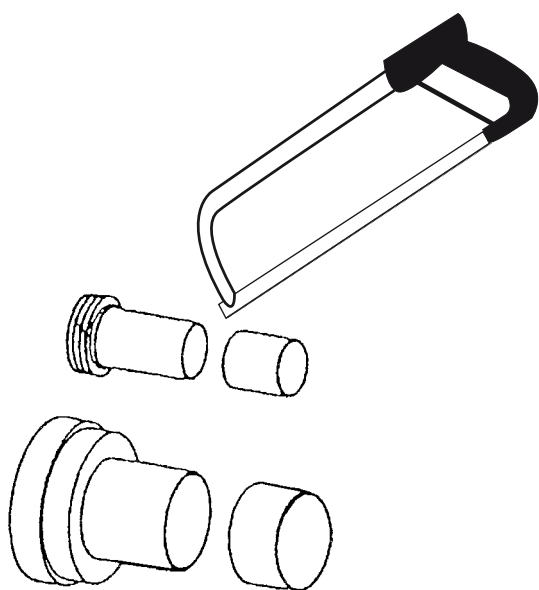


④

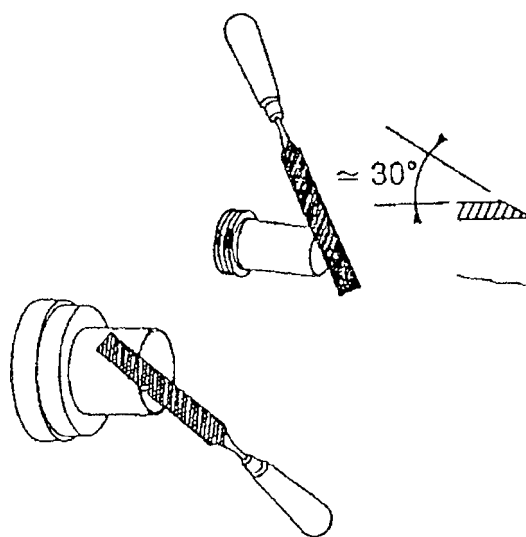


25


①

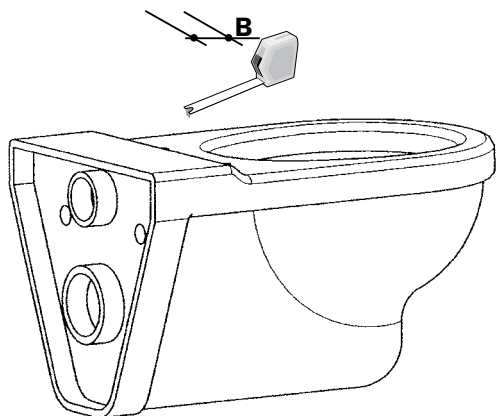



②

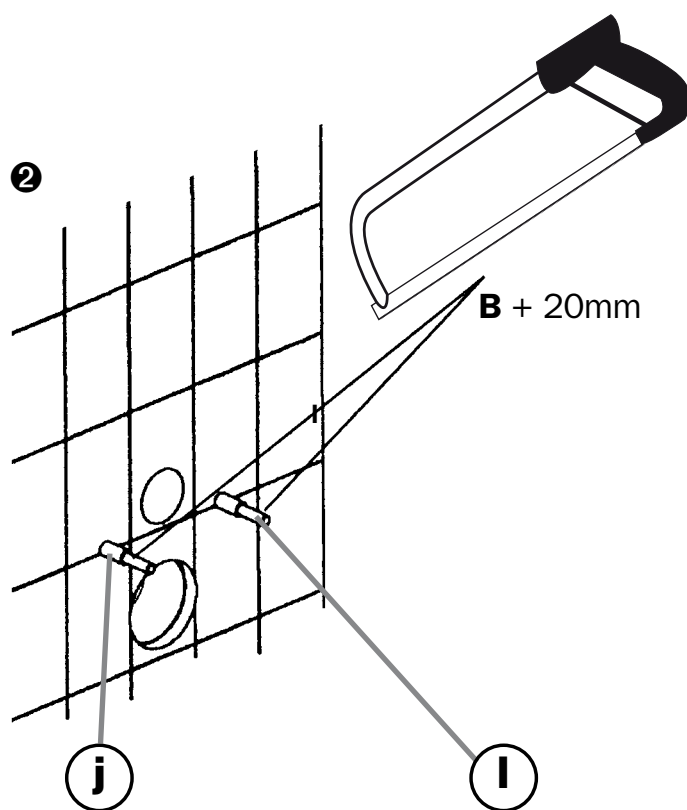


26

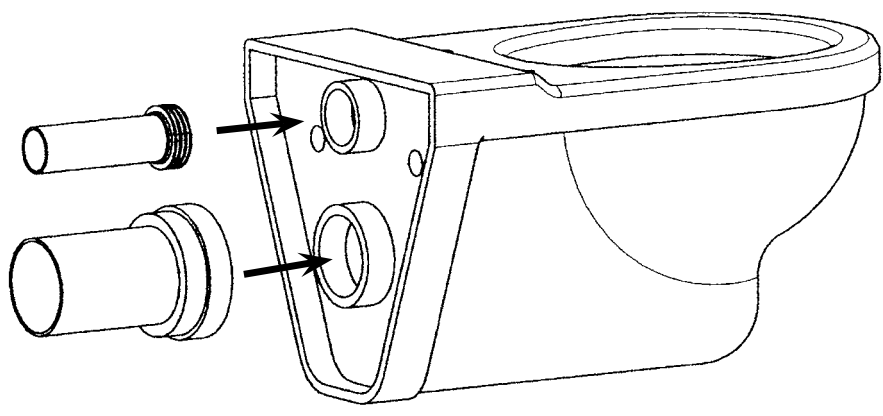


27

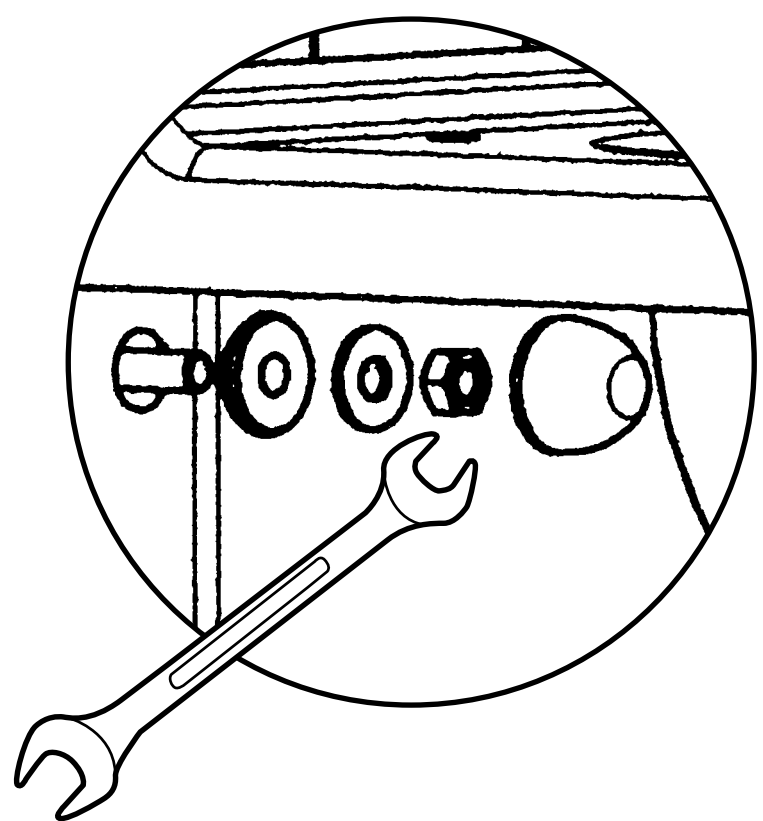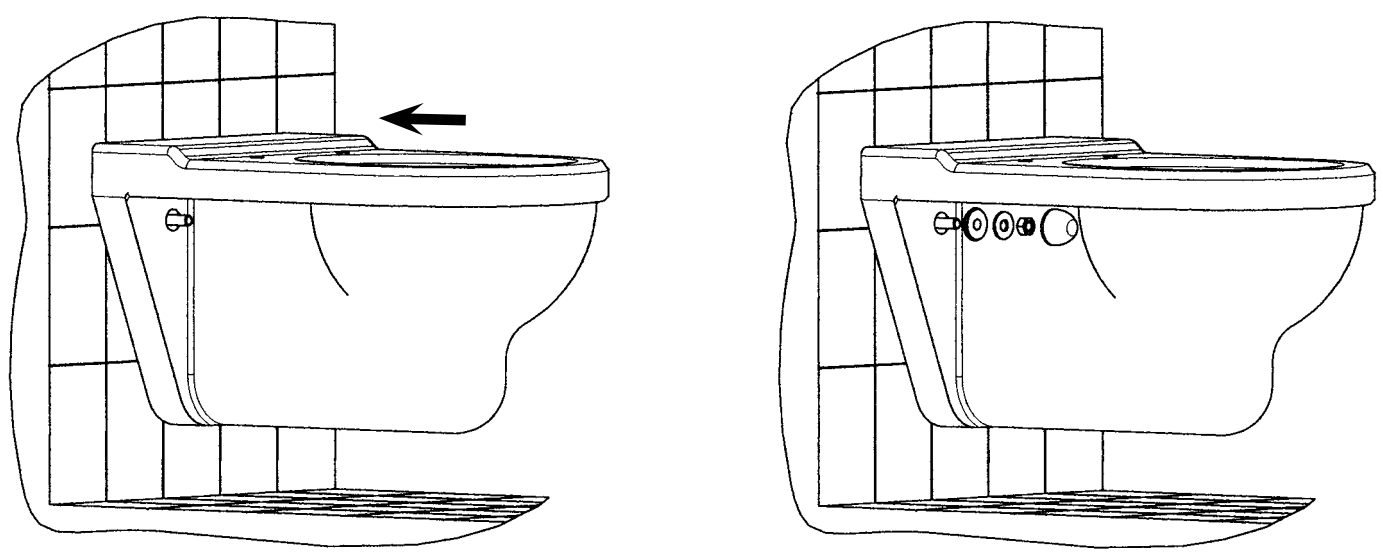

28

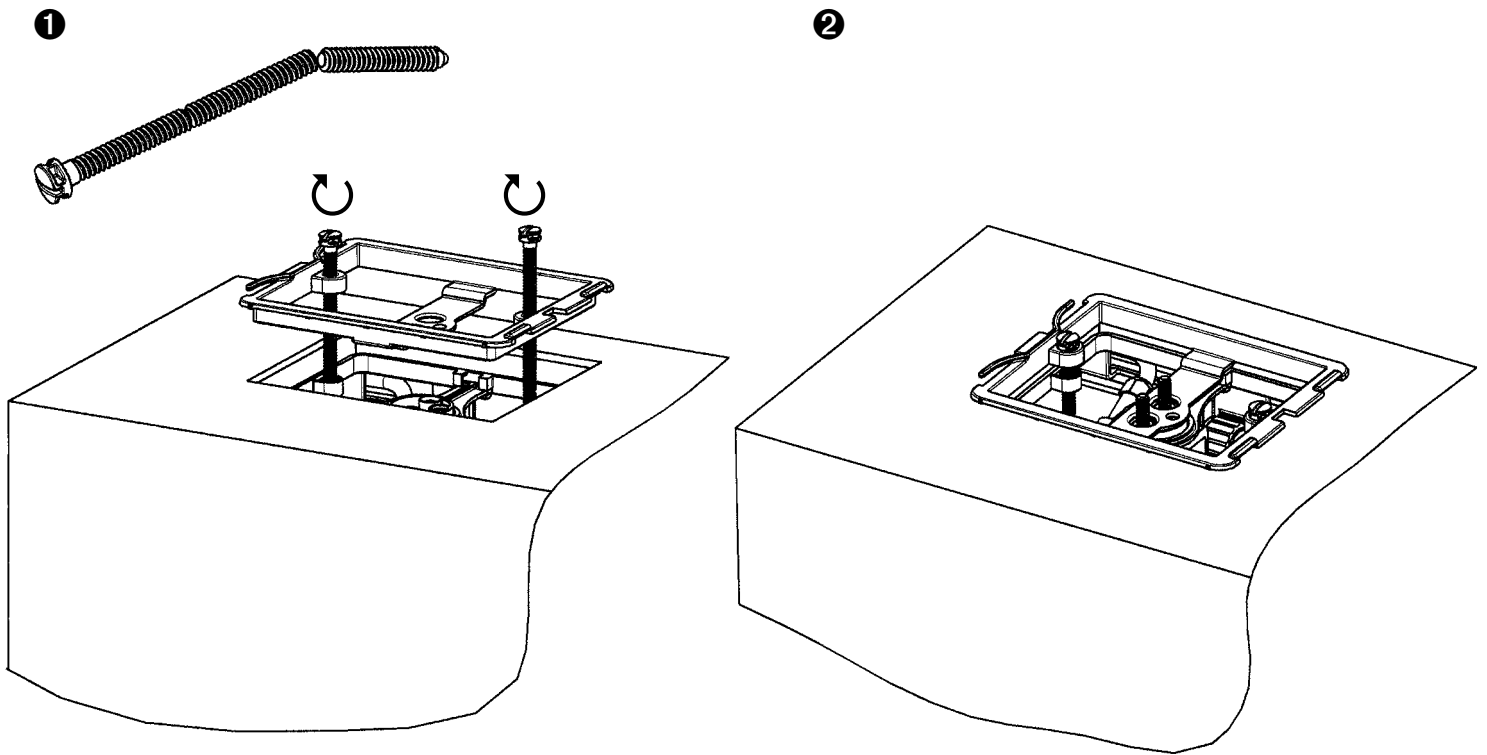

29

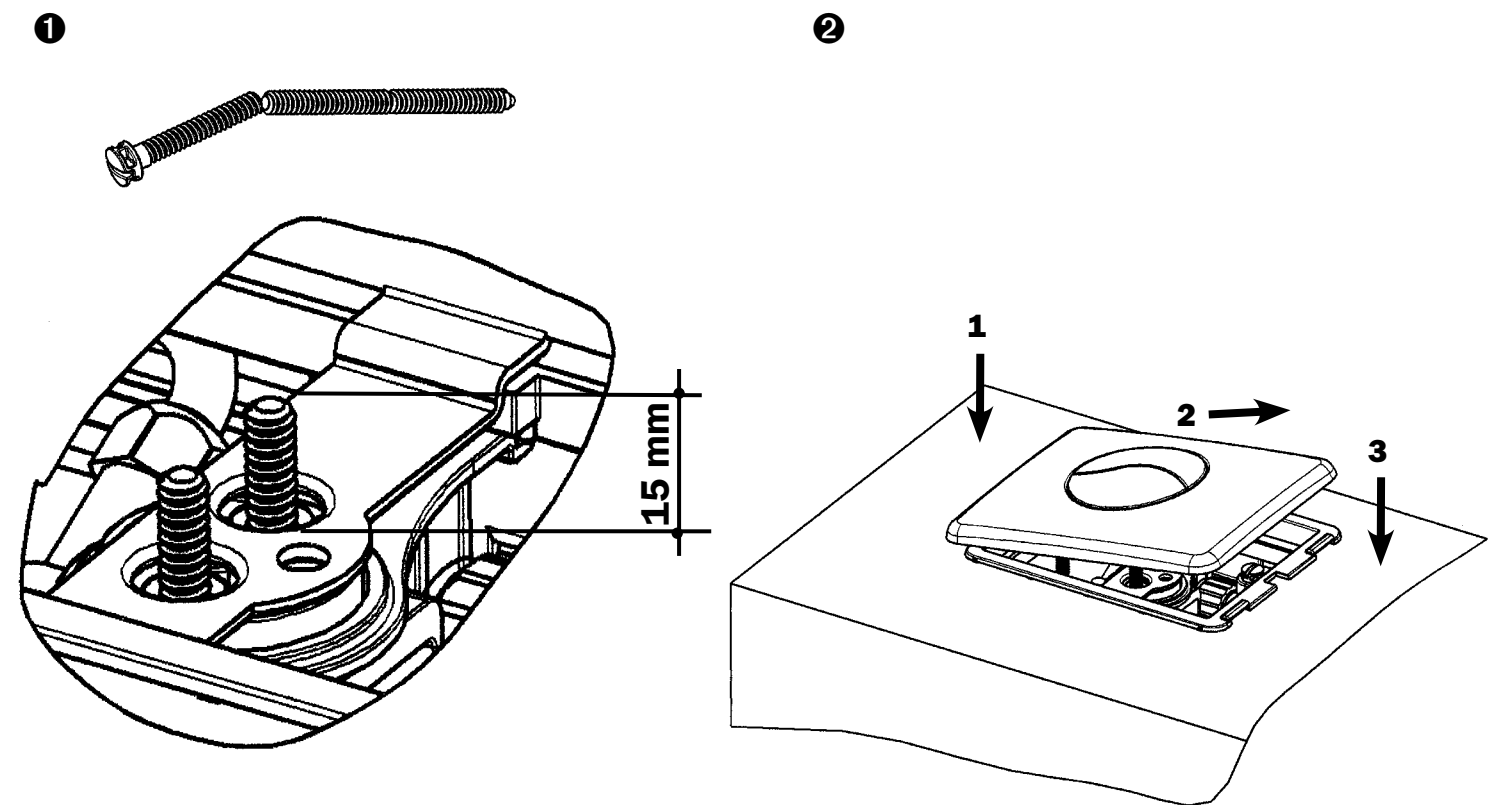

GB : Maintenance

F : Maintenance

D :

E :

S :

N :

DK :

FL :

PL :

RU :

LT :

RO :

NL :

