


**BCM 6030**




**SIAMP**







**User manual**

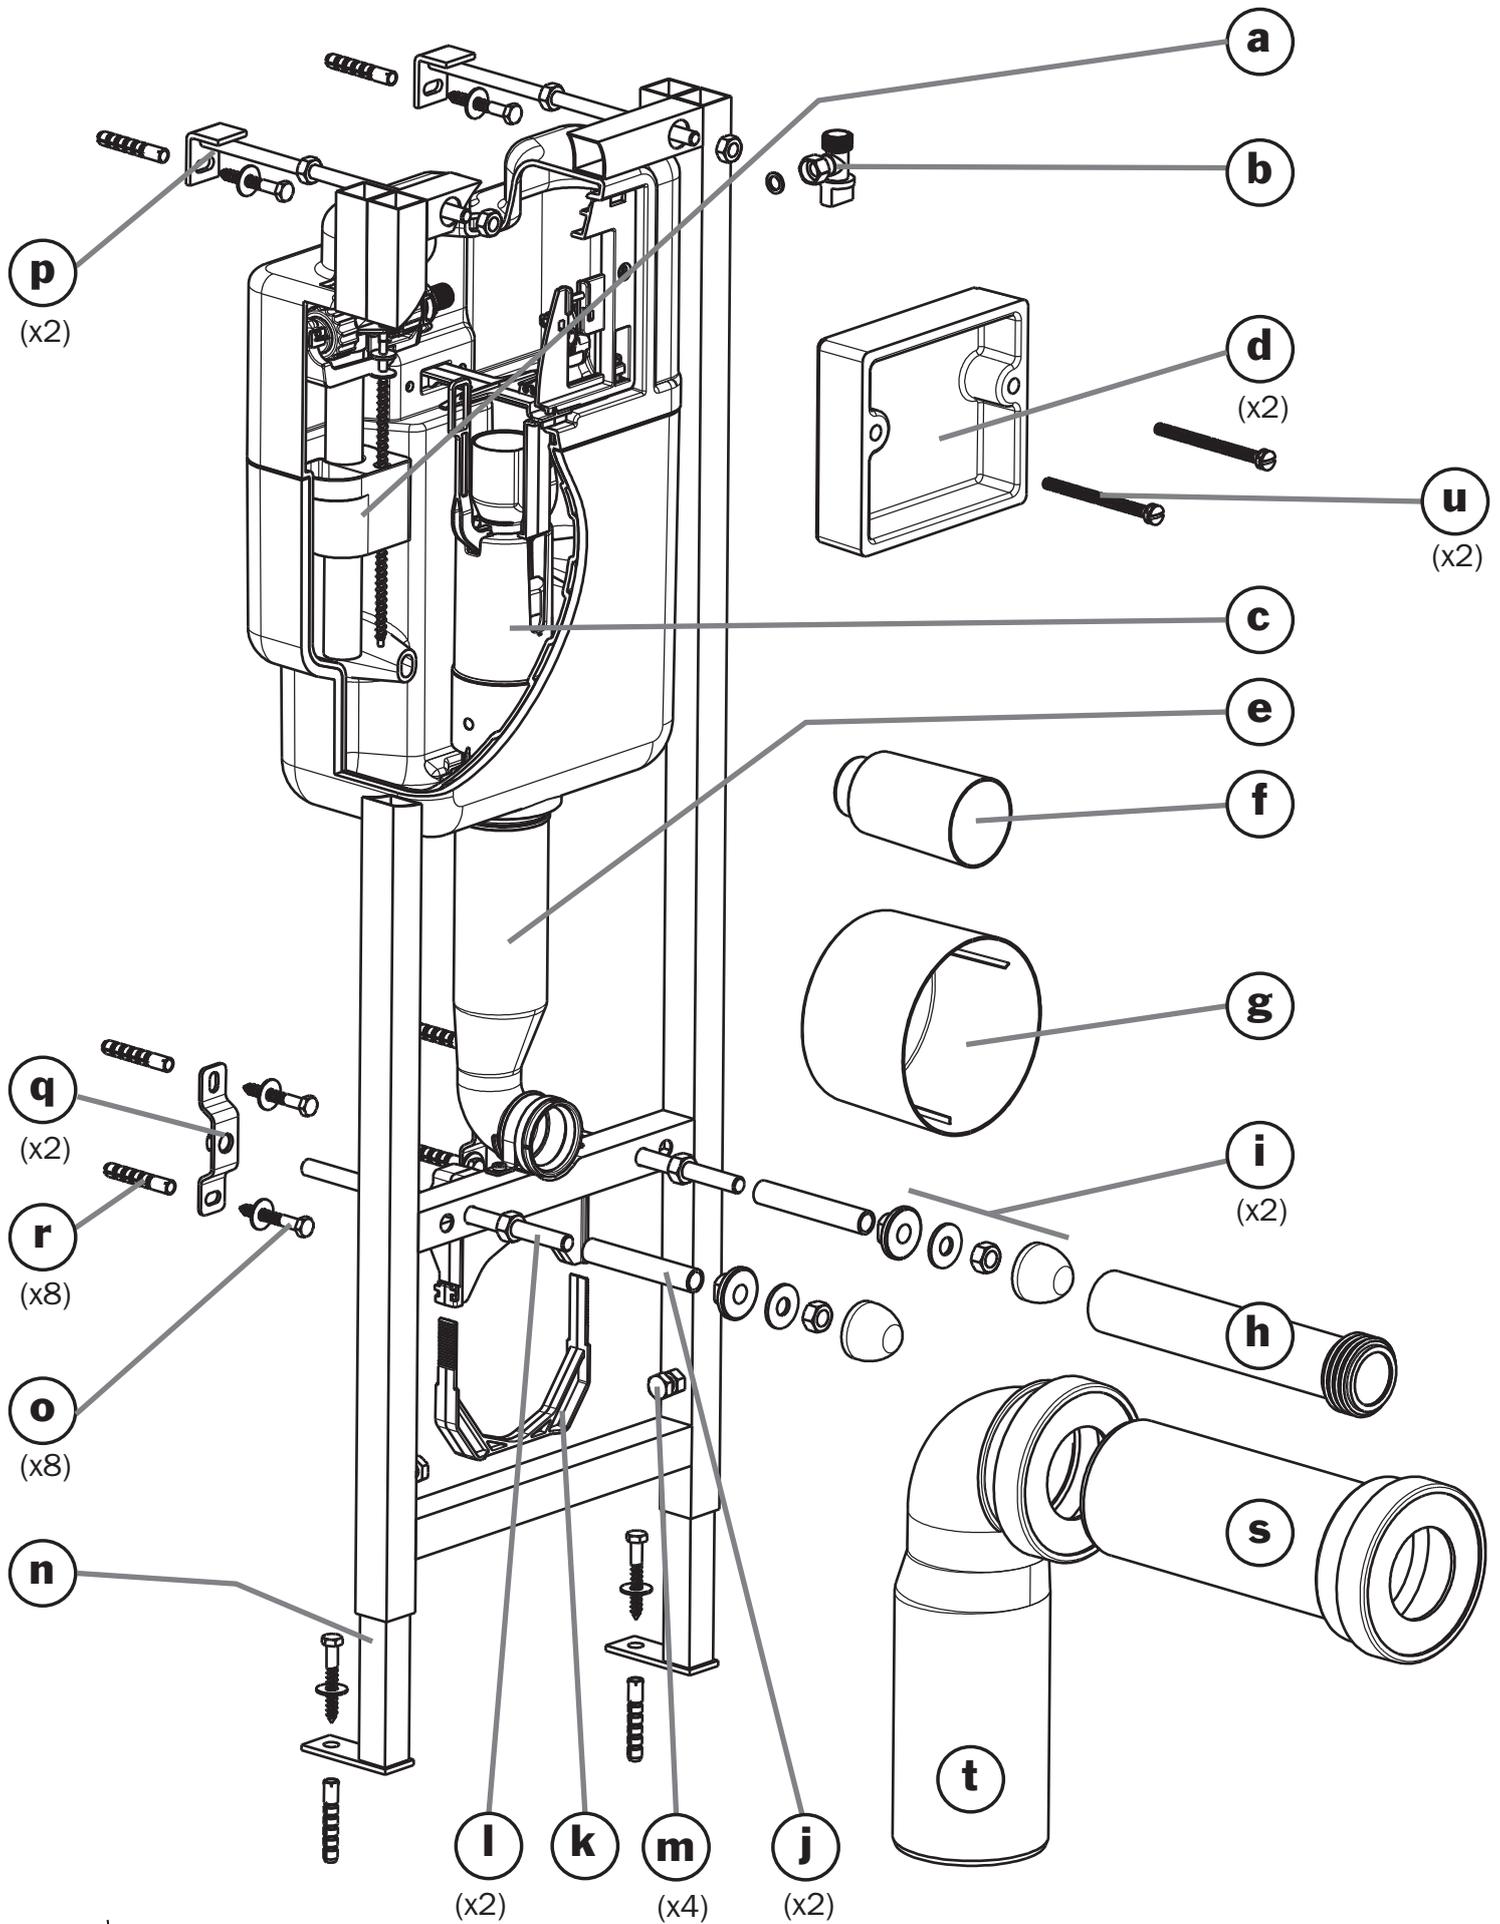


-  M12 (x6)
-  M10 (x4)
-  8x22 (x2)

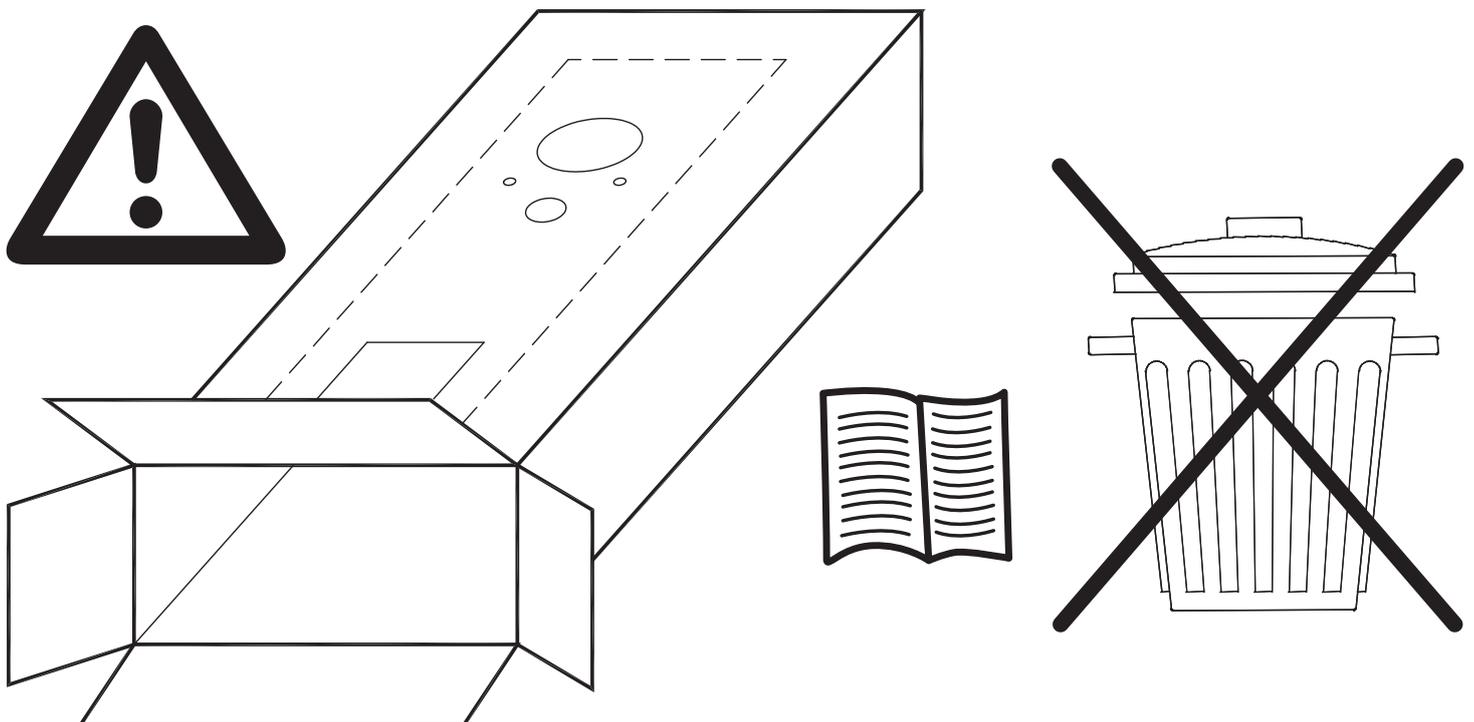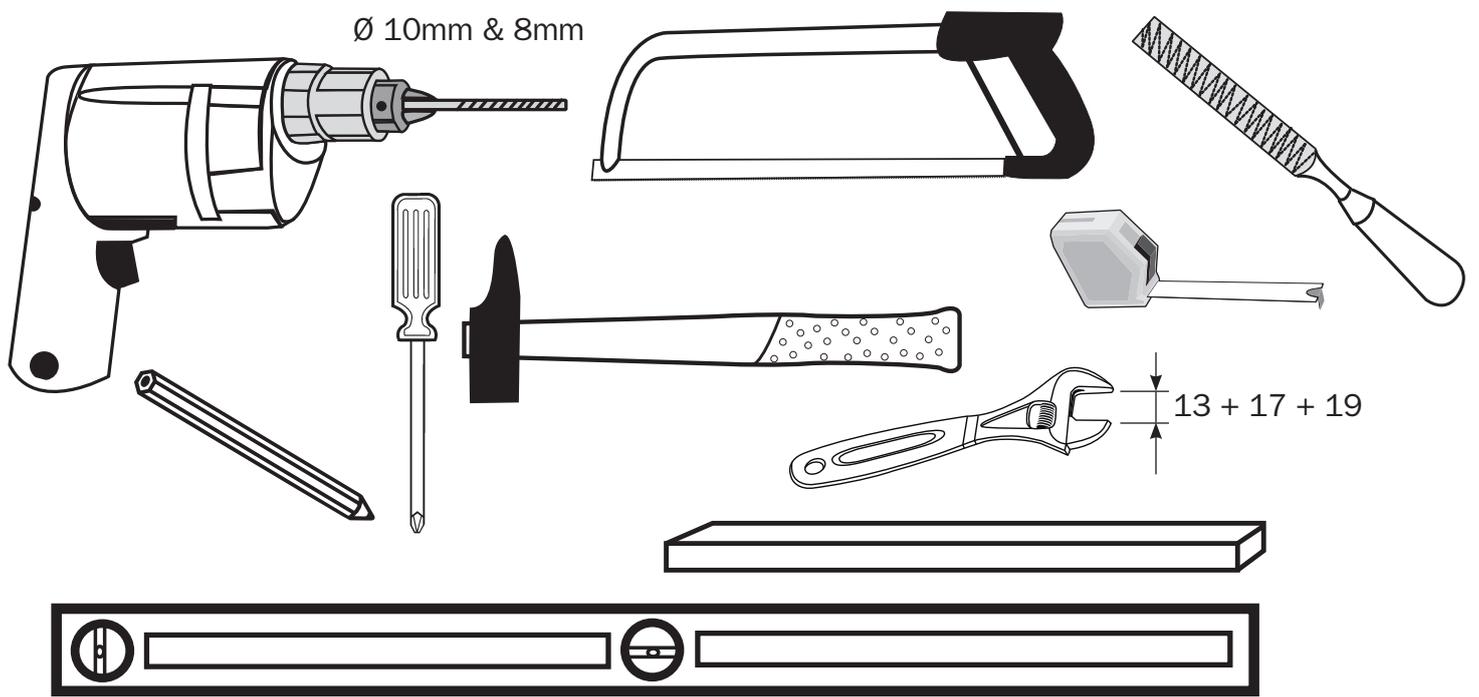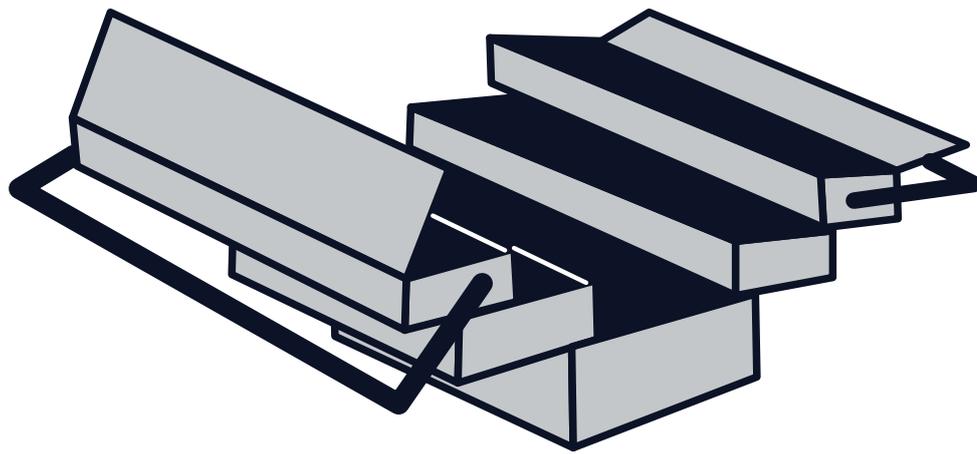

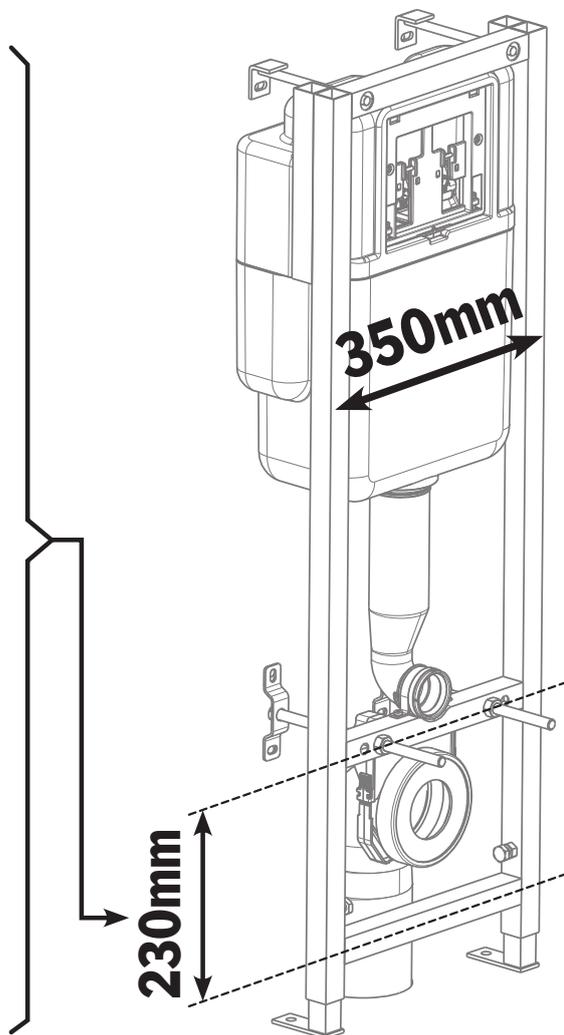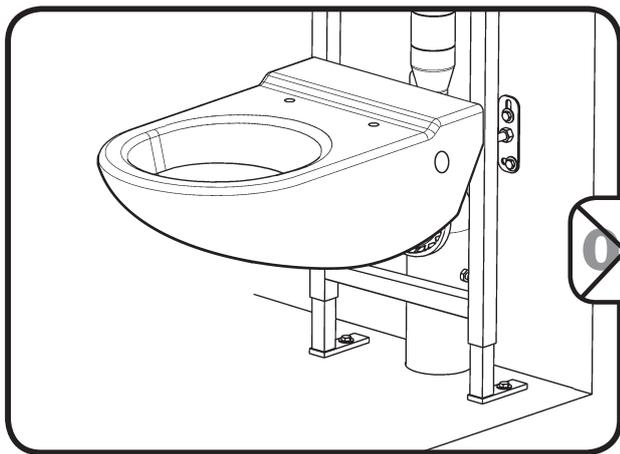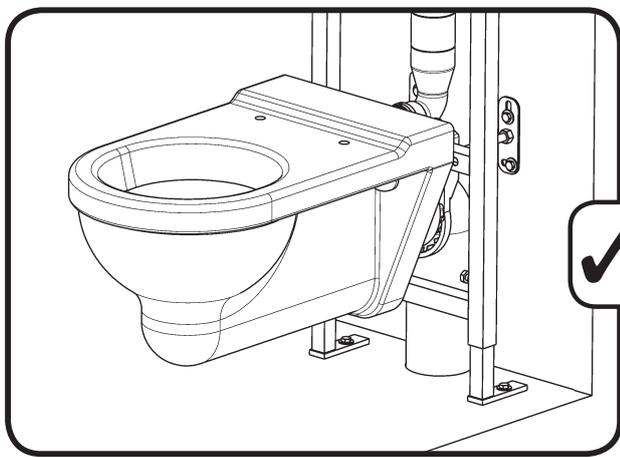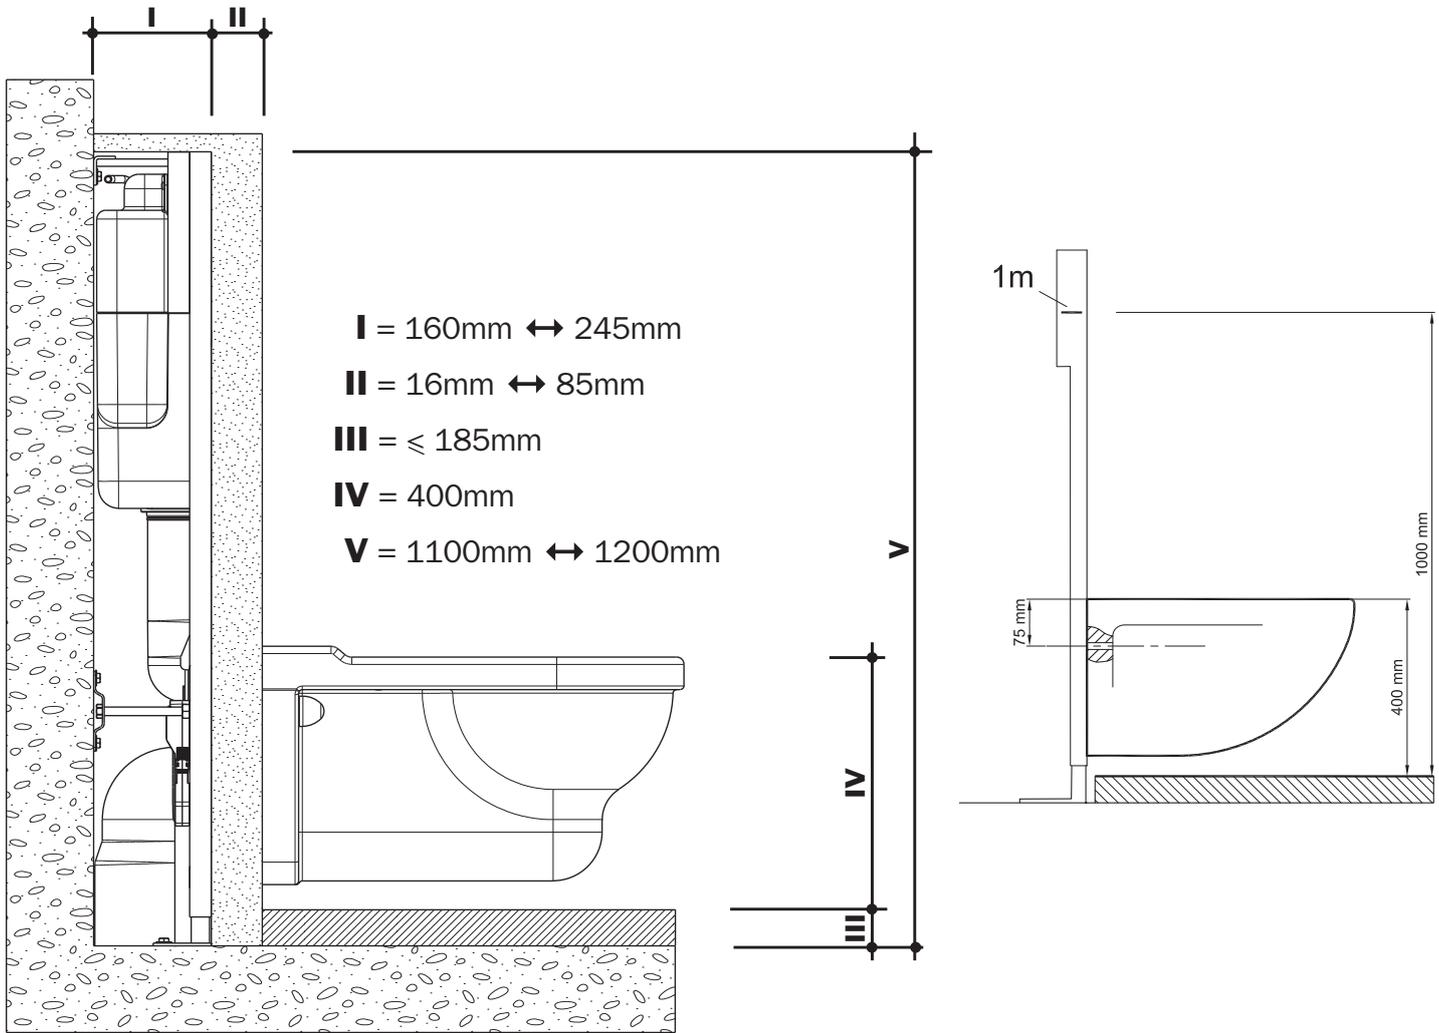


**1**

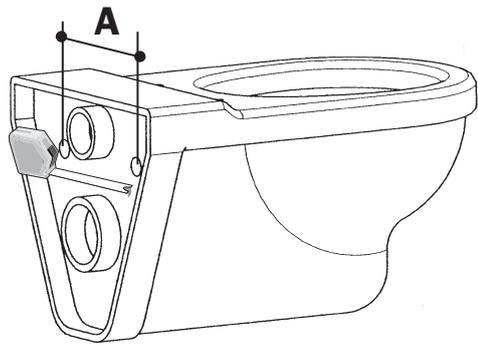


**A = 180mm → 2-1**

**A = 230mm → 2-2**



**2-1**

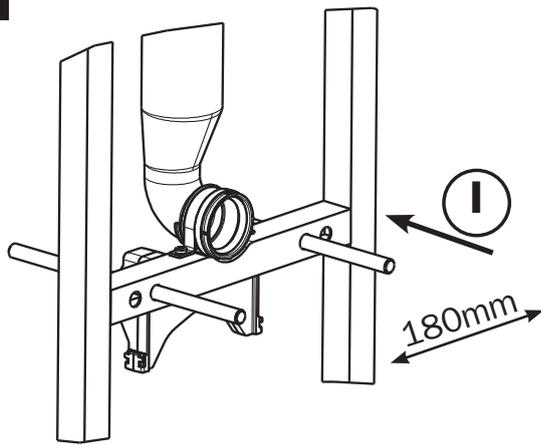


**2-2**

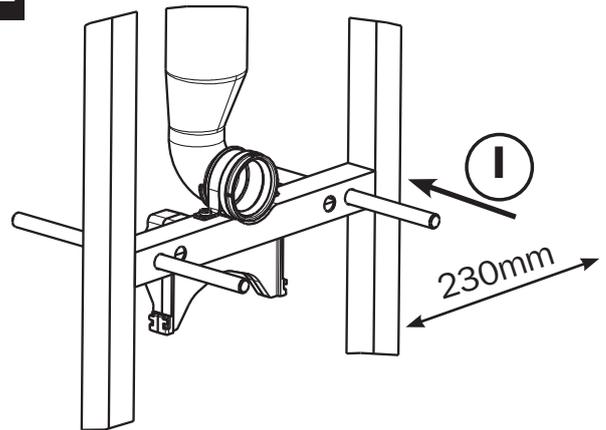


**3**

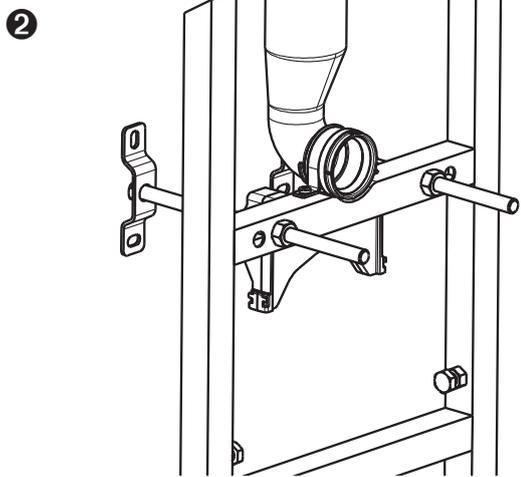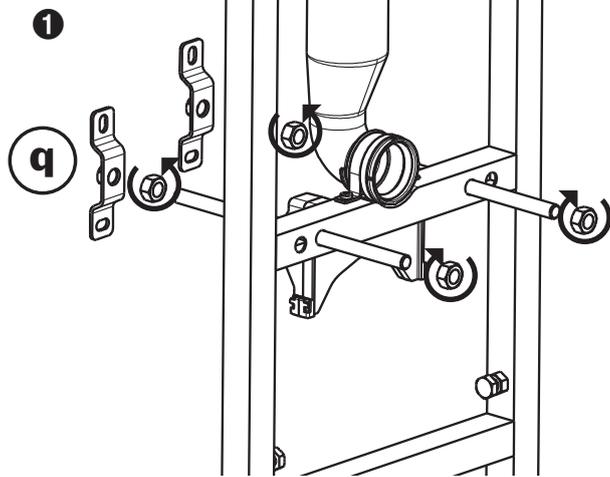


**4**

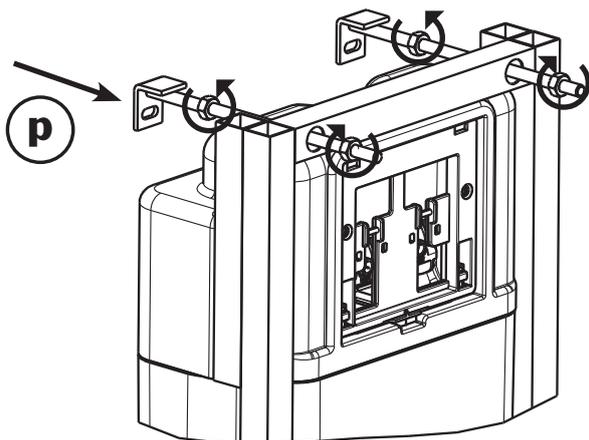


5

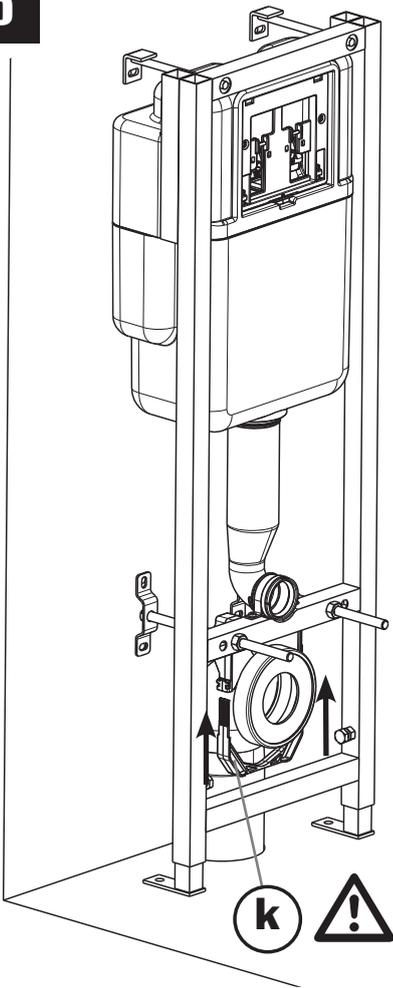


6

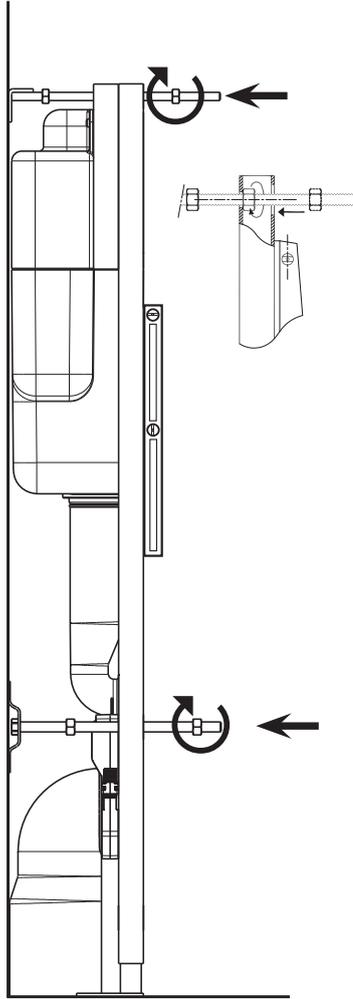


7

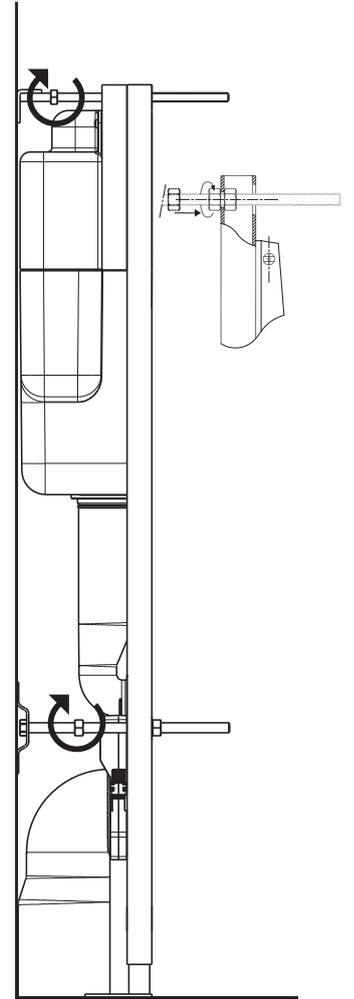


8

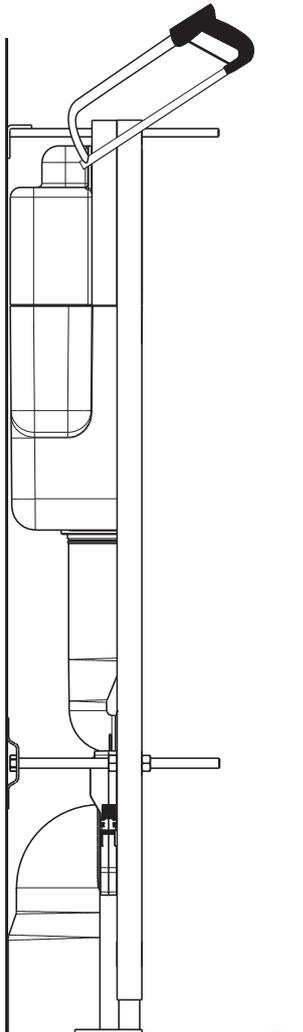


9

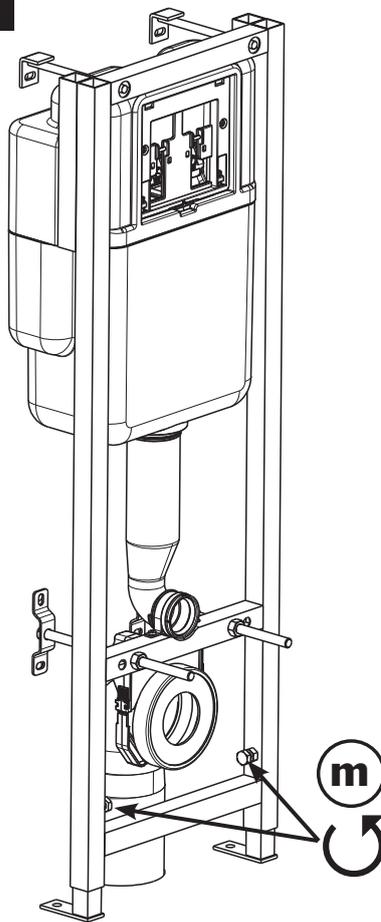


10

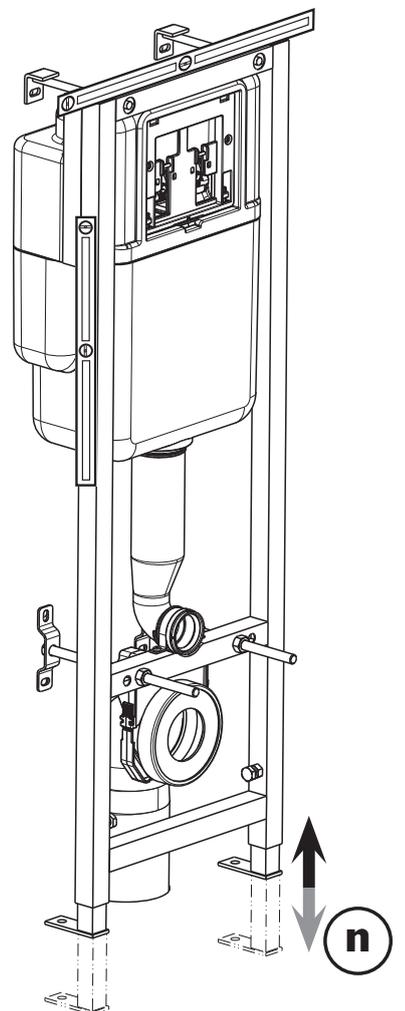


**11**

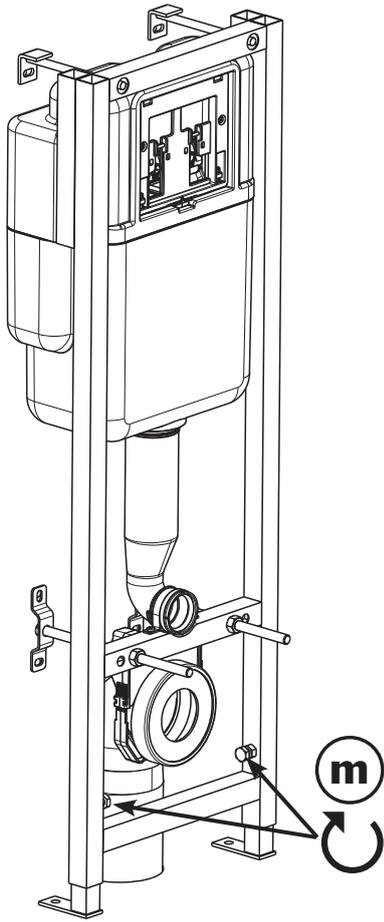


**12**

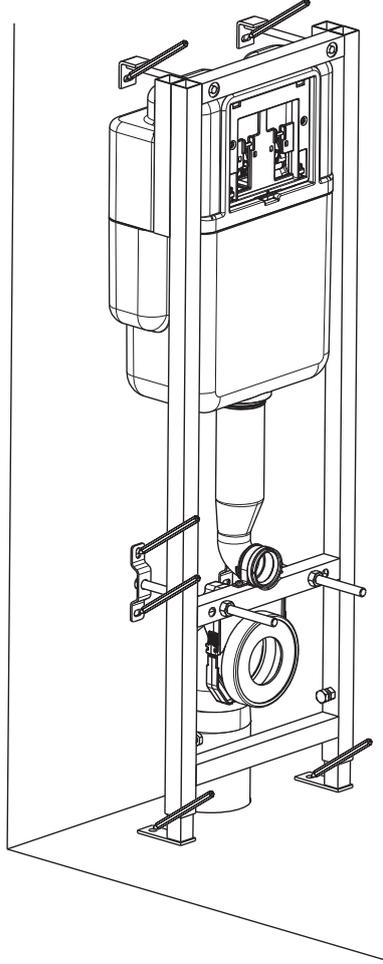


**13**

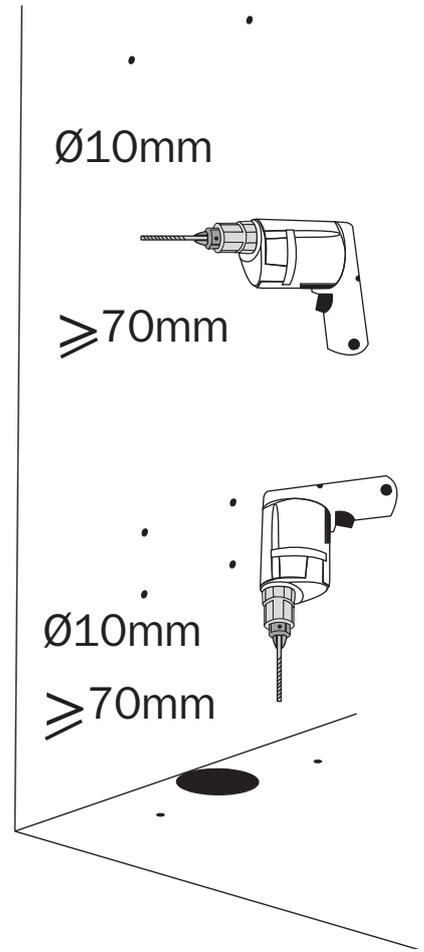


**14**

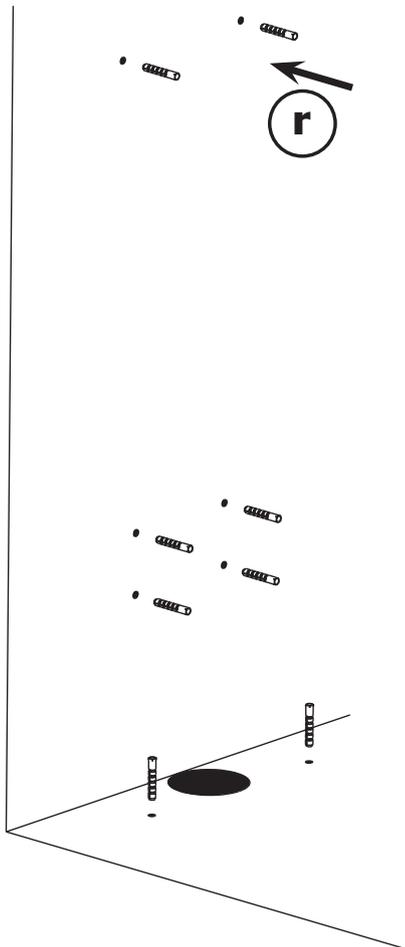


**15**

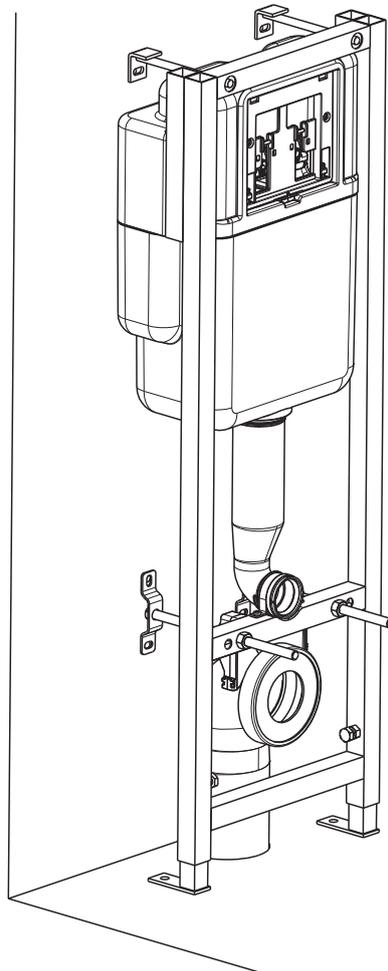


**16**

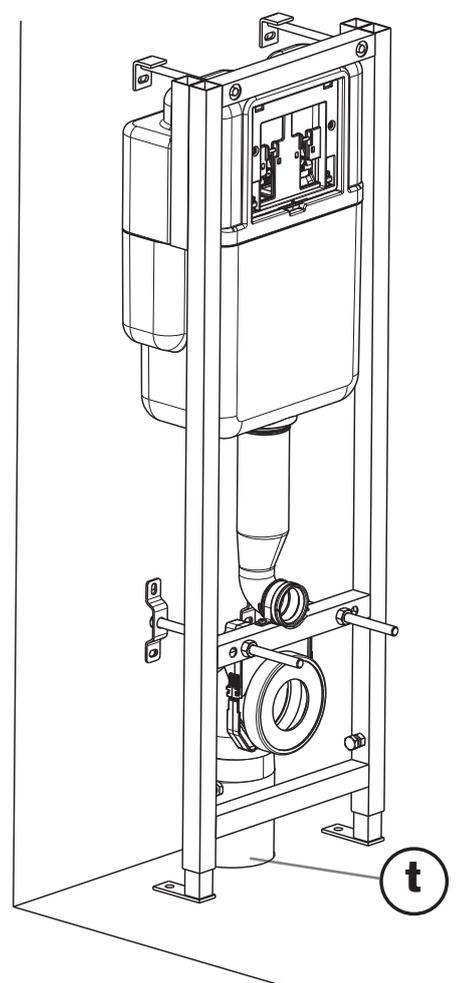


17

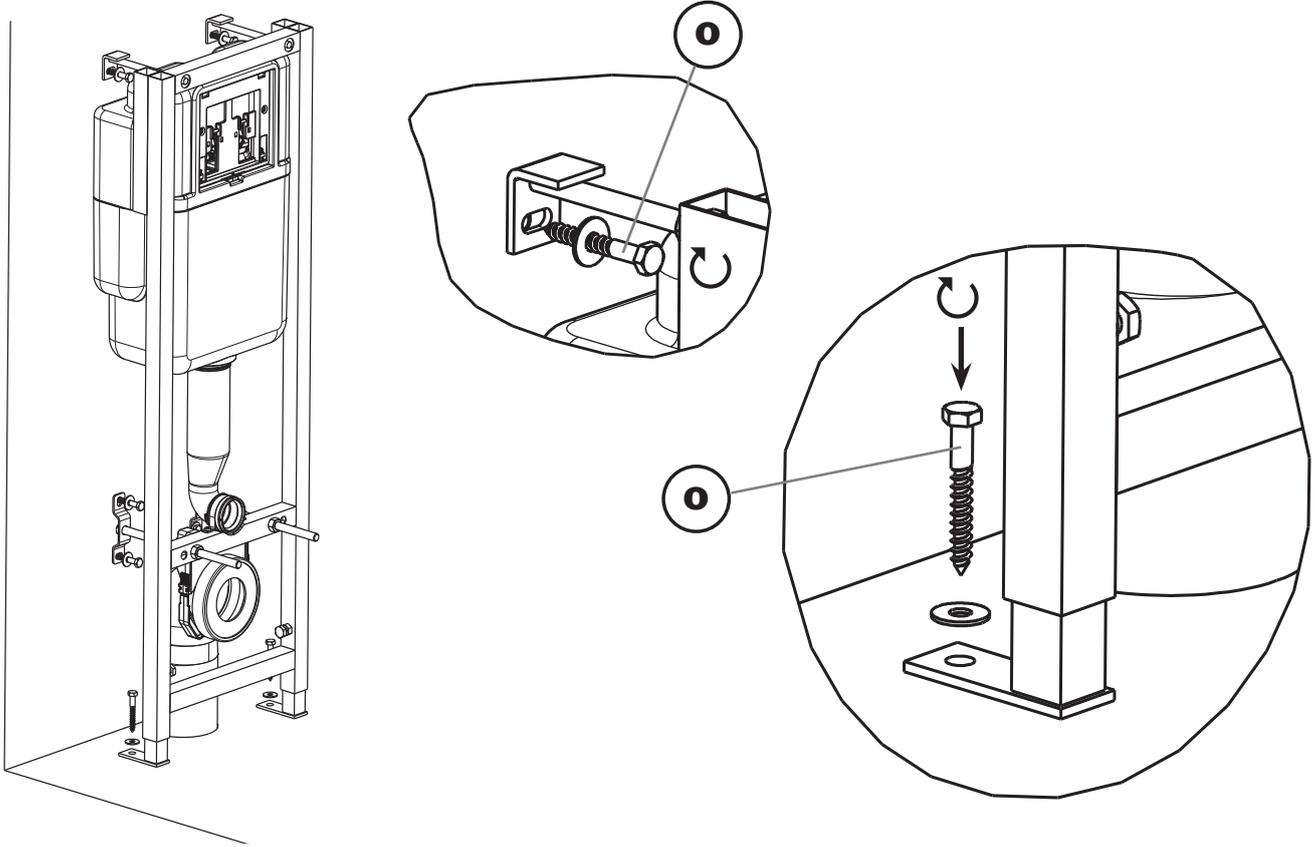

18

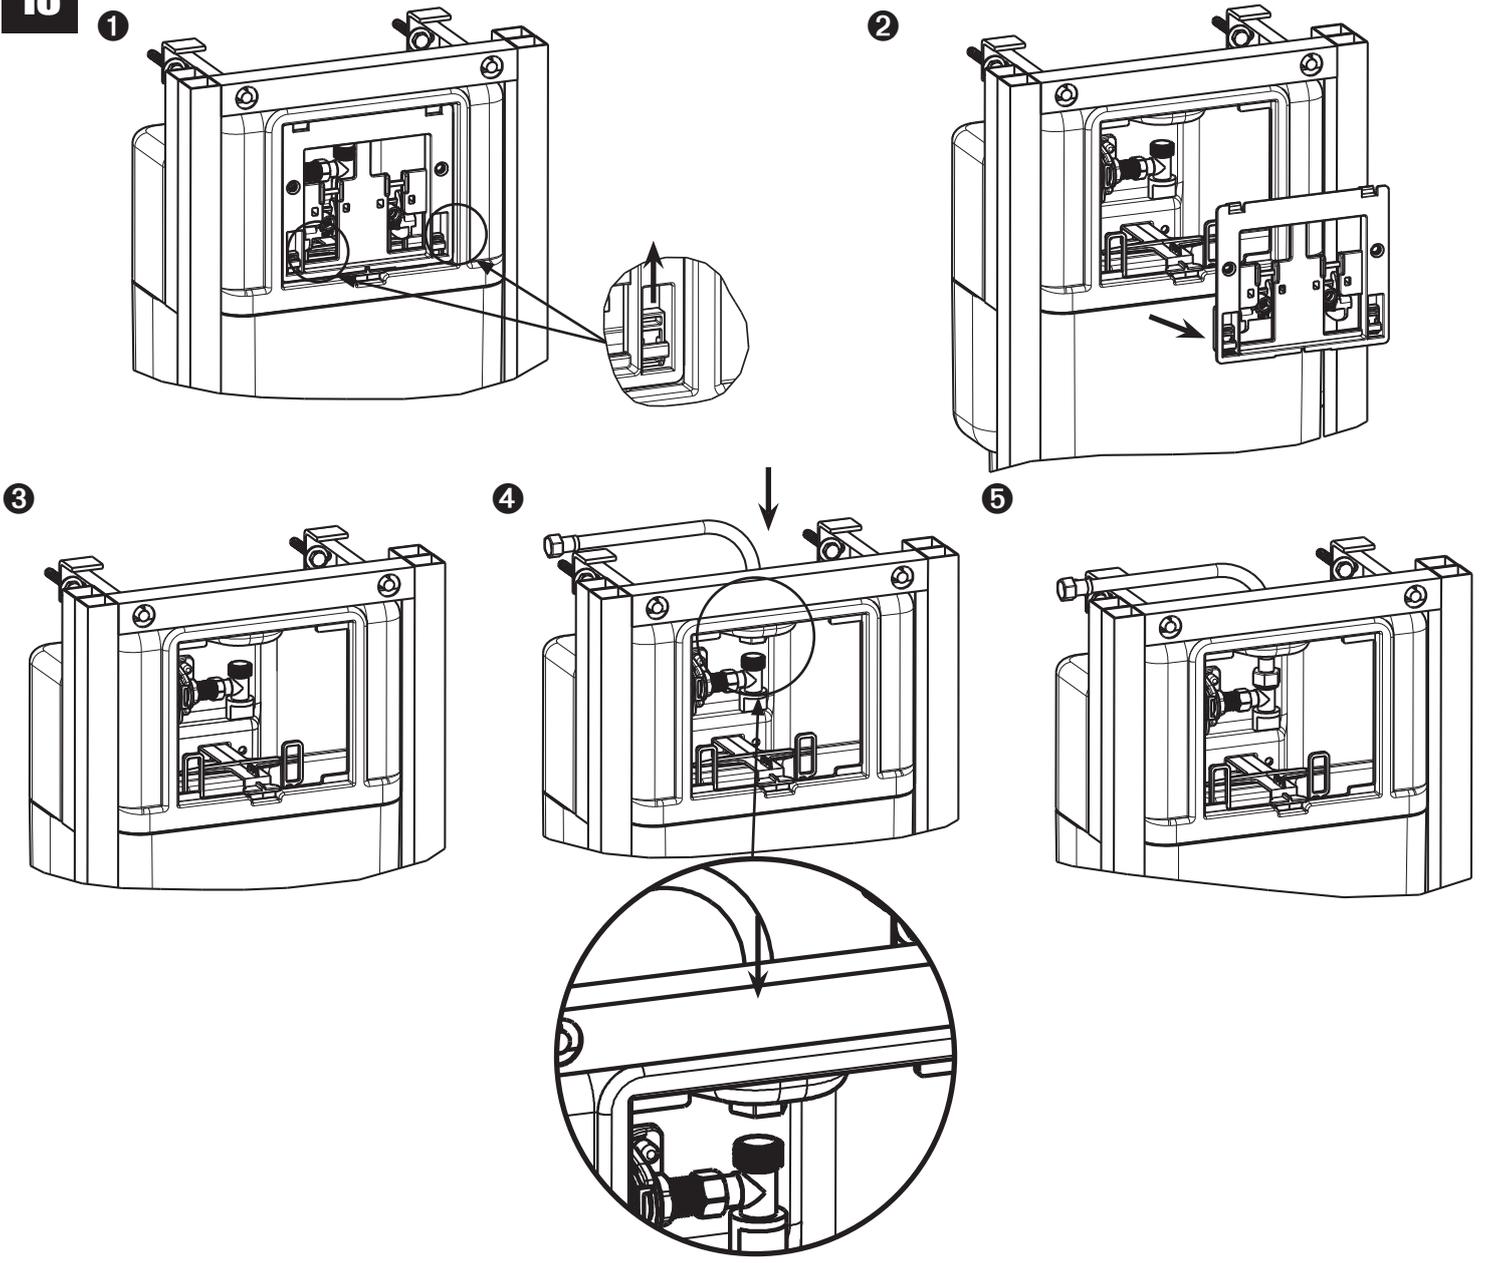


19





3


1

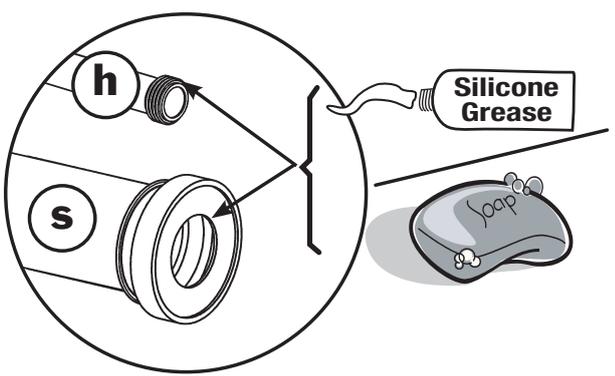


2

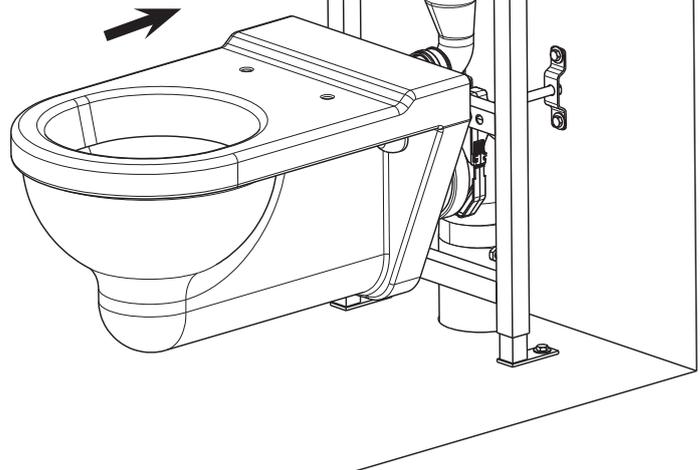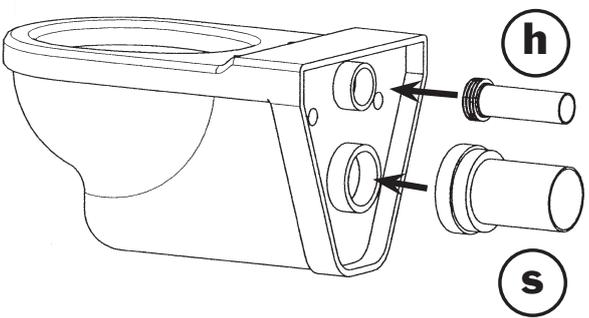




4

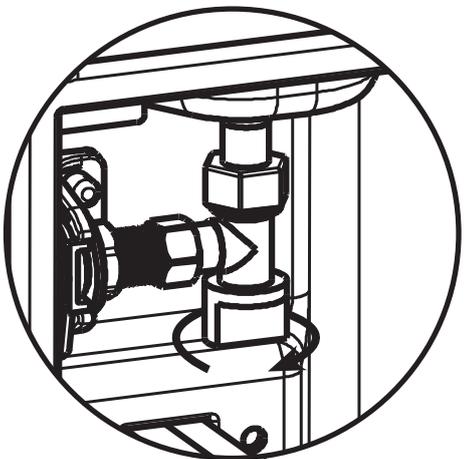


5

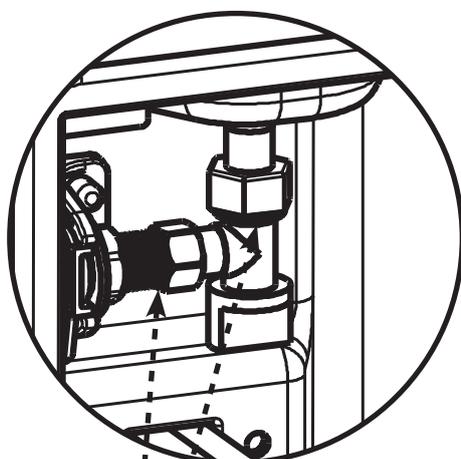


6

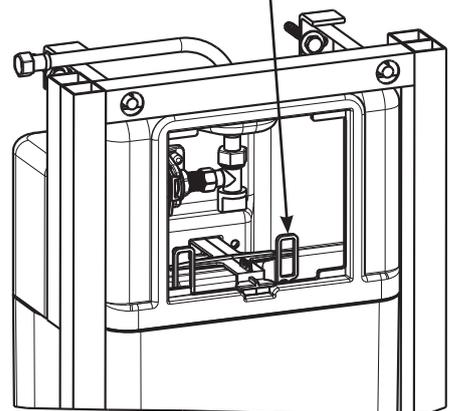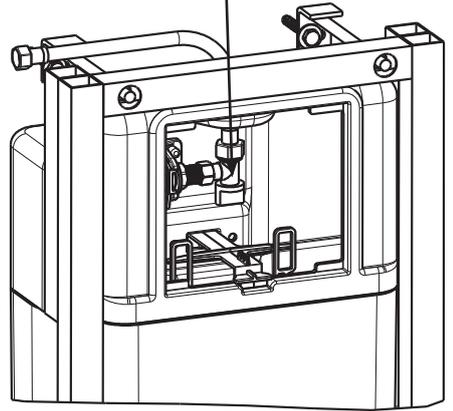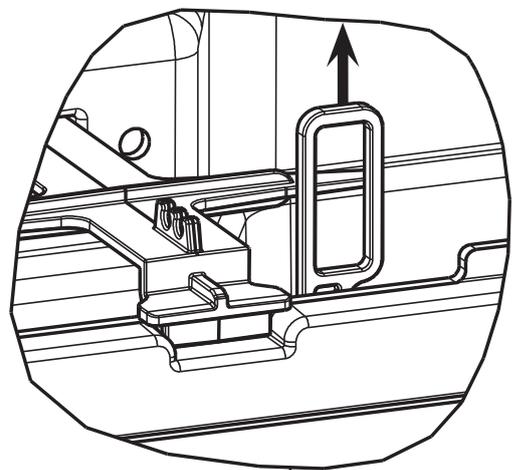

7

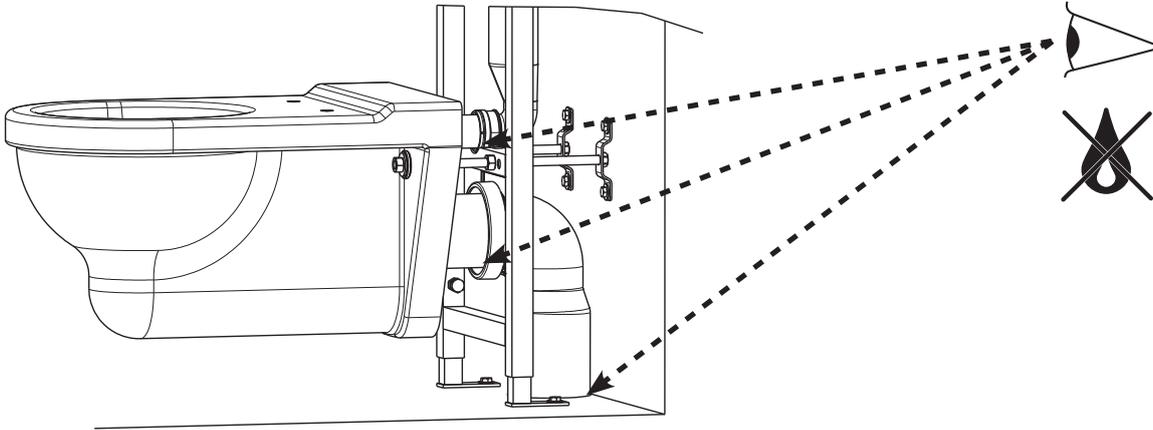

8

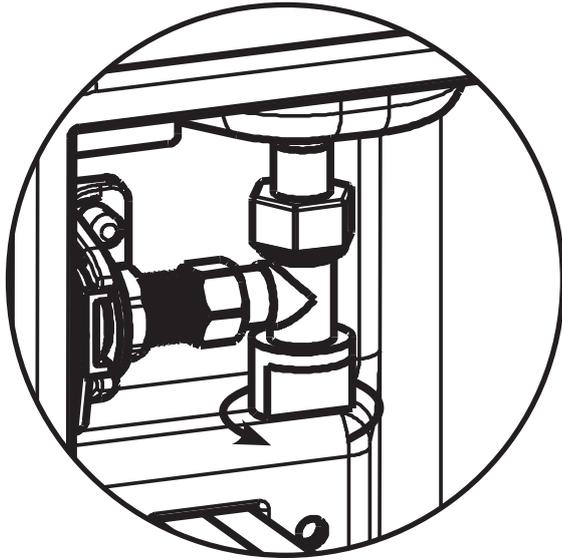


9





20

1





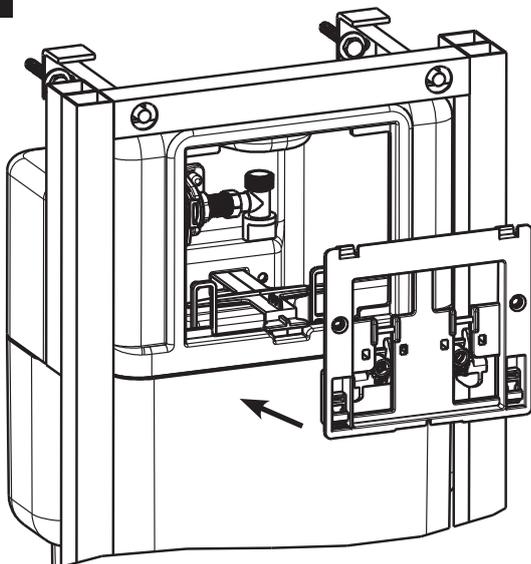


2


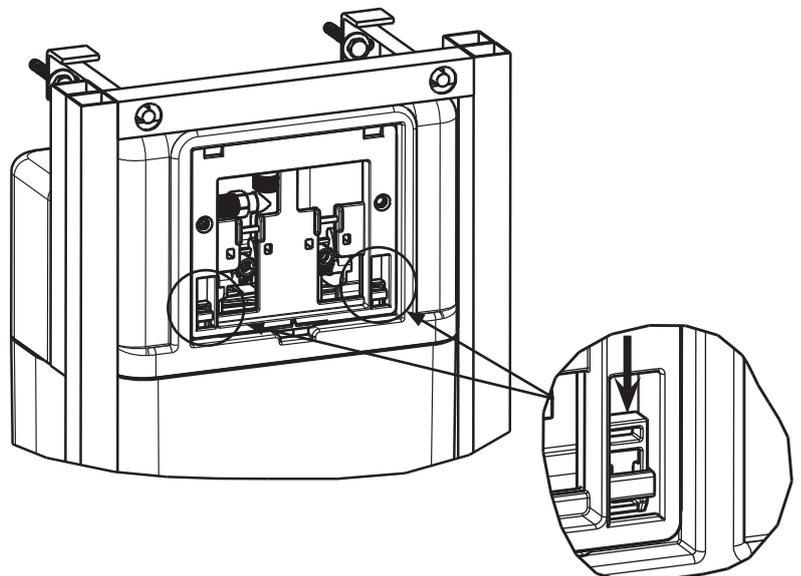


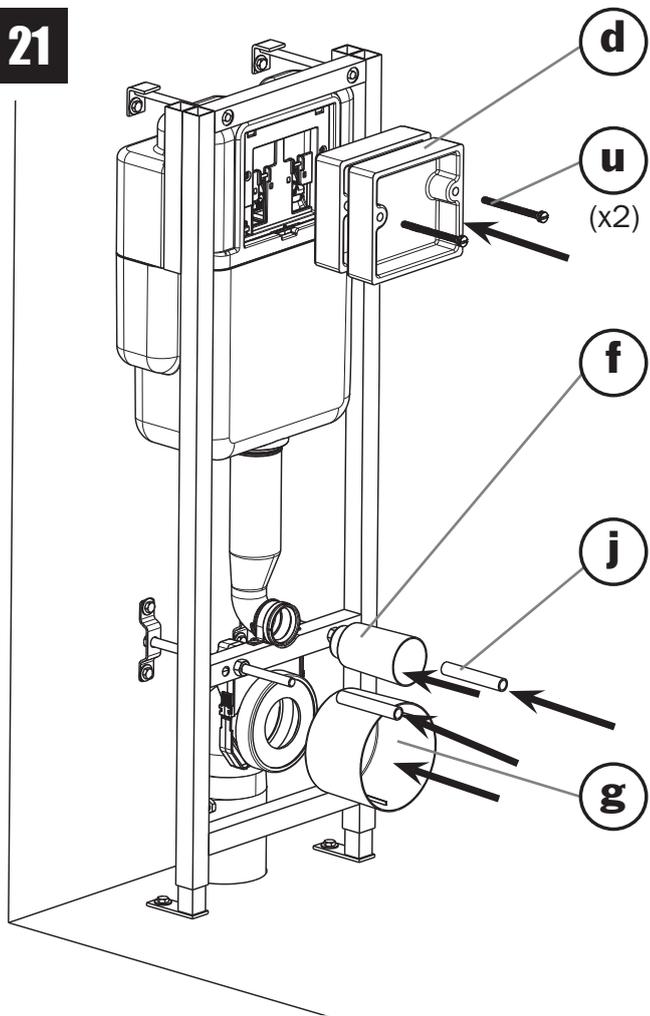**21****22**

Make the cladding, for the preliminary punching out of the various holes use the measuring gauge on the back of the packing. The covering must be fixed to the support structure.

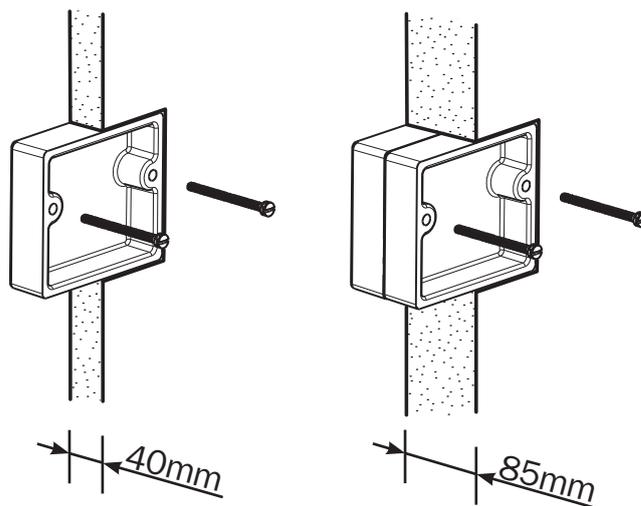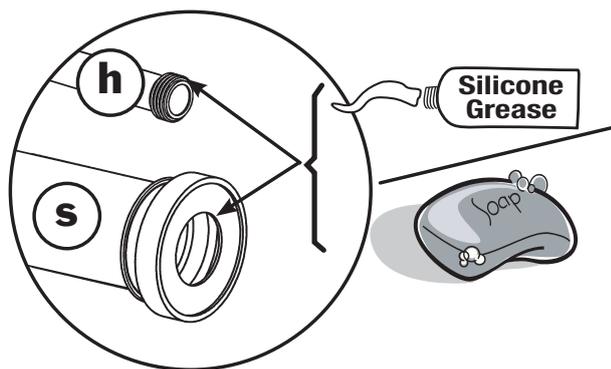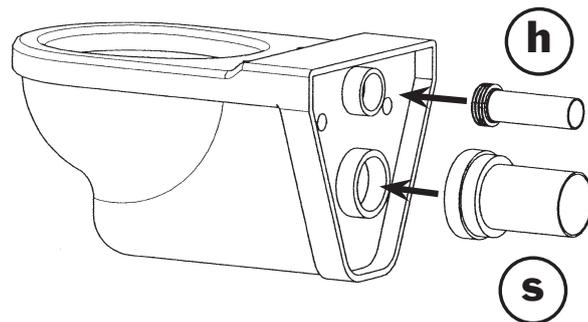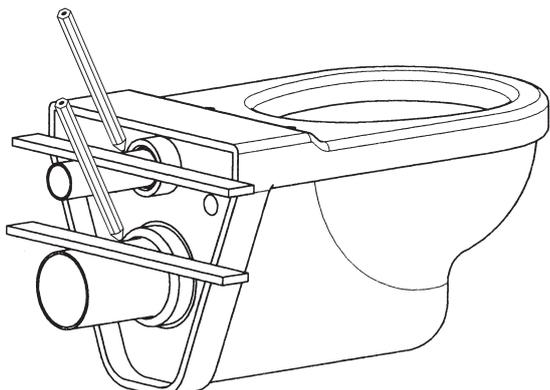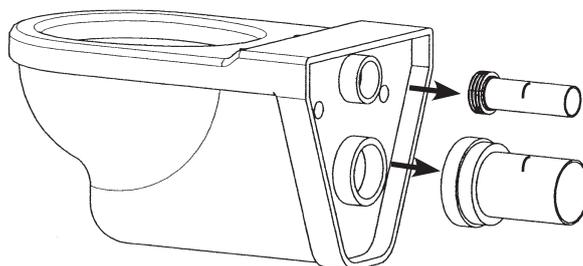
**1****2****3****4**

24

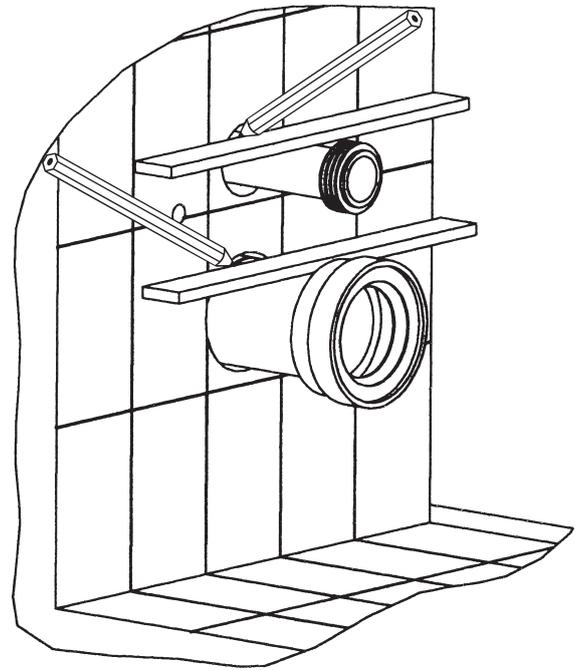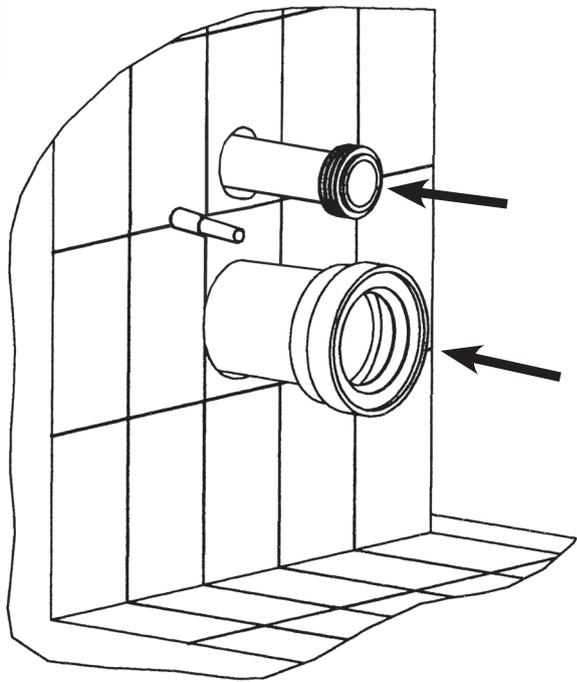


25


1

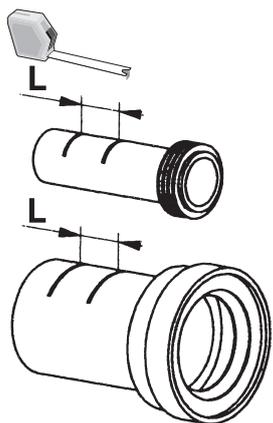


2

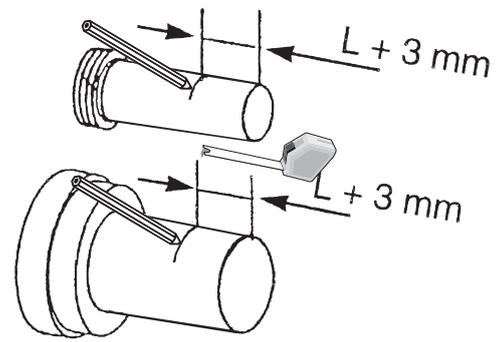

3

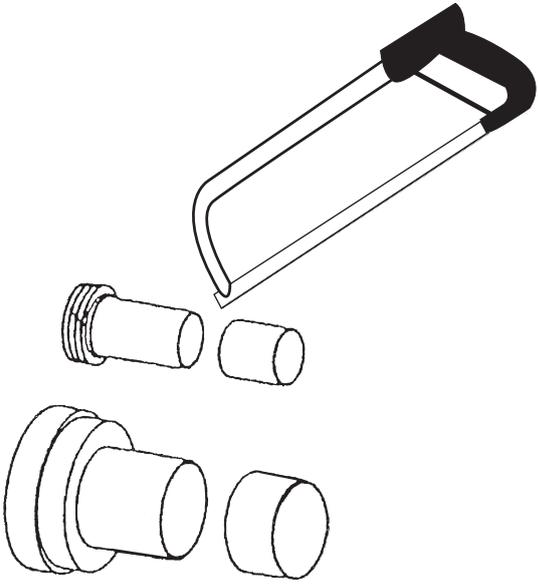


4

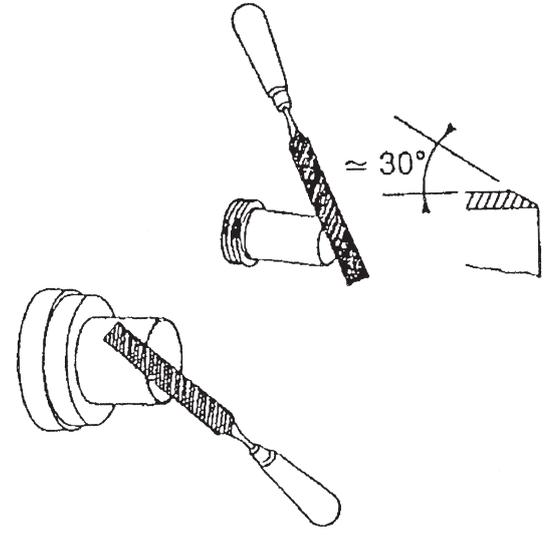


**26**


**1**

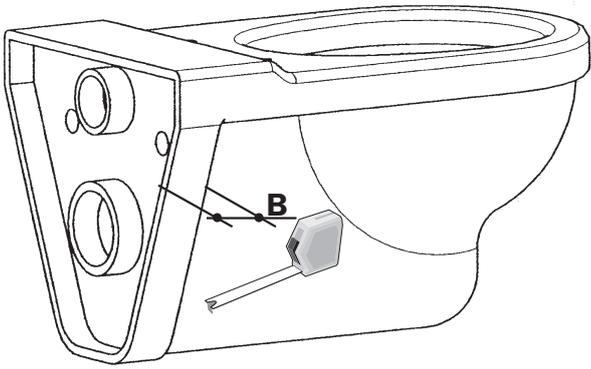

**2**

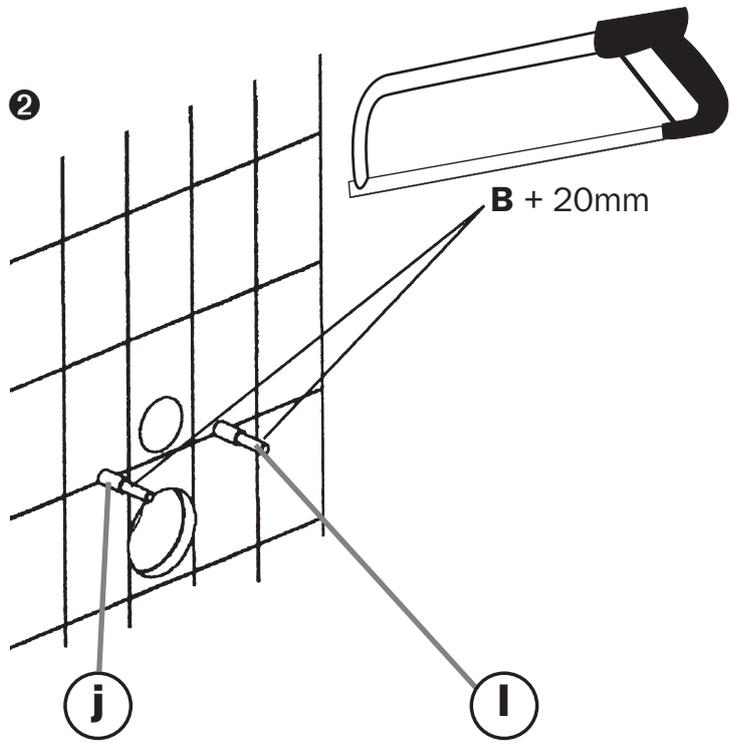


**27**

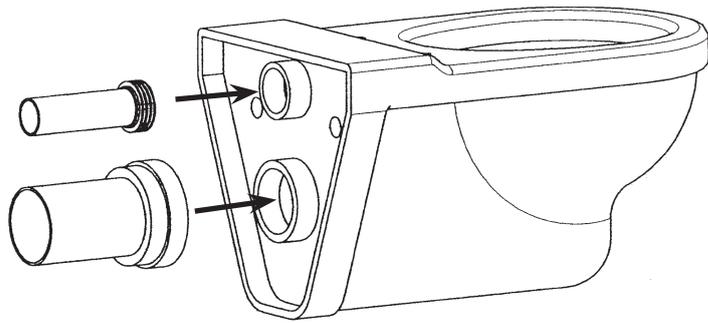


**28**

**1**

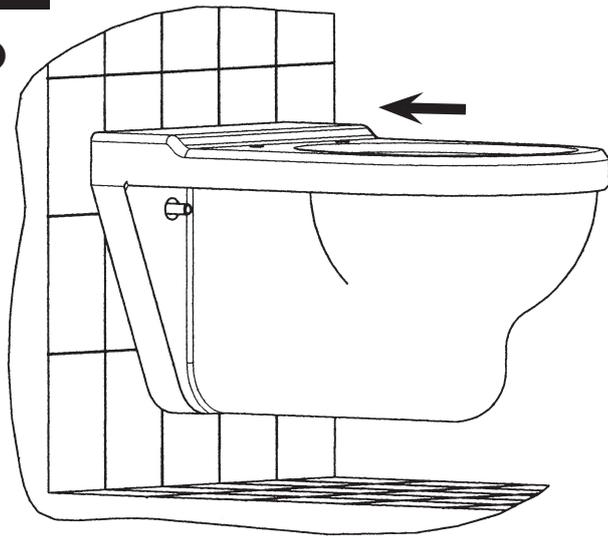


**2**

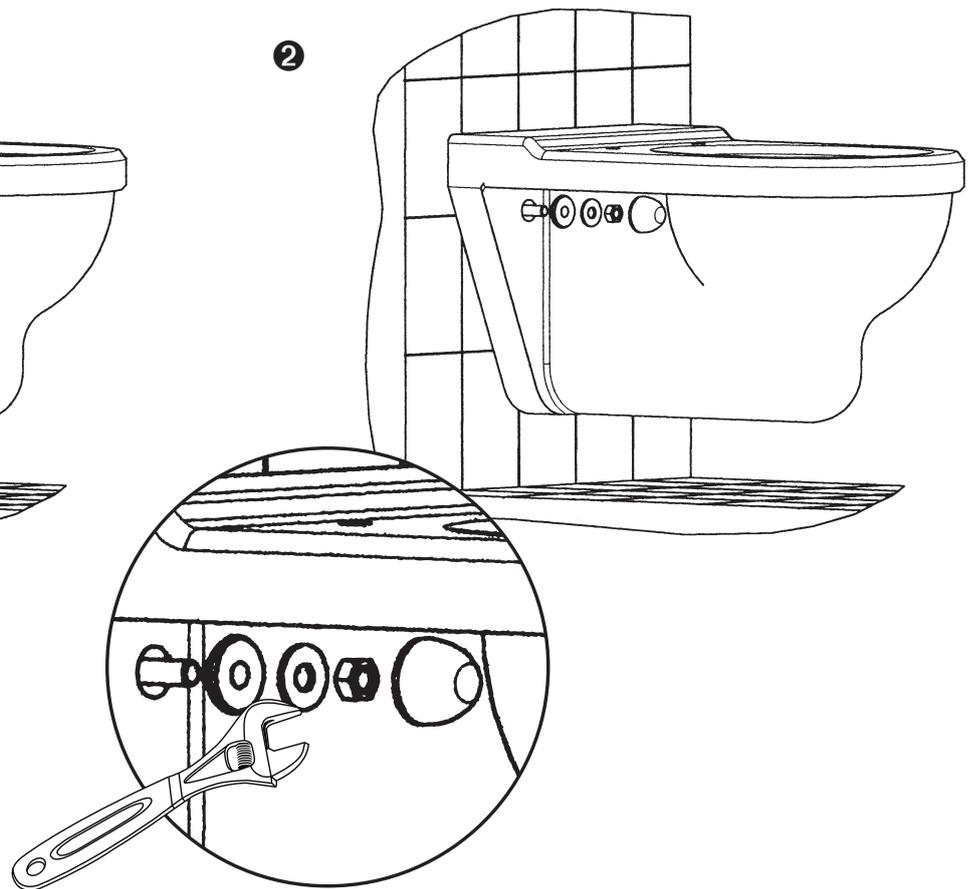


**29**

**1**

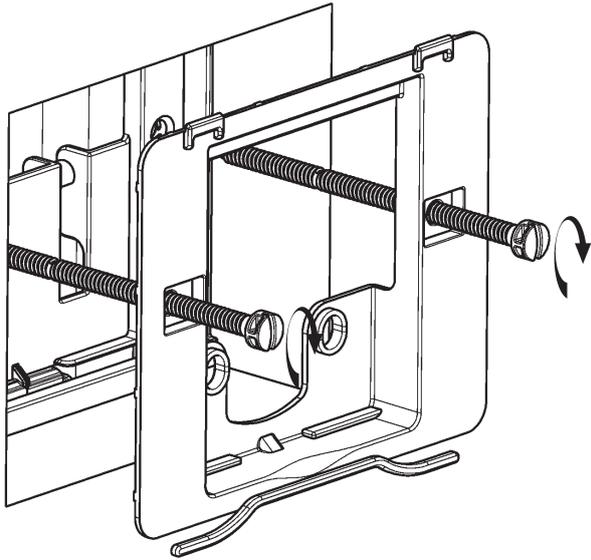


**2**

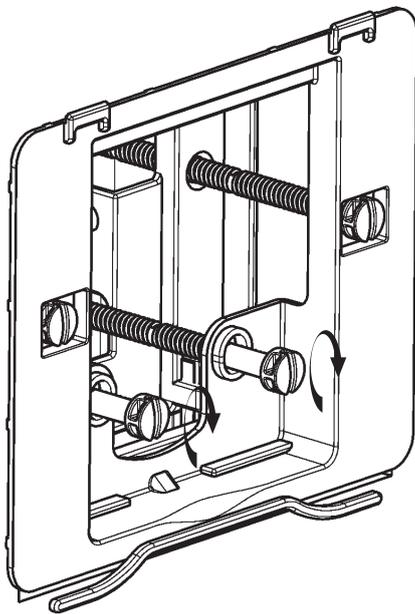


**30**

**1**

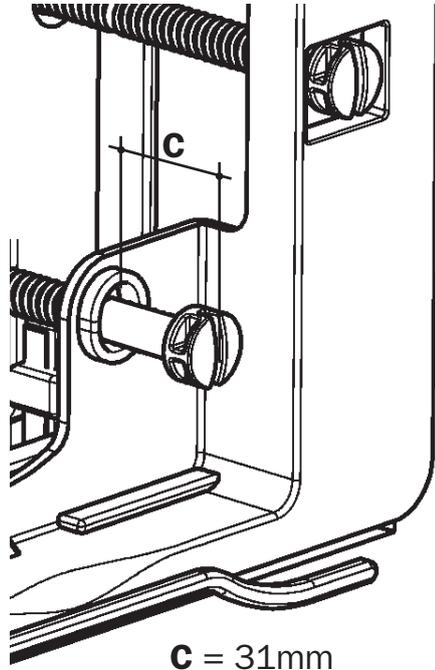


C = 31mm

**2**

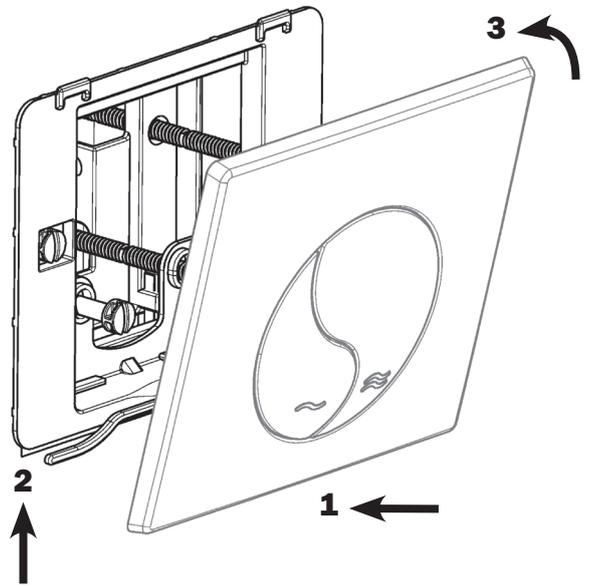






## Maintenance

**1**

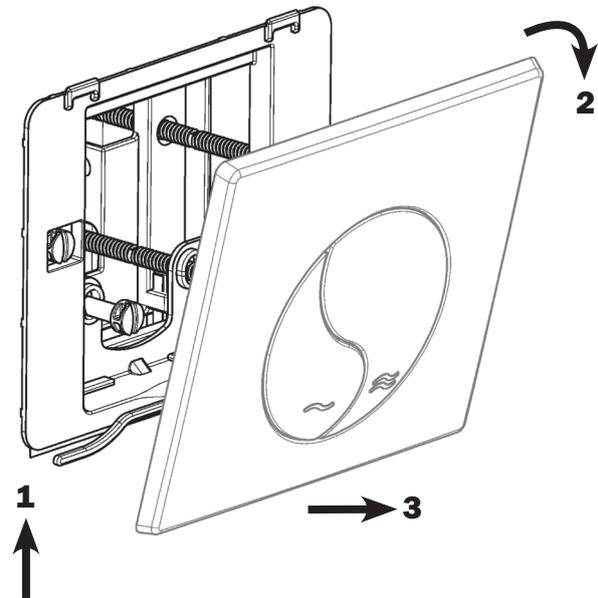


**2**

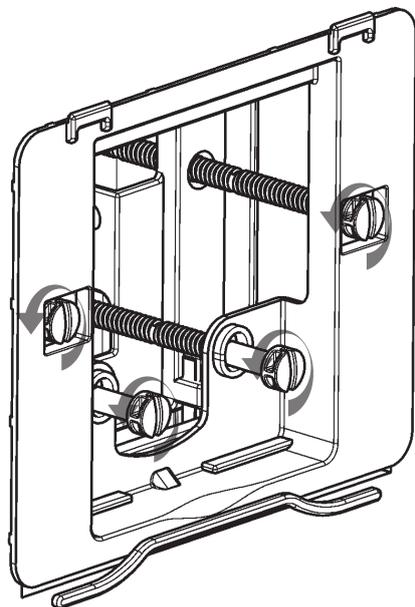


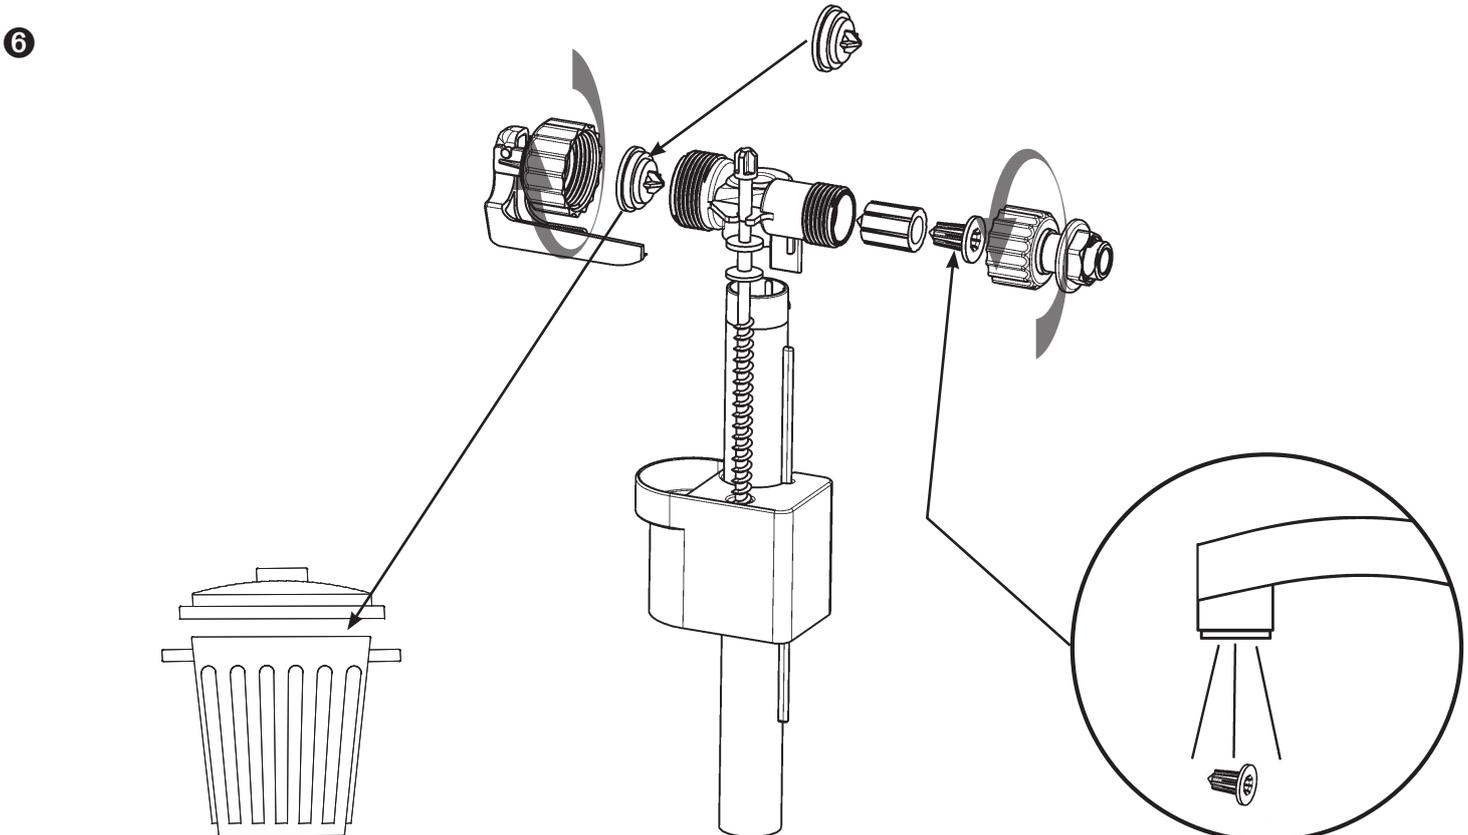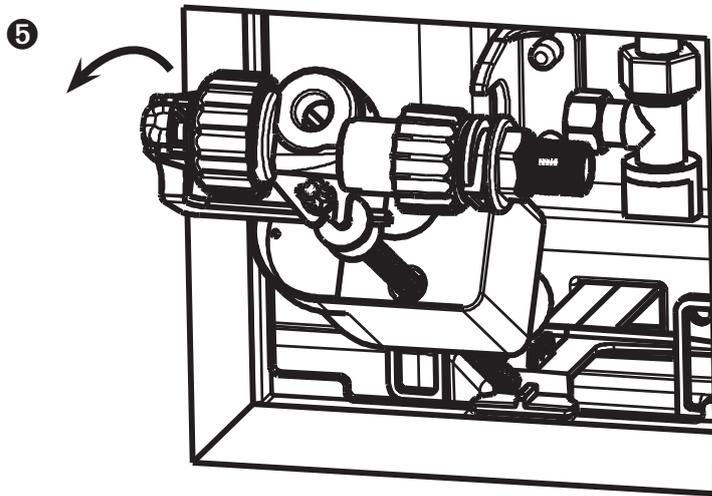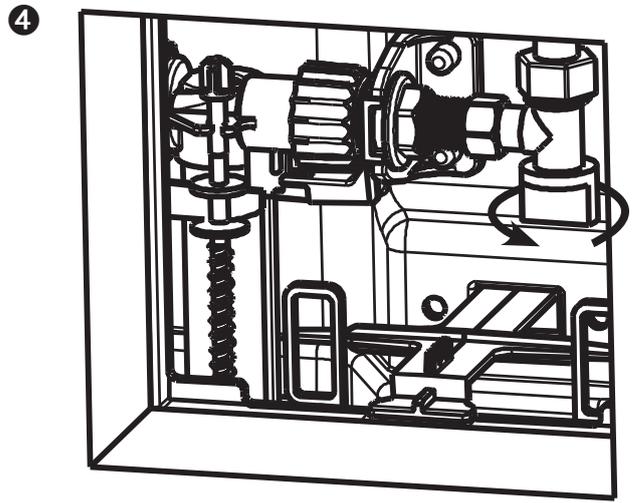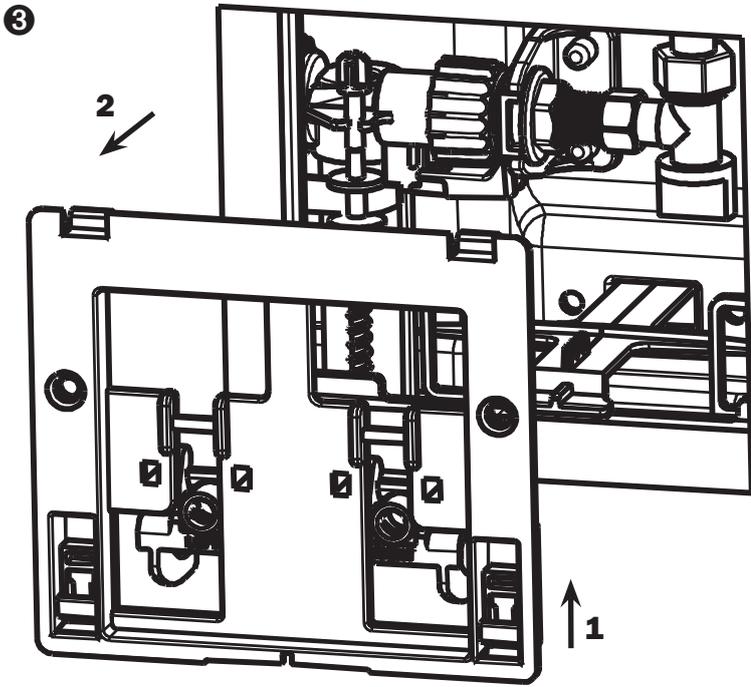

7

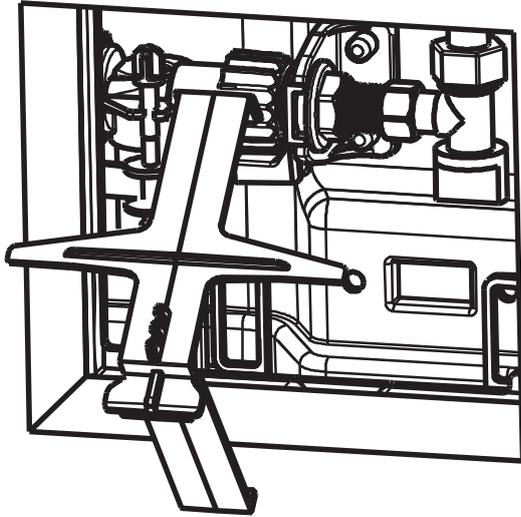

8

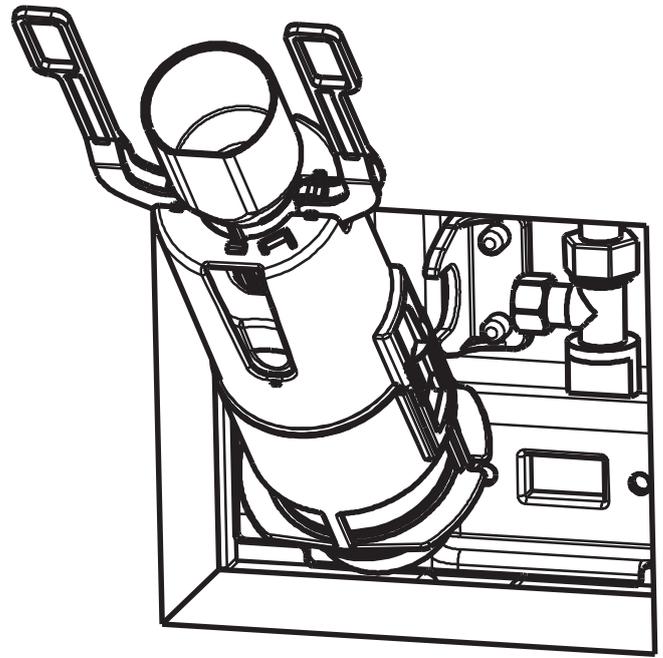

9

