


SIAMP


Monaco

Code 50 5680




BATI BIDET (fixation sol)
UERSO

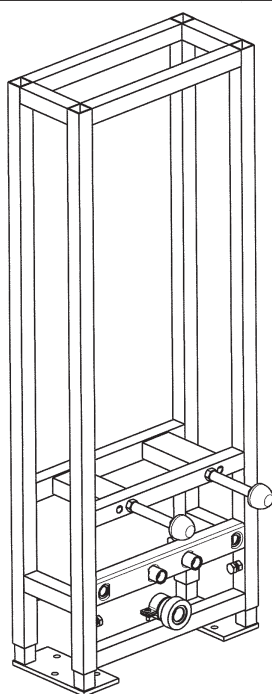


BBS 1100

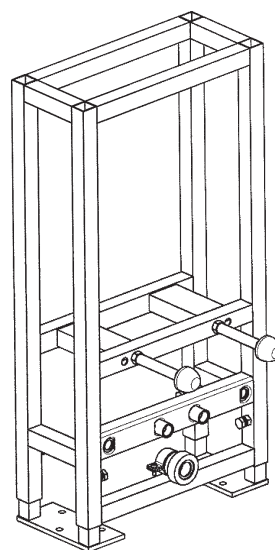

BBS 800

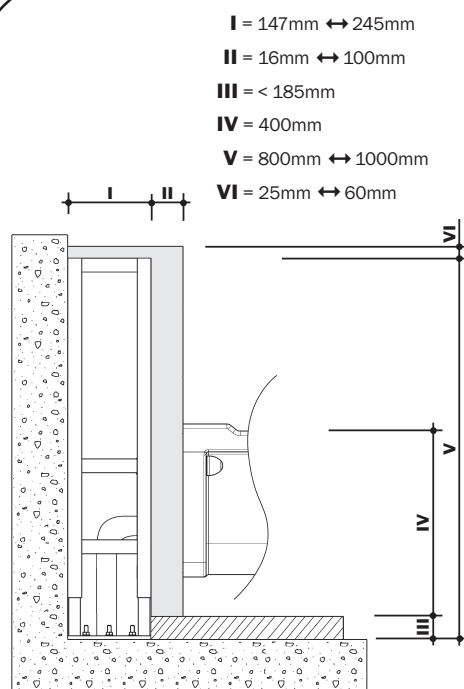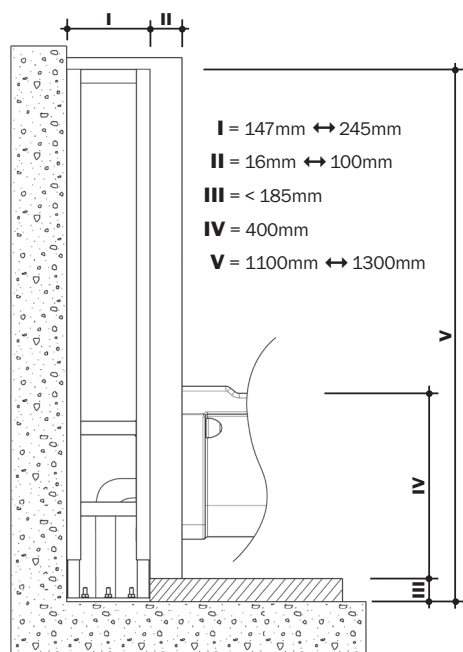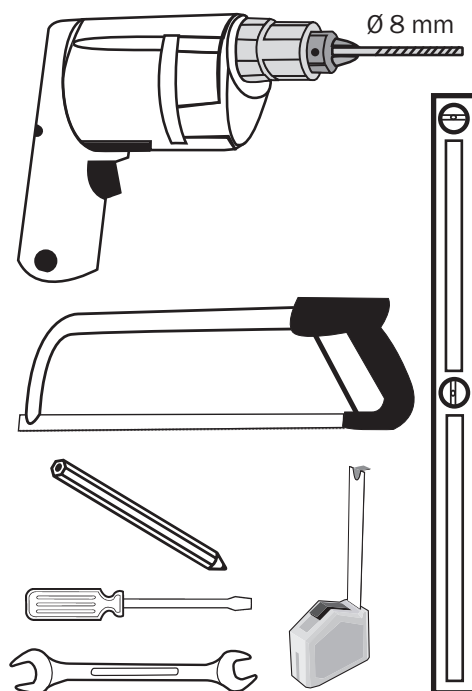


1

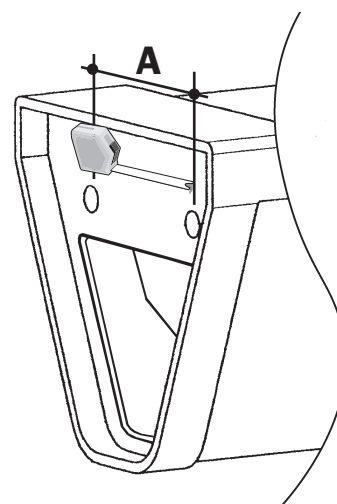


A = 180mm → 2-1

A = 230mm → 2-2


2-1

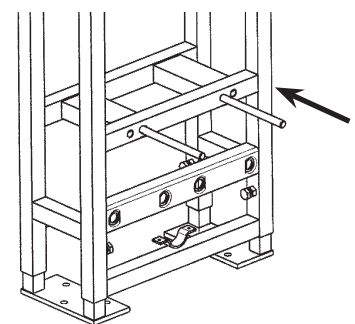


2-2

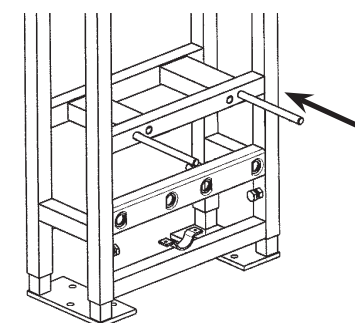


3

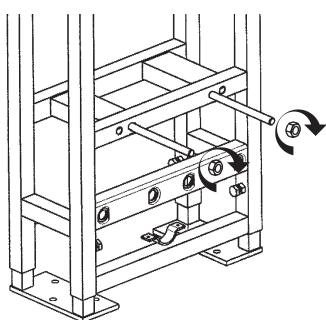


5

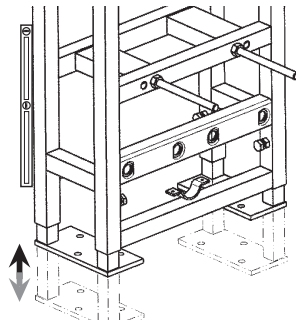


7

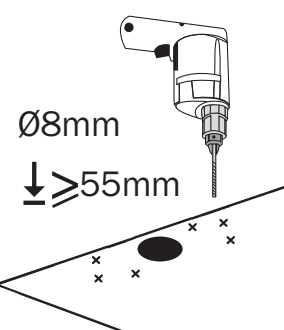


9

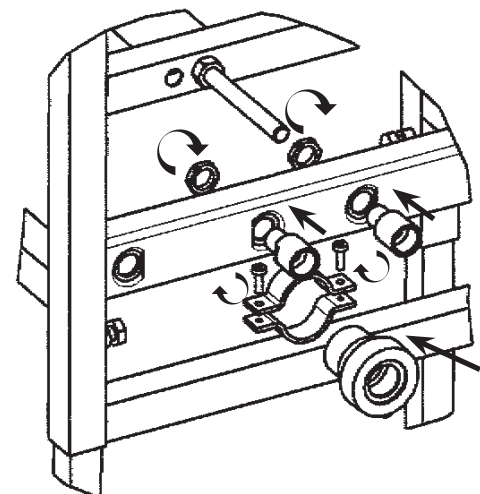


4

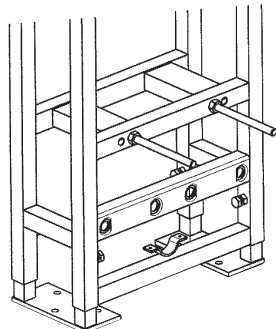


6

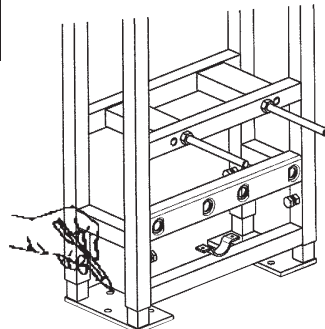

8

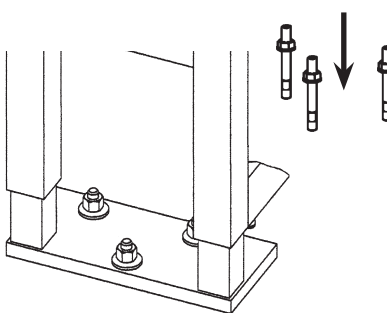


10

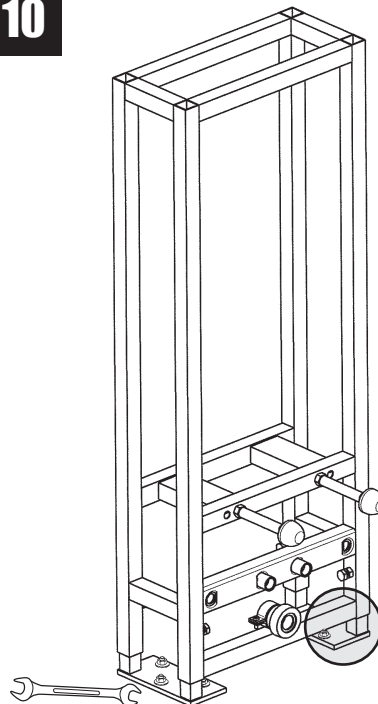

11

CZ: Kryt musí být upevněn do pevného podkladu.
DAN: Beklædningen skal monteres direkte på stativets struktur.
DEU: Die Verkleidung muss unbedingt fest mit dem Gestell verbunden werden.
ESP: La cubierta debe estar totalmente adosada a la estructura de la edificación.
FRA: L'habillage doit être impérativement solidaire à la structure du bâti.
GB: The covering must be fixed to the support structure.
GRE: Το κάλυμμα πρέπει να στερεωθεί στο πλαίσιο στήριξης.
H: A tetőt rögzíteni kell, hogy a szerkezetet tartsa.
LT: Apdailios detalės turi atitikti karkaso struktūrą.
NER: De bekleding moet verplicht één geheel vormen met de structuur van het onderstel.
NOR: Bekledningen skal nødvendigvis være solid festet til bygningsstrukturen.
PL: Ustawianie musi koniecznie być sztywne połączone z budową podstawy.
ROM: Îmbrăcămintea trebuie să fie neapărat solidară cu structura construcției.
RUS: Облицовка должна быть закреплена непосредственно к металлической раме инсталляционной системы
SK: Kryt musí byť upevnený do pevného podkladu.

12

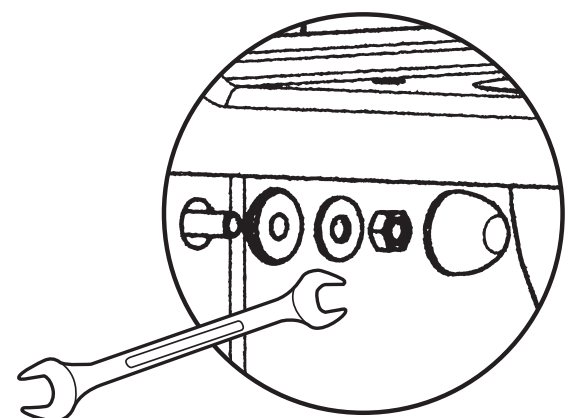


SIAMP


Monaco

Code 50 5680




BATI BIDET (fixation murale)
UERSO

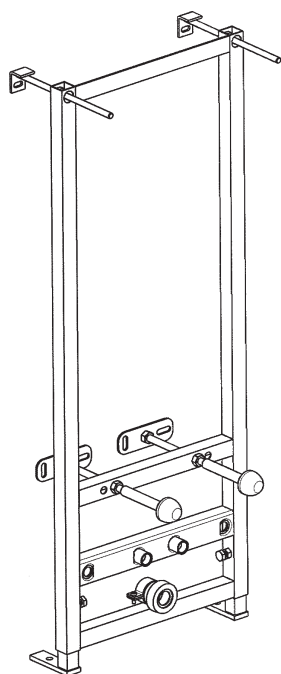


BBM 1100

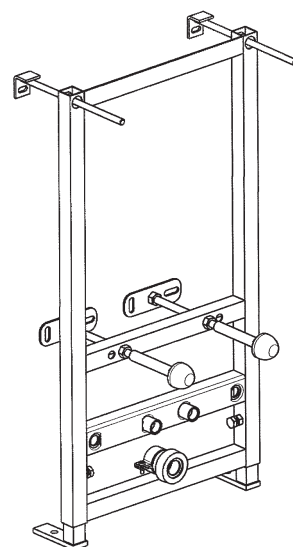

BBM 800

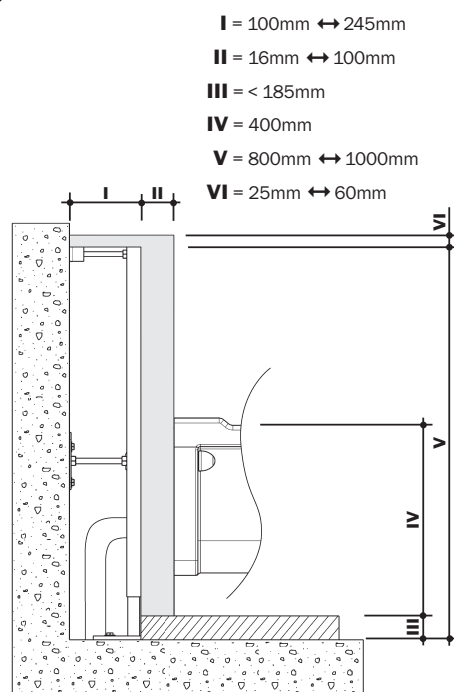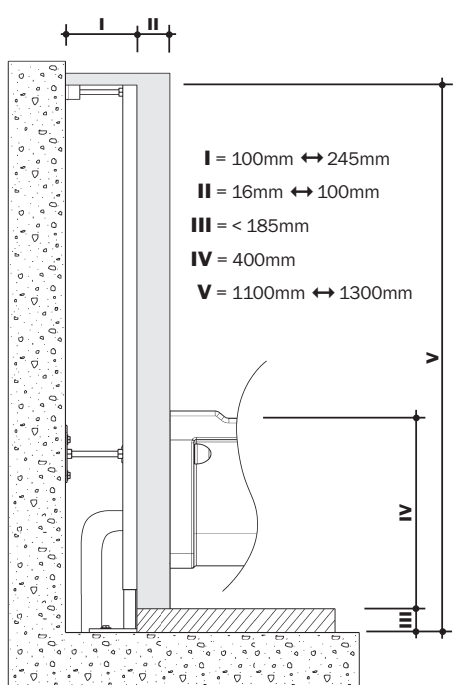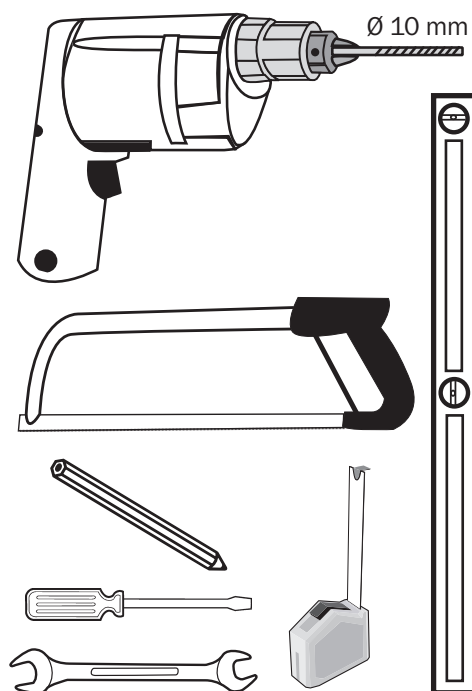


1

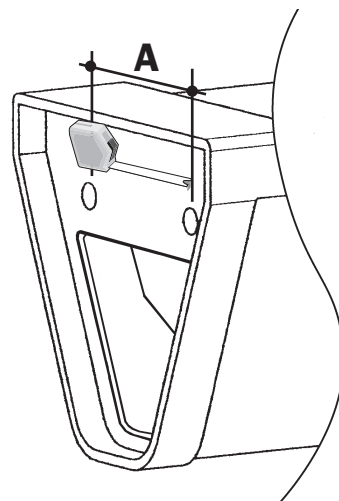


A = 180mm → 2-1

A = 230mm → 2-2


2-1

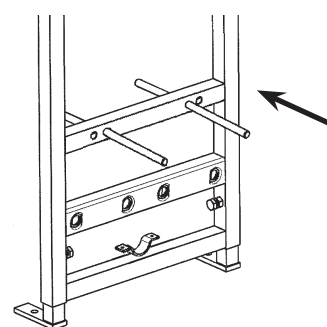


2-2

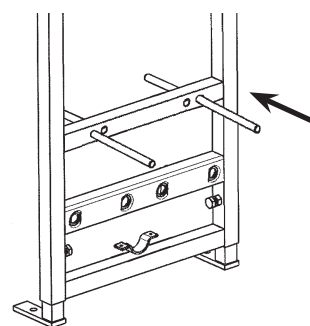


3

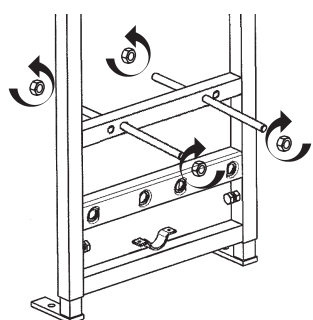


5

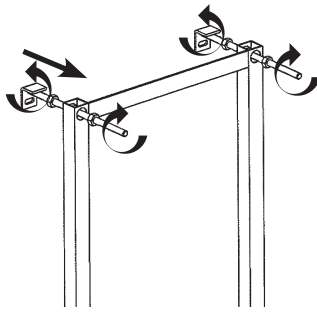


4

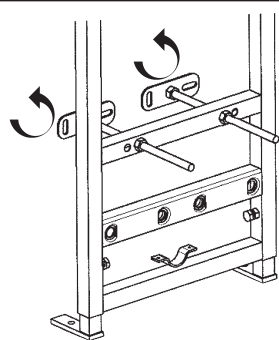


6

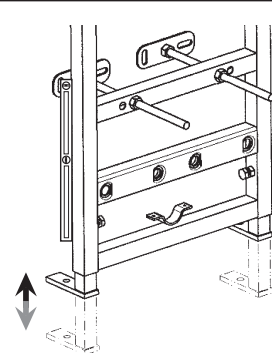

7

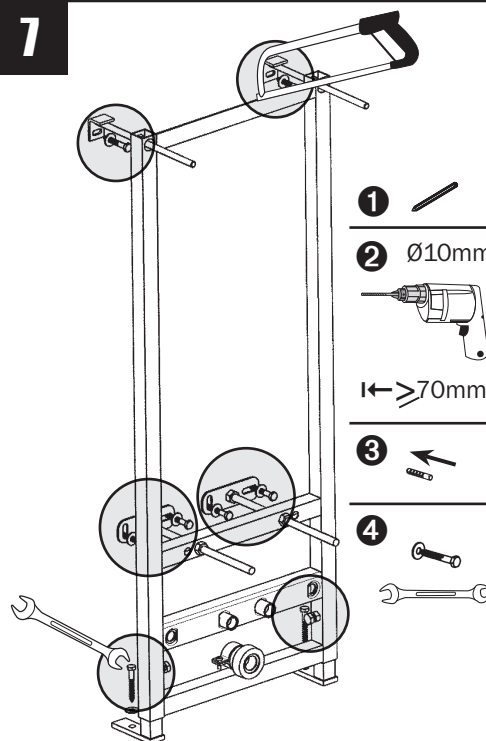

9

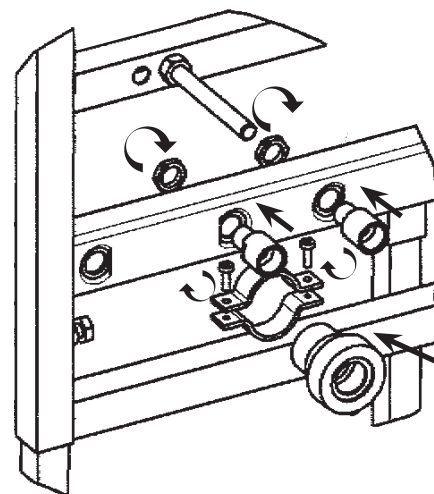

10

CZ: Kryt musí být upevněn do pevného podkladu.

DAN: Beklædningen skal monteres direkte på stativets struktur.

DEU: Die Verkleidung muss unbedingt fest mit dem Gestell verbunden werden.

ESP: La cubierta debe estar totalmente adosada a la estructura de la edificación.

FRA: L'habillage doit être impérativement solidaire à la structure du bâti.

GB: The covering must be fixed to the support structure.

GRE: Το κάλυμμα πρέπει να στερεωθεί στο πλαίσιο στήριξης.

H: A tetőt rögzíteni kell, hogy a szerkezetet tartsa.

LT: Apdailos detalės turi atitikti karkaso struktūrą.

NER: De bekleding moet verplicht één geheel vormen met de structuur van het onderstel.

NOR: Bekledningen skal nødvendigvis være solid festet til bygningsstrukturen.

PL: Ustawianie musi koniecznie być sztywno połączone z budową podstawy.

ROM: Îmbrăcămintea trebuie să fie neapărat solidară cu structura construcției.

RUS: Облицовка должна быть закреплена непосредственно к металлической раме инсталляционной системы

SK: Kryt musí byť upevnený do pevného podkladu.

11

