


INSTALLATION OF SPINAIR SYSTEM

Positioning of the cuff

- 1 Once the cistern frame is installed up to paragraph VII of instructions sheet, position the flexible sheath on the bell (end A) and connect the end B to the side connector of the tank.

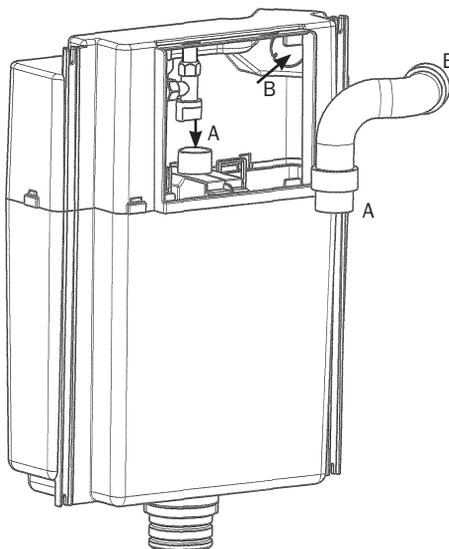


Collective Ventilator Shaft



Drill a hole in the ventilator shaft rising column

Fix the easy-fit plug onto the rising column (1 hole $\varnothing 32\text{mm}$ + 2 auto perforating screws)

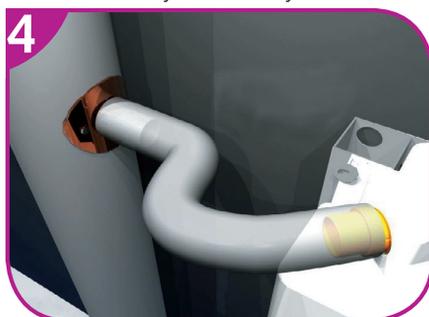

Connect the easy-fit plug to the Spinair exit of the toilet block: the system is ready to work.