

Alterna

GB : User Manual

F : Mode d'emploi

D :

E :

S :

N :

DK :

FL :


PL :






RU :


LT :

RO :

NL :


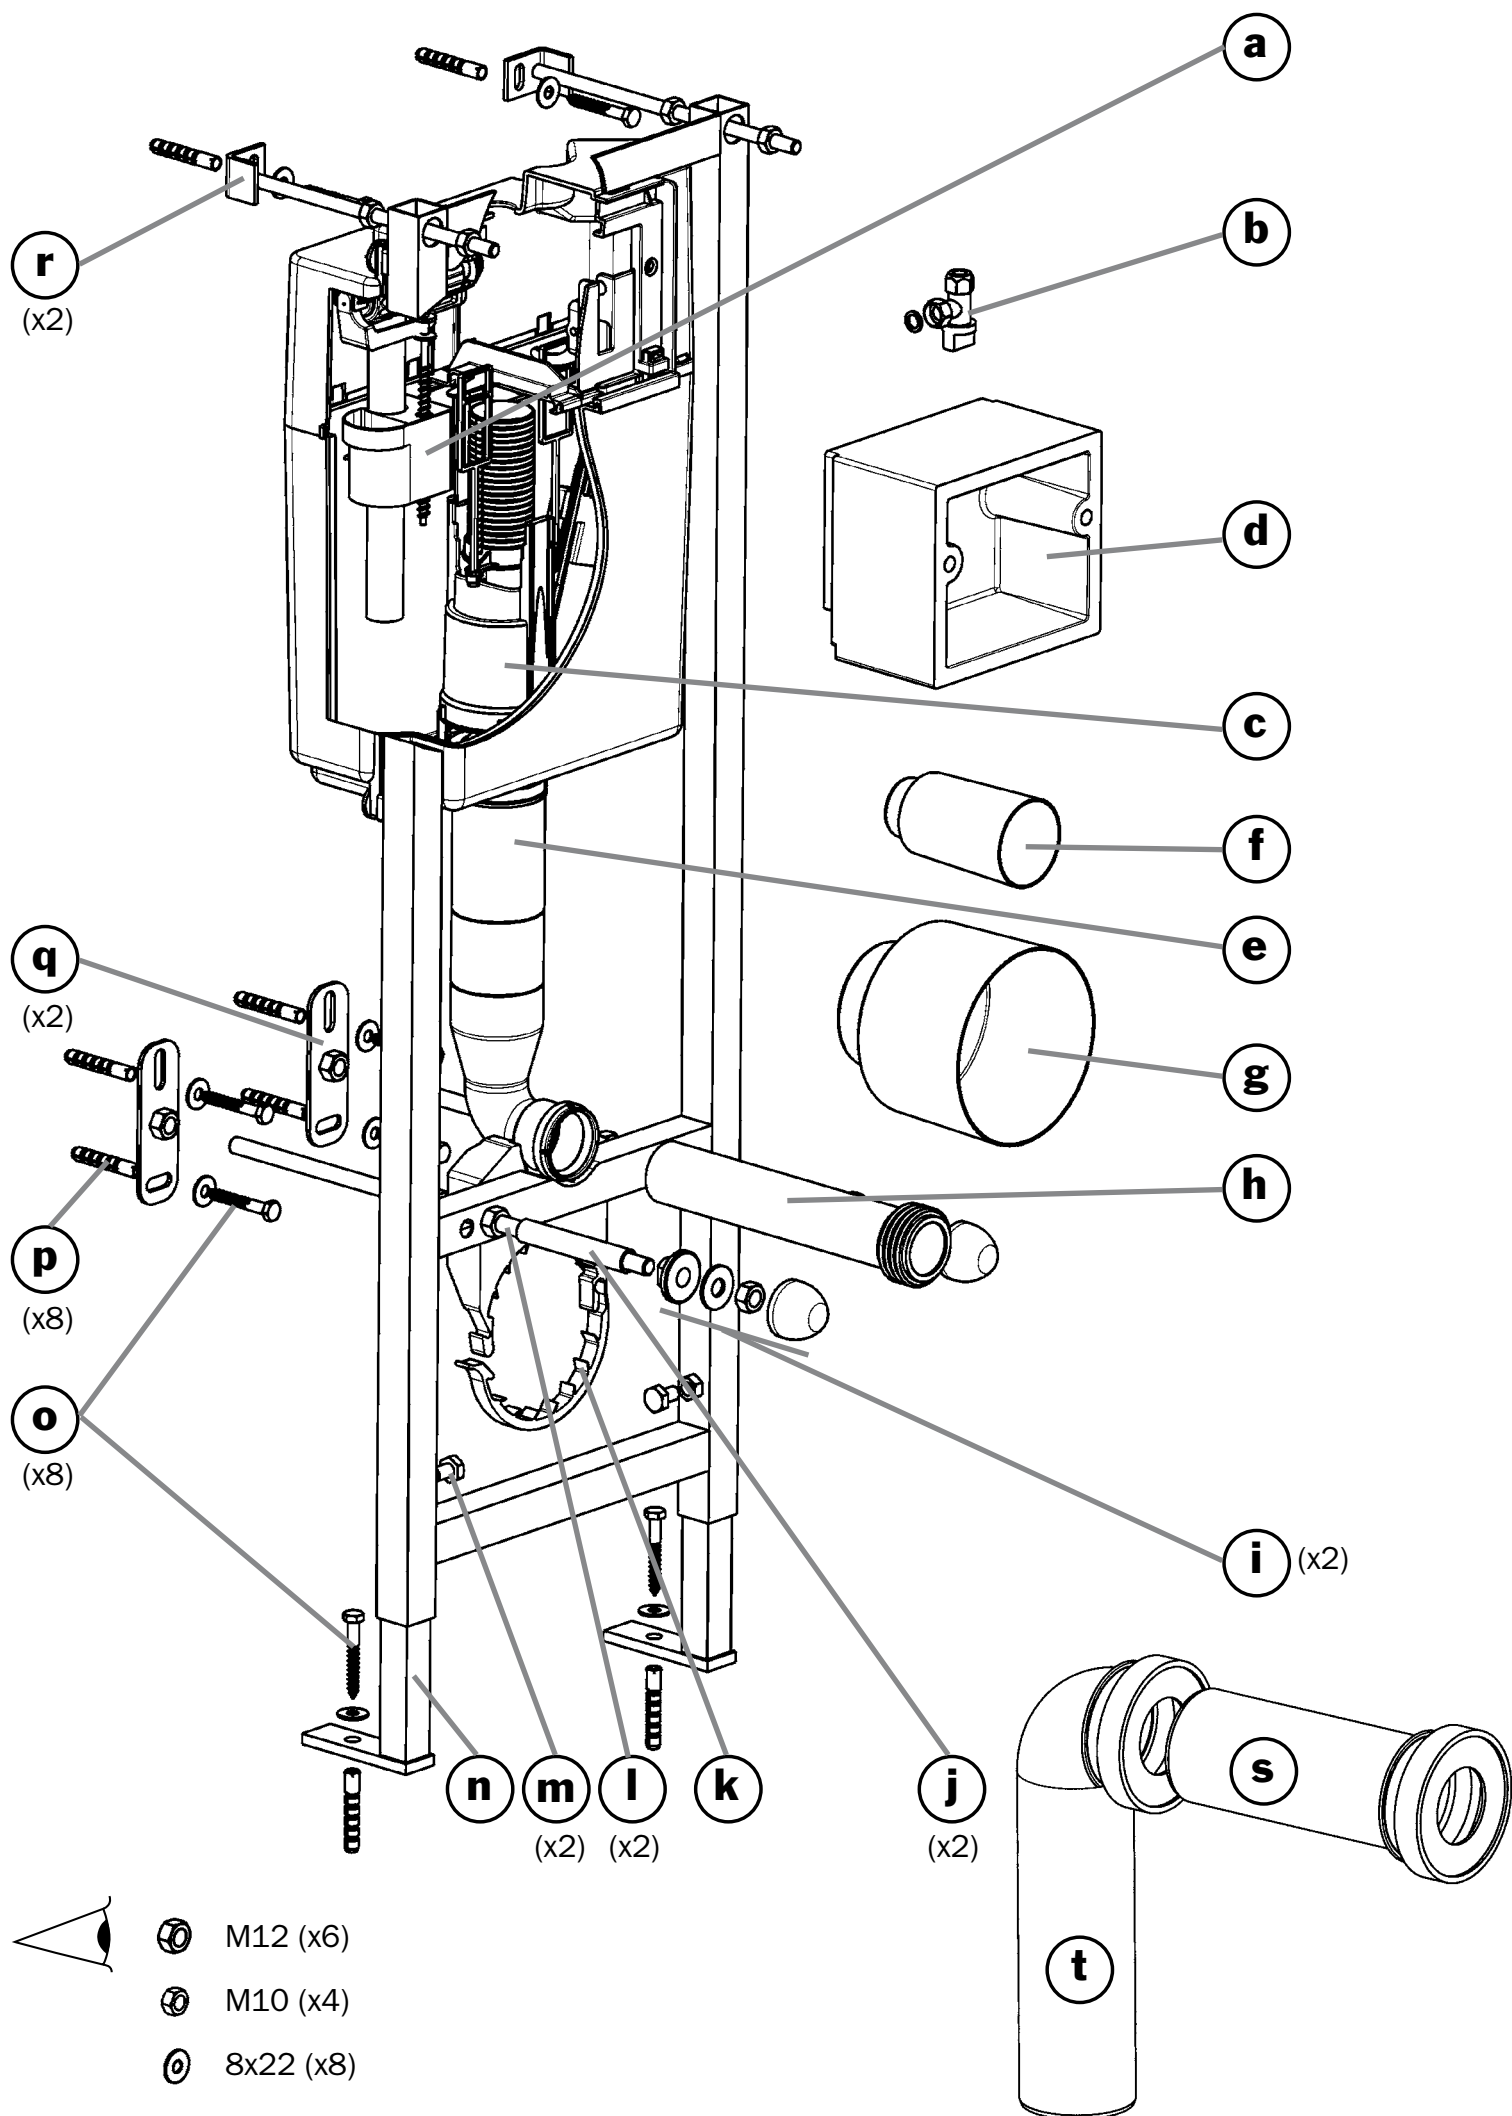


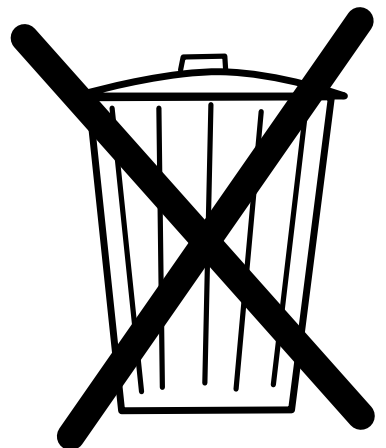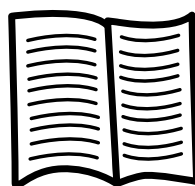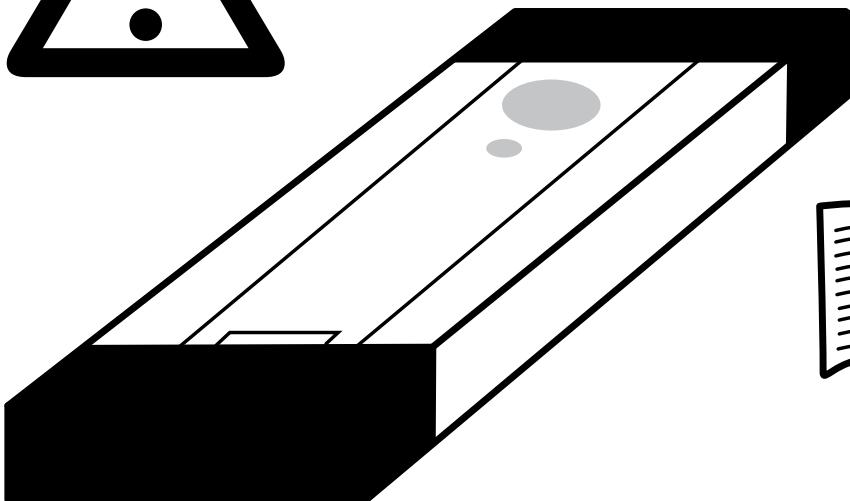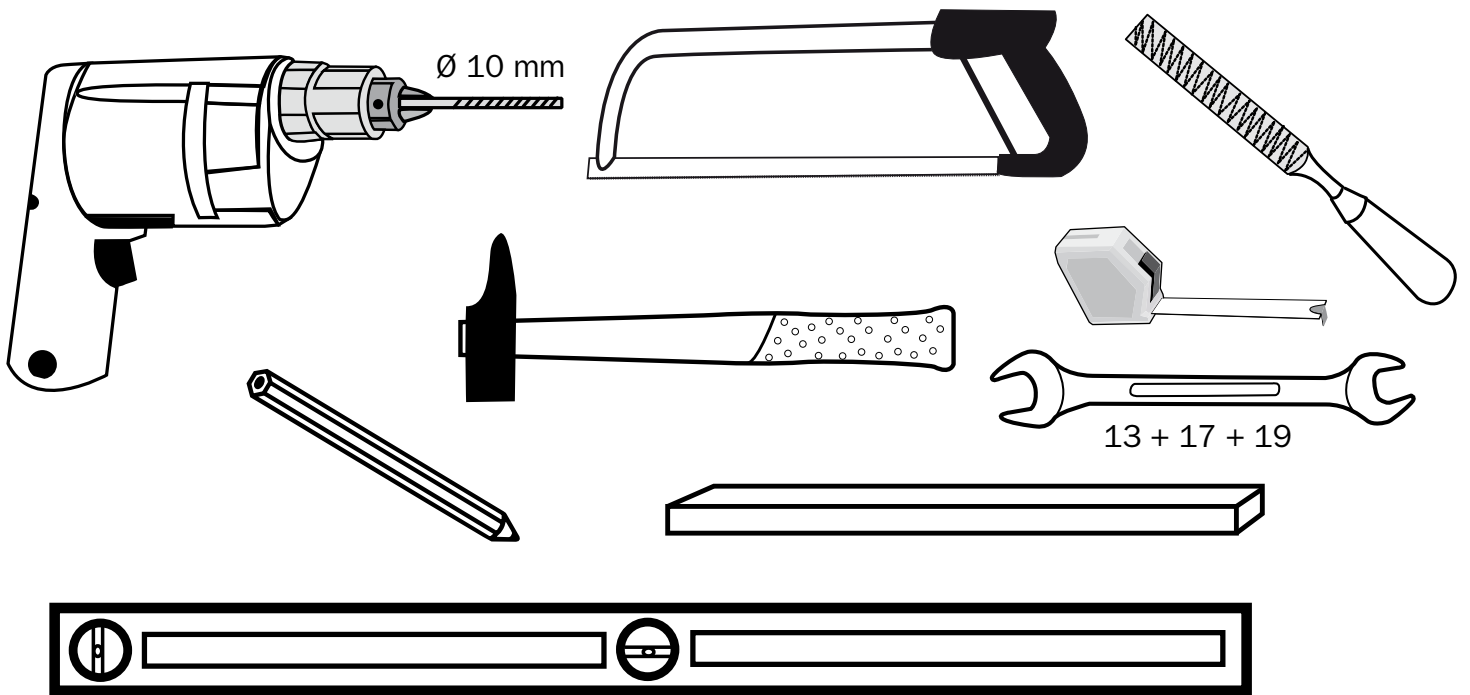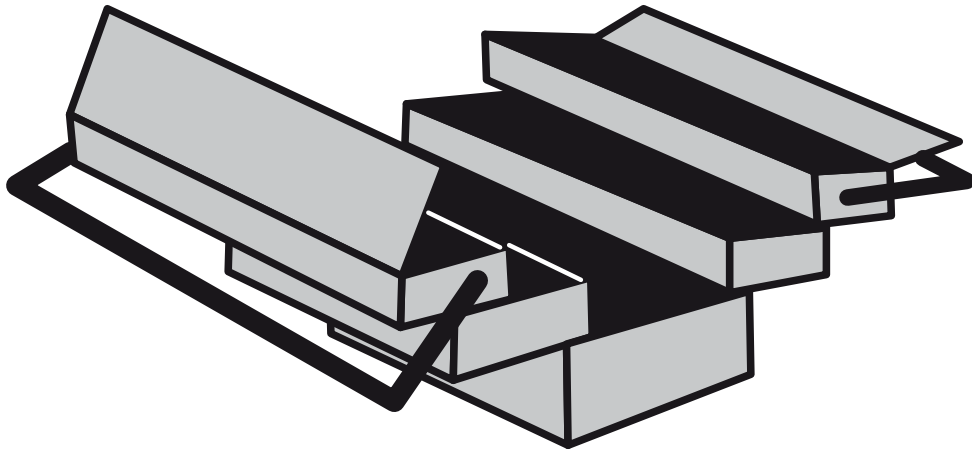

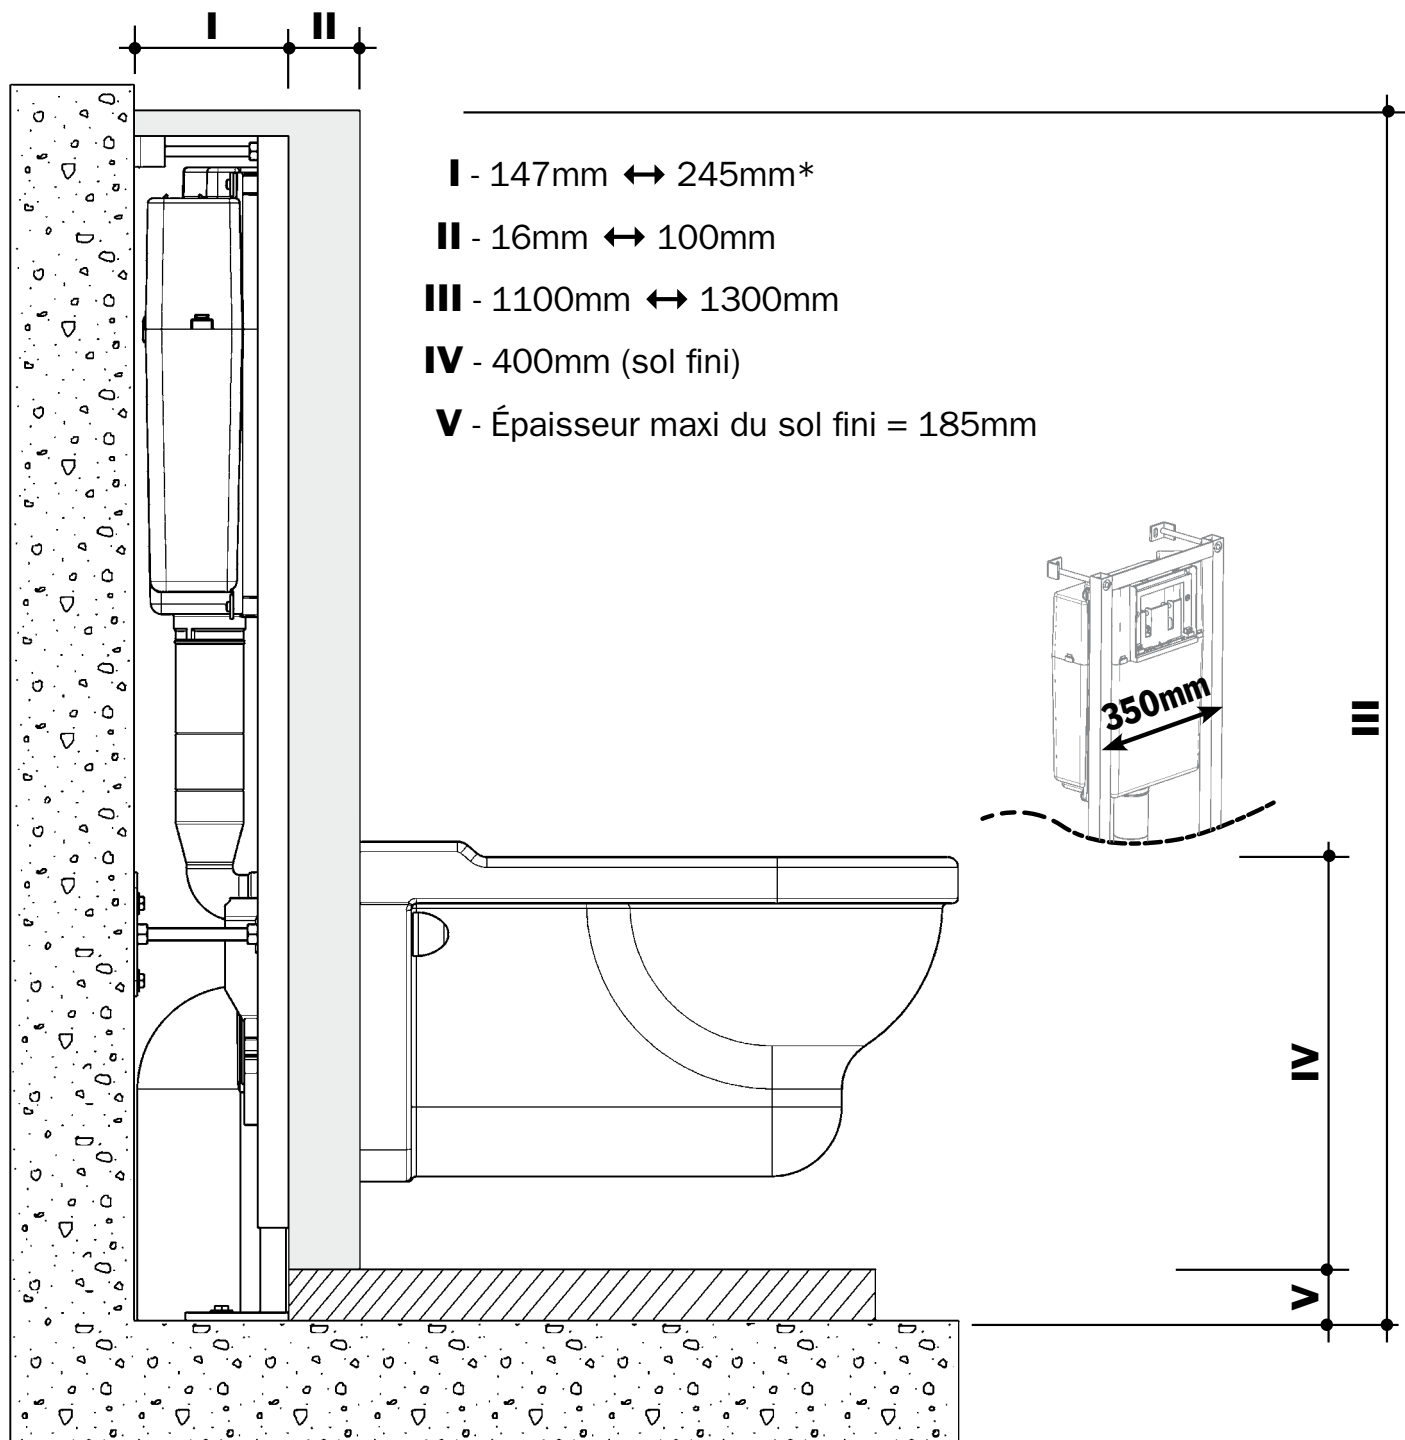


*

MEUBLEO

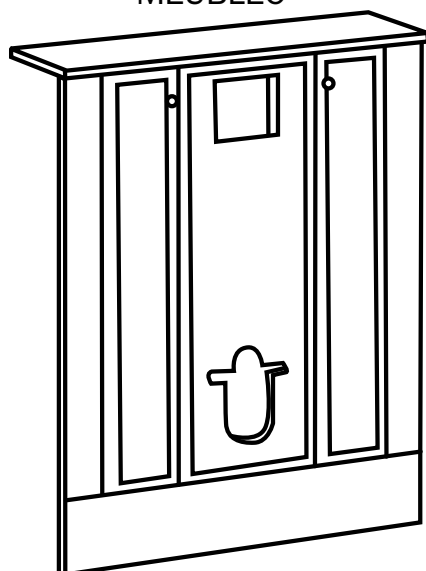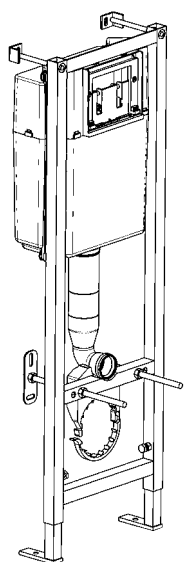

I - 210mm ↔ 245mm


1

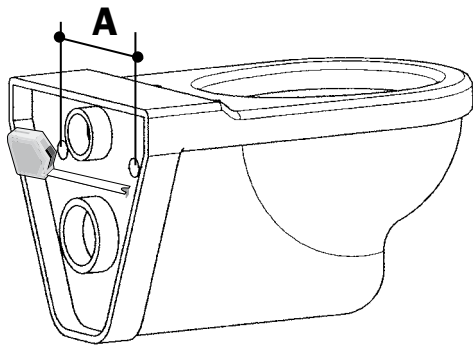


A = 180mm → 2-1

A = 230mm → 2-2



2-1

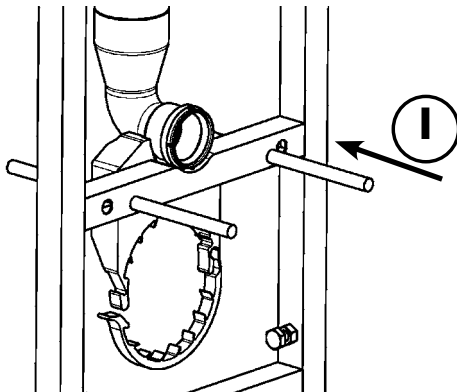


2-2

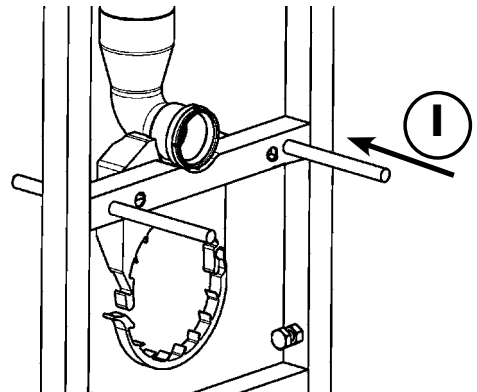


3

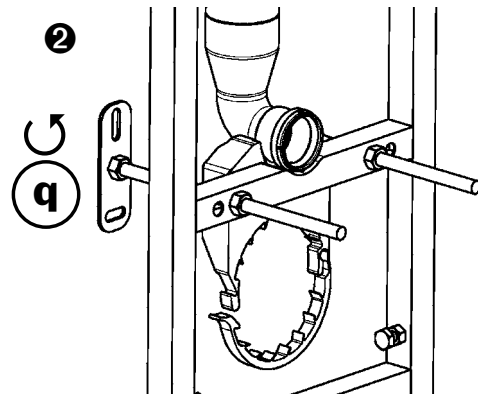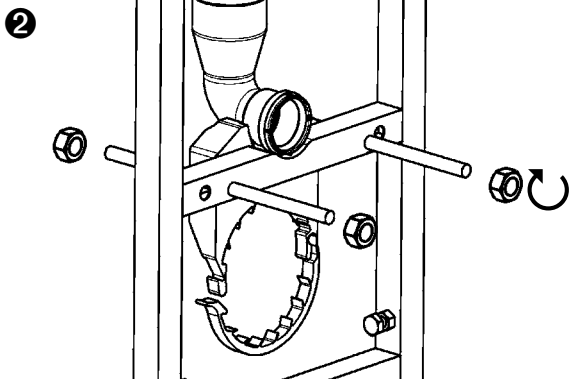


4

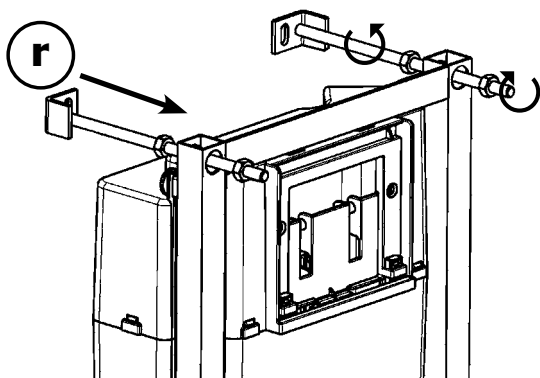


5

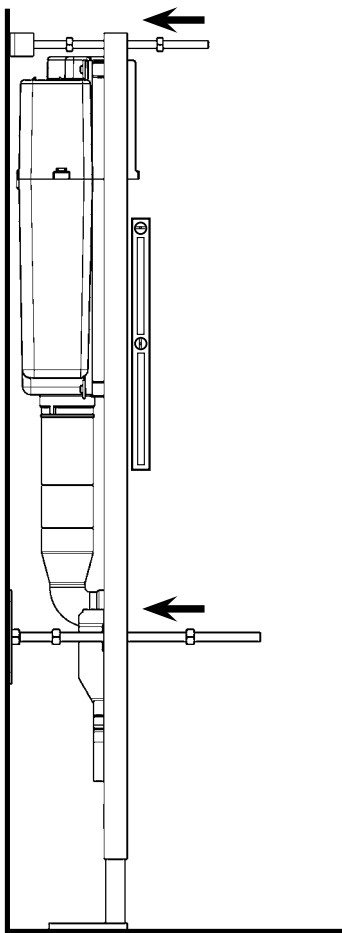


6

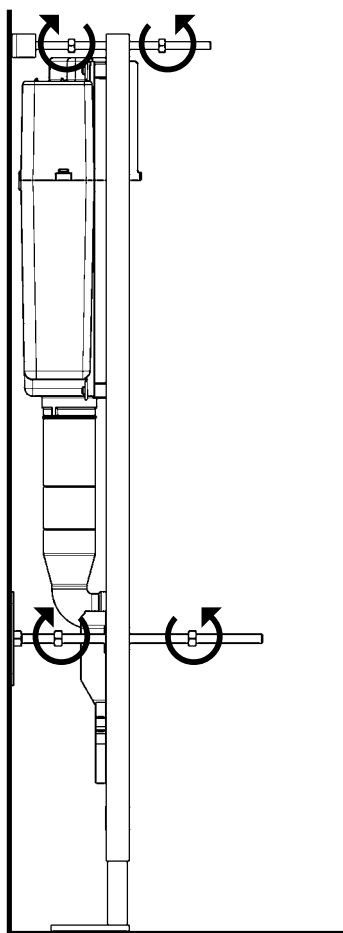


7

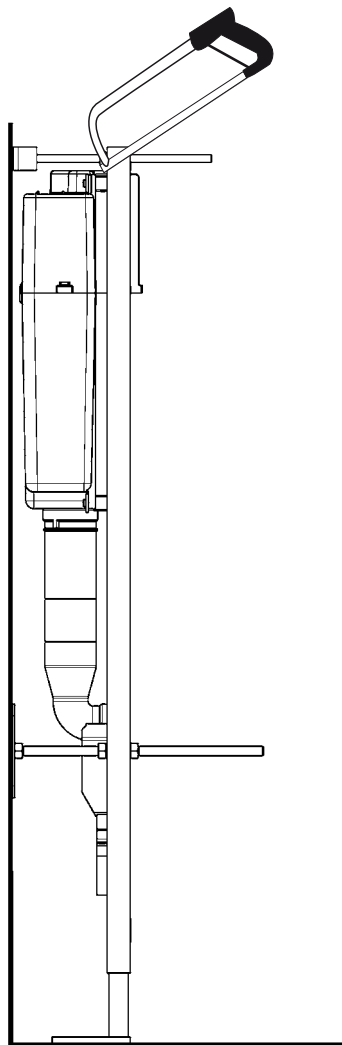


8

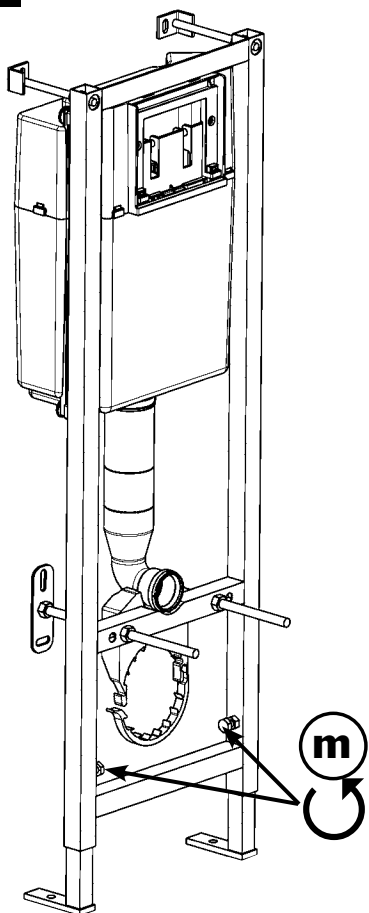


9

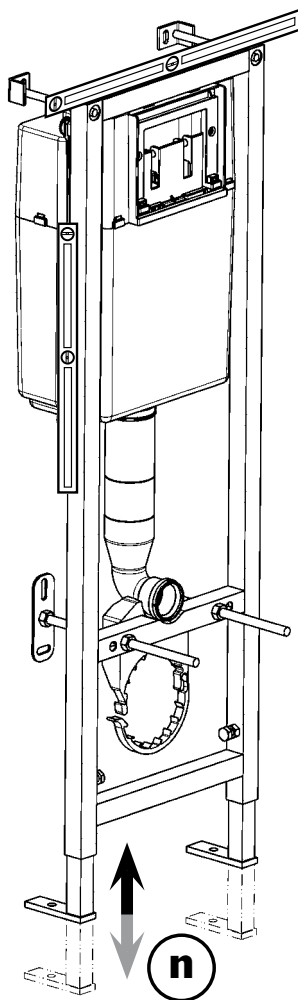


10

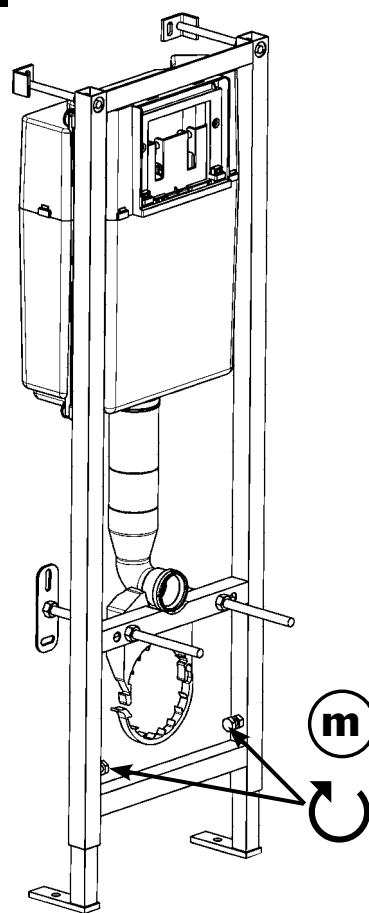


11

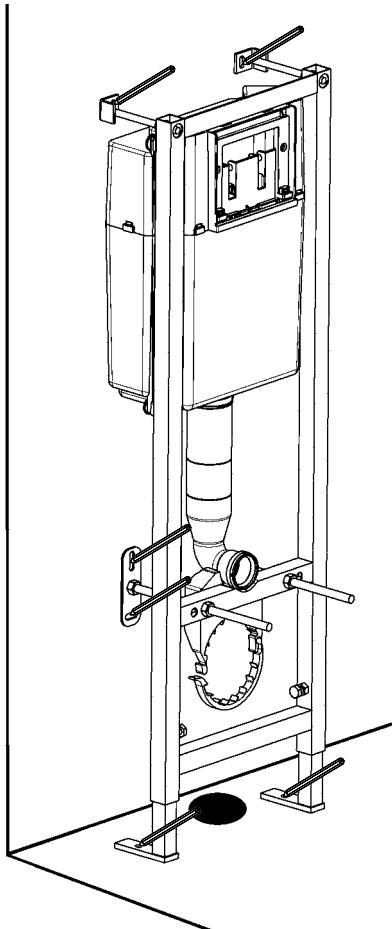


12

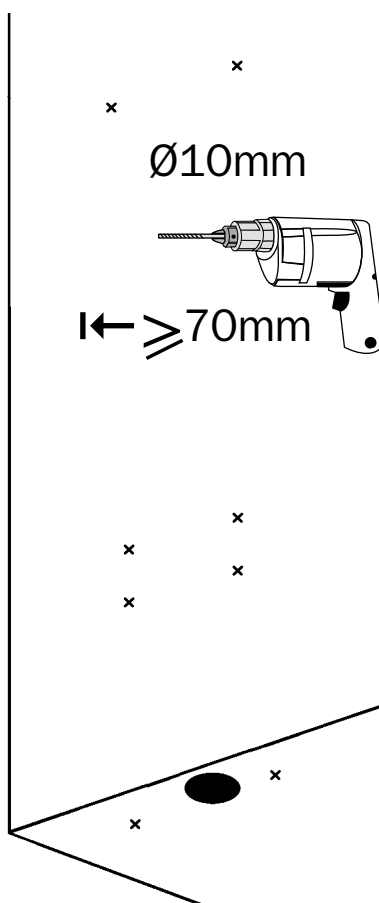



13

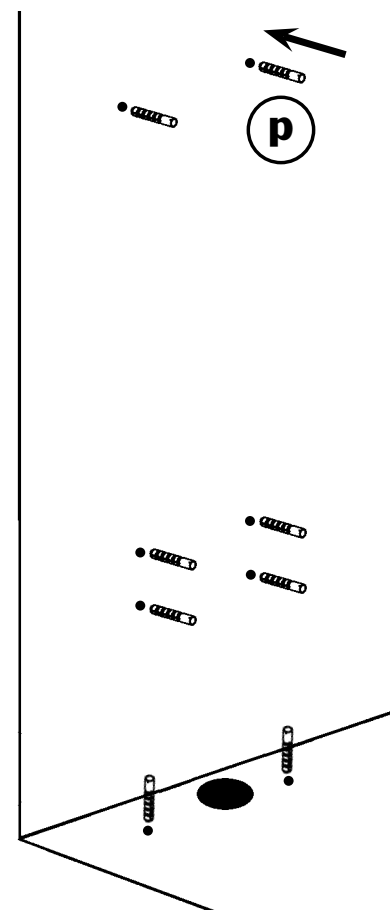



14

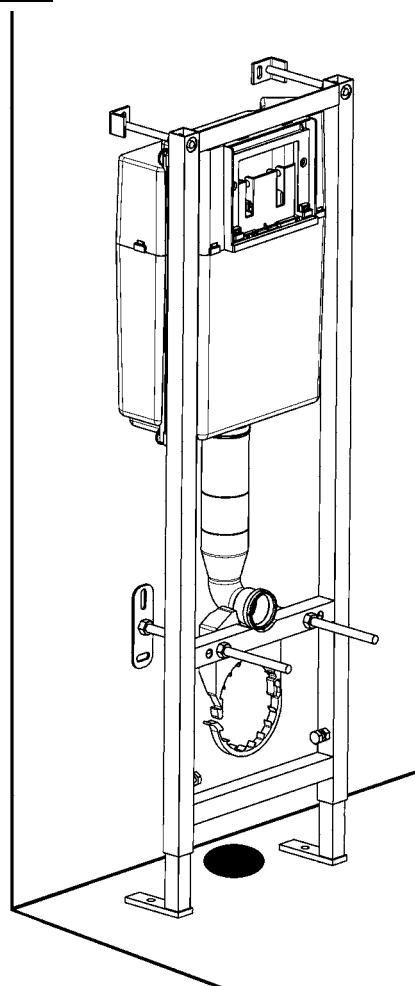

15

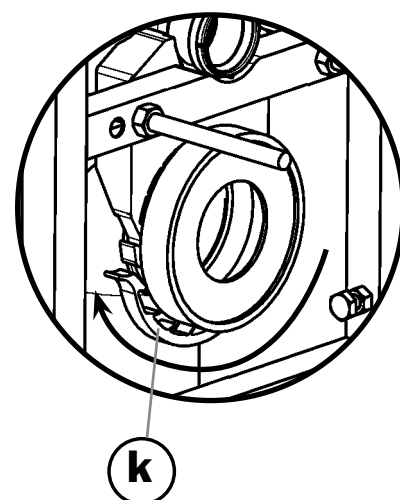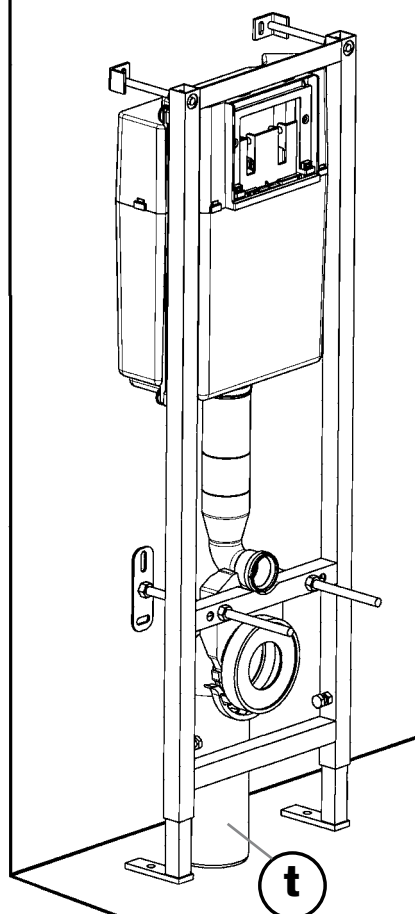


16

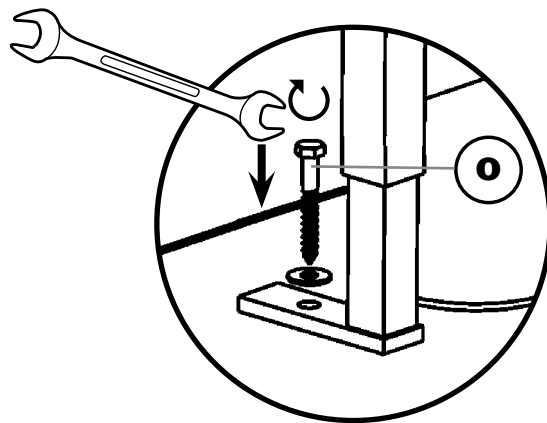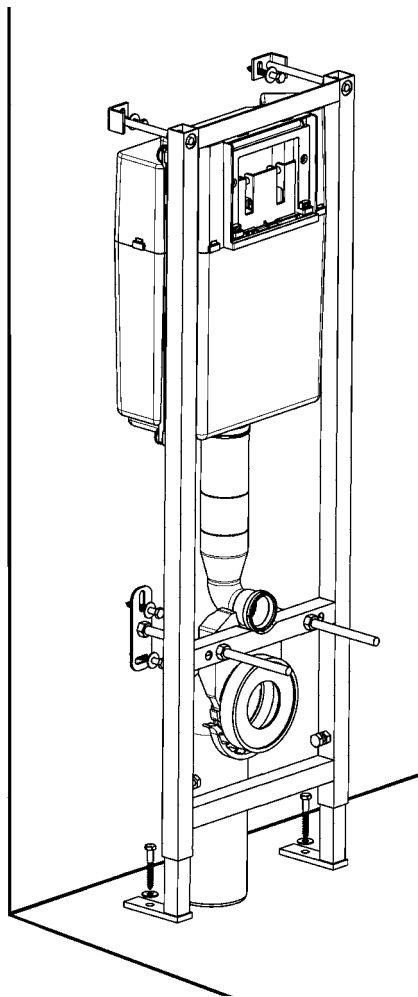


17


1

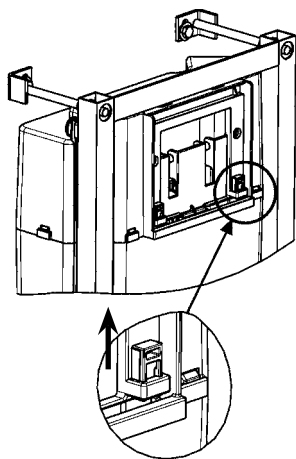


2









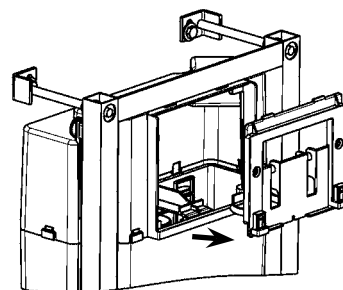


3

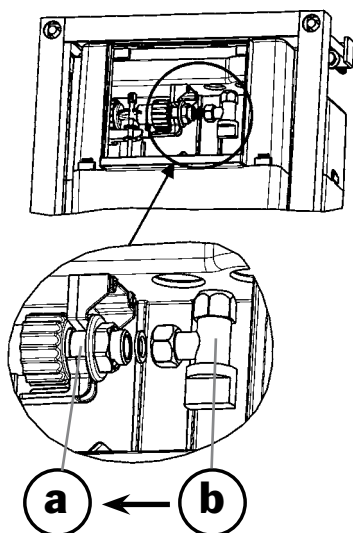


4

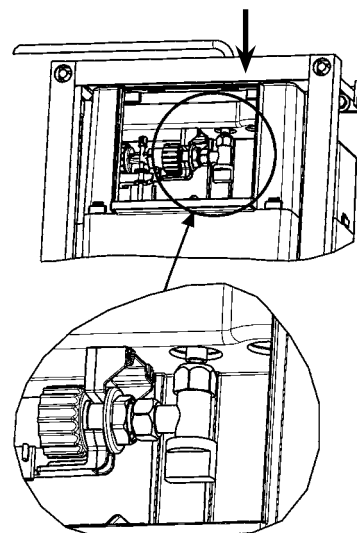


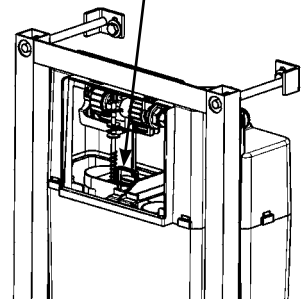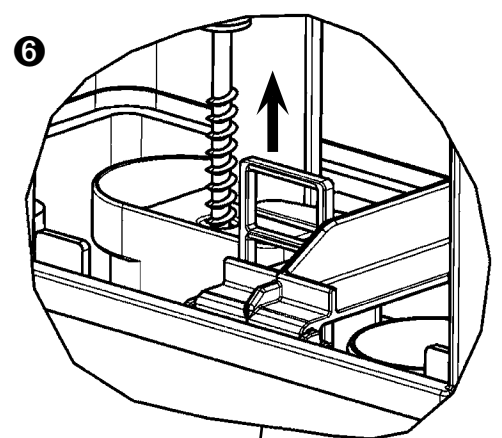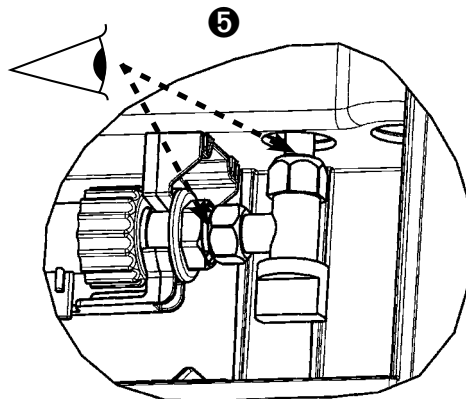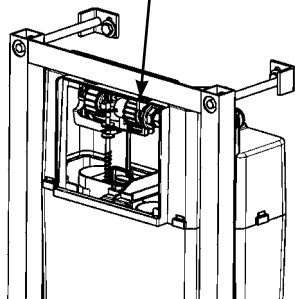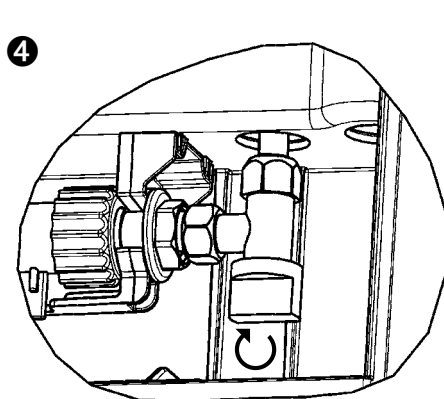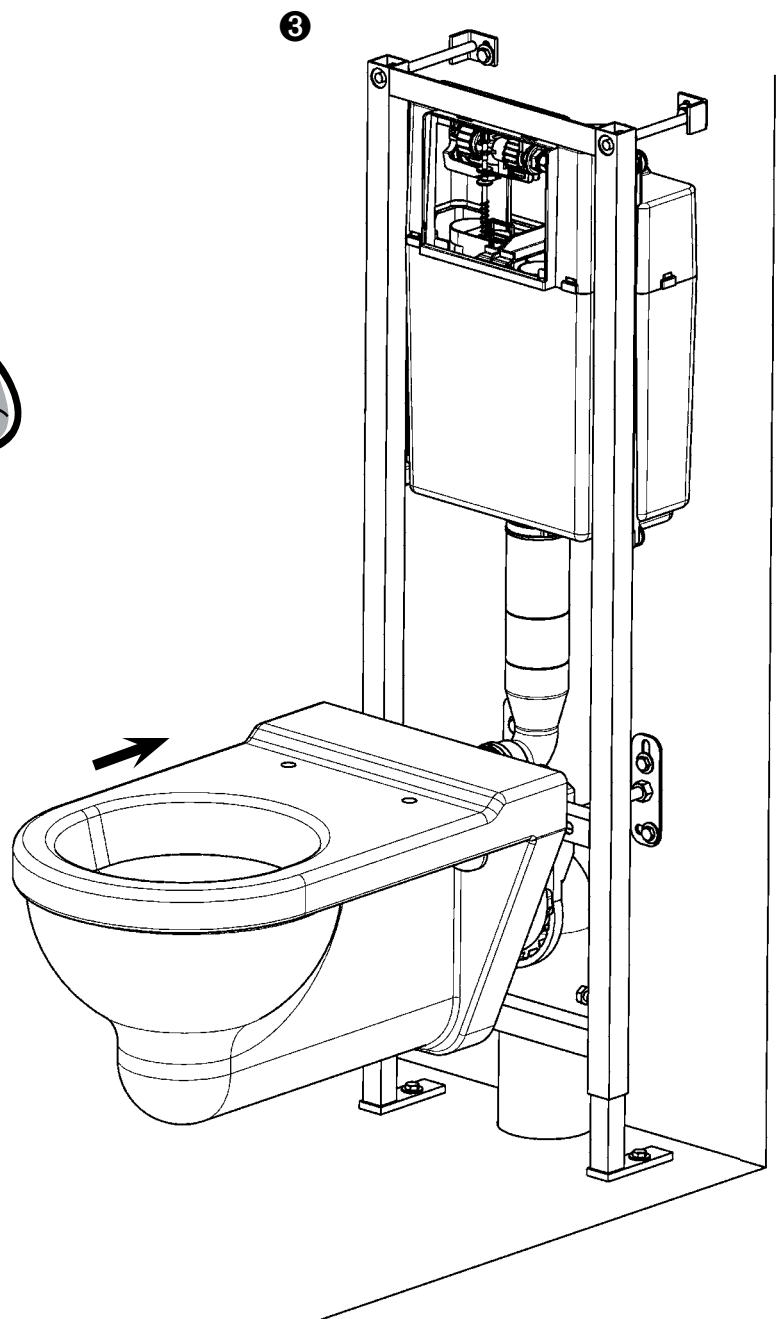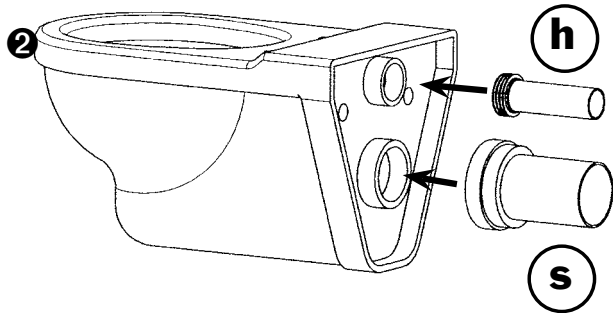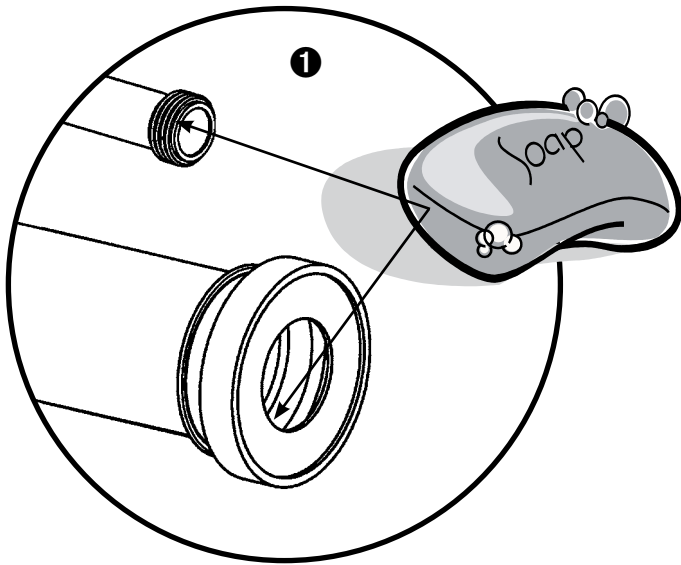


7

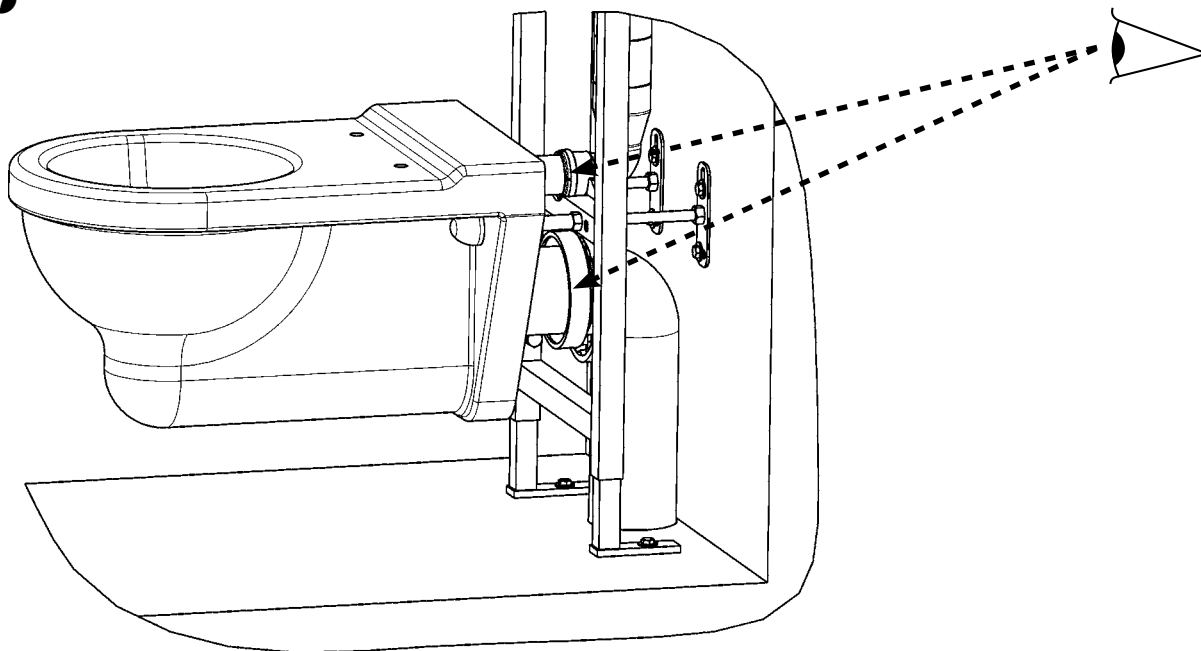




8

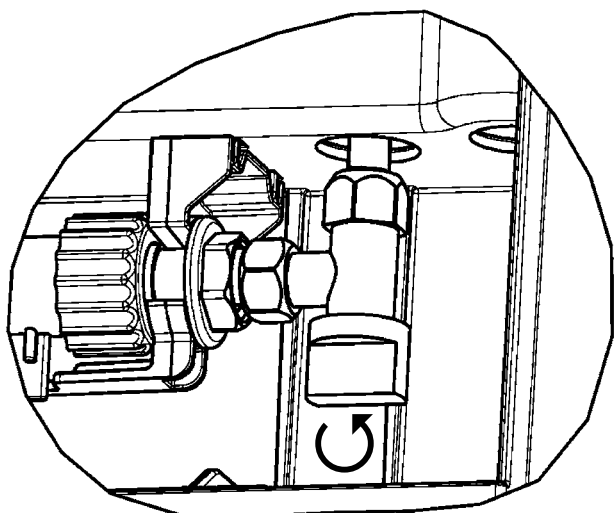



9

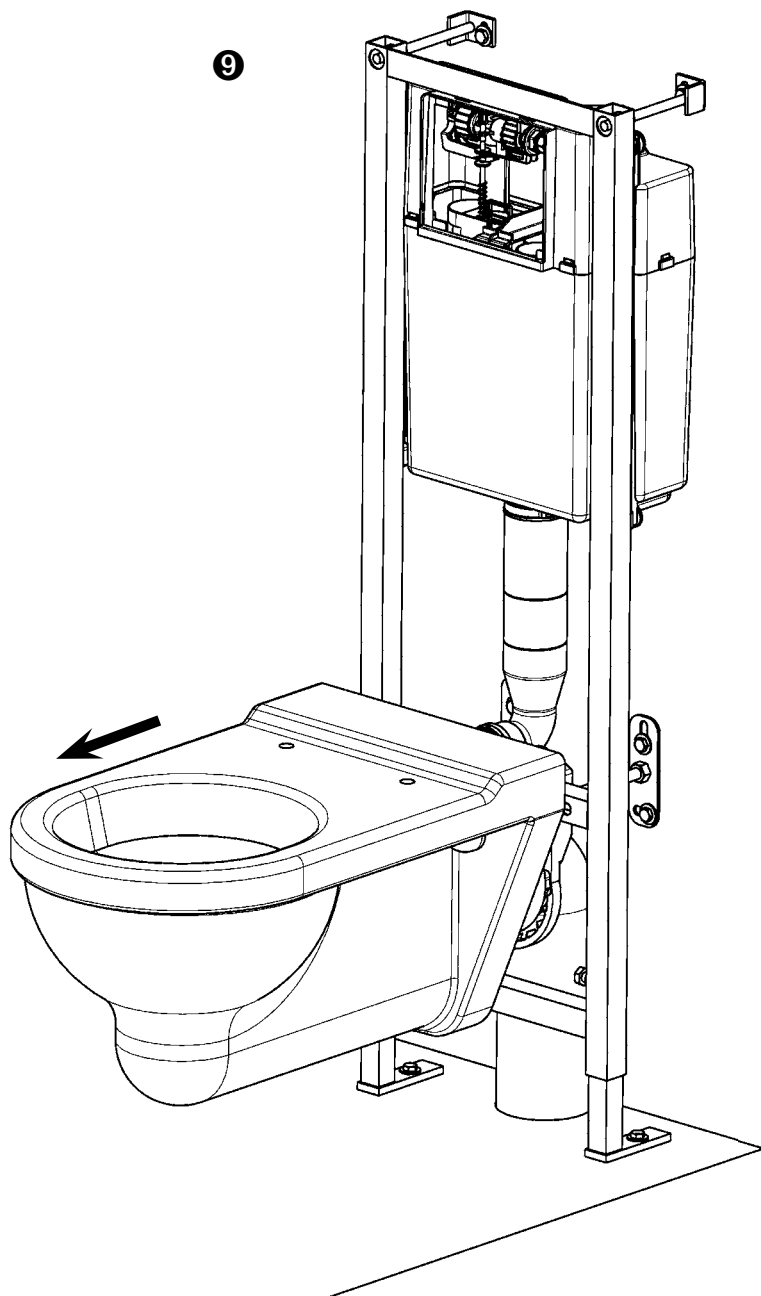

19

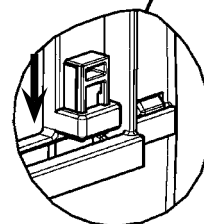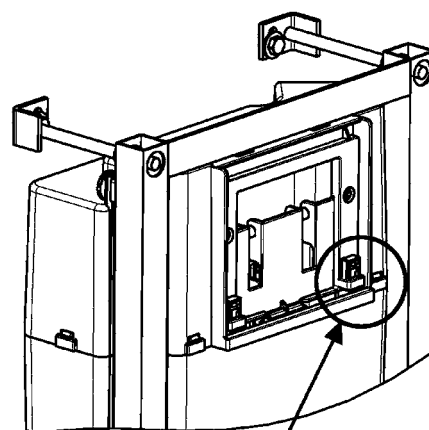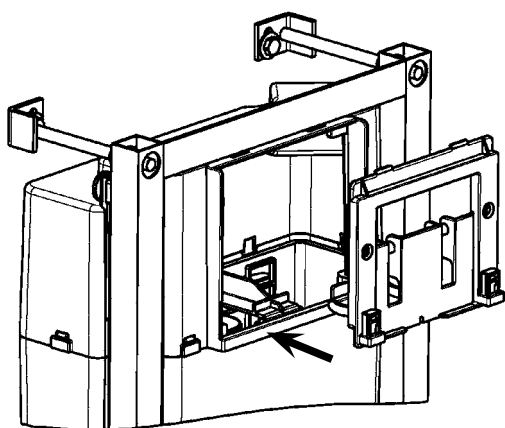

20

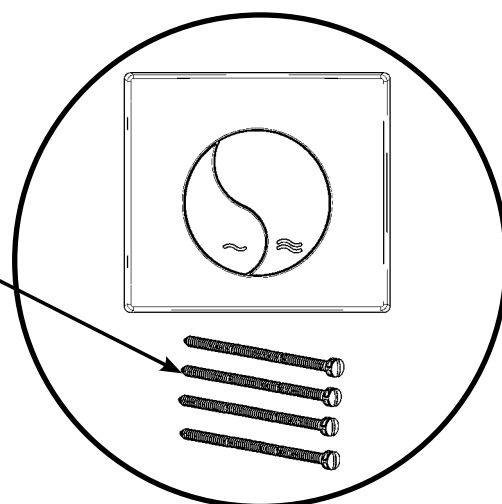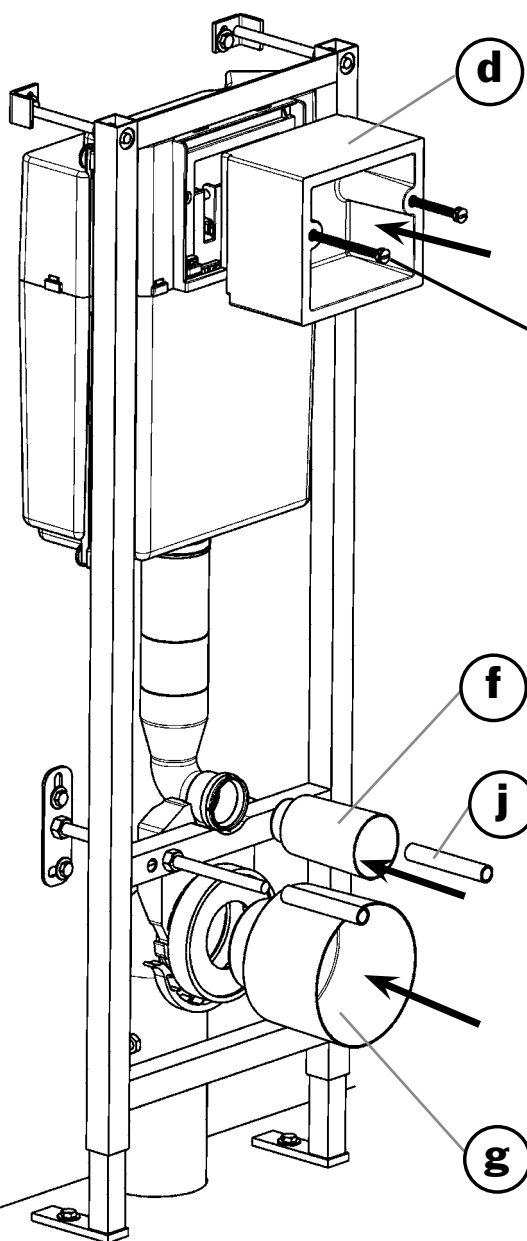

GB :

F : Réaliser l'habillage, pour la découpe des différents trous utiliser le gabarit au dos du carton. L'habillage doit être impérativement solidaire à la structure du bâti.

D :

E :

S :

N :

DK :

FL :

PL :


RU :

LT :


RO :

NL :


22

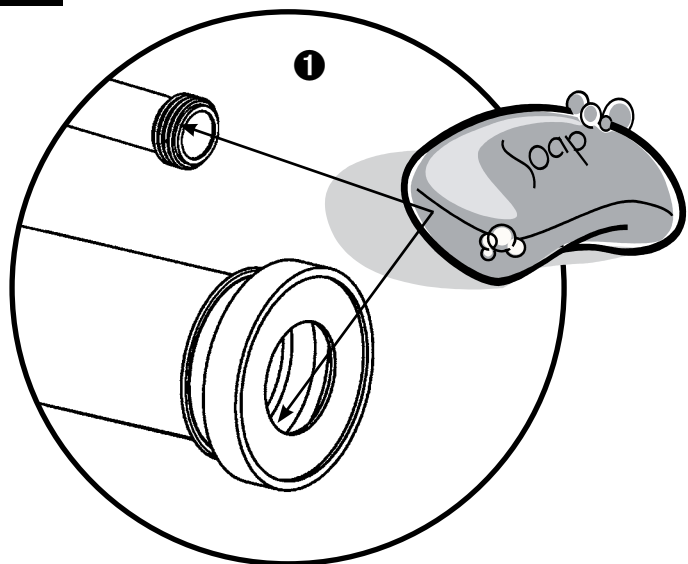


2

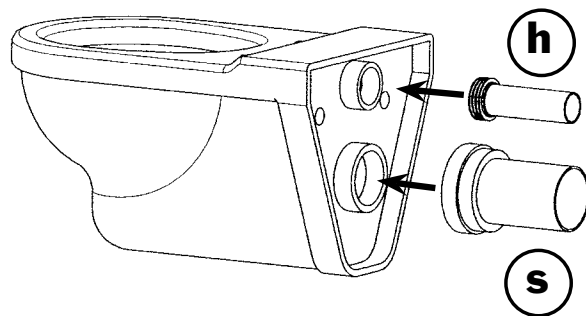



3

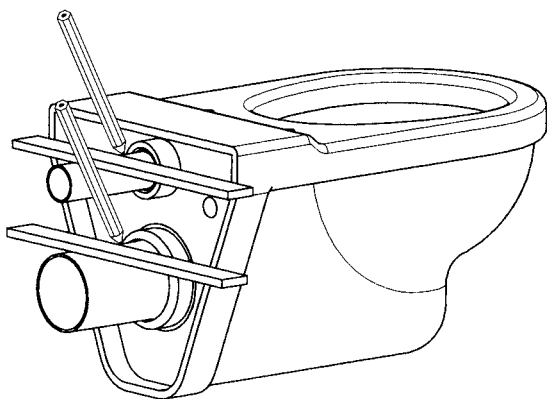

4

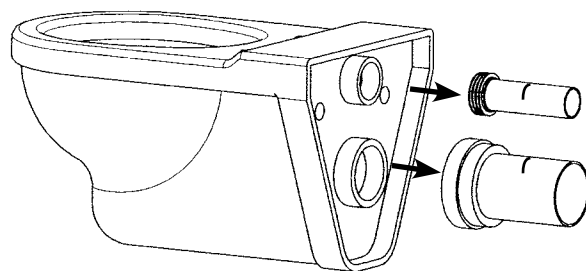


23

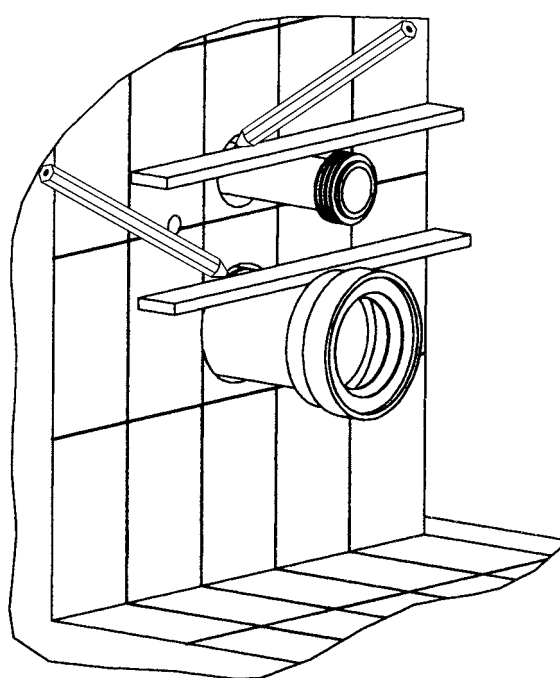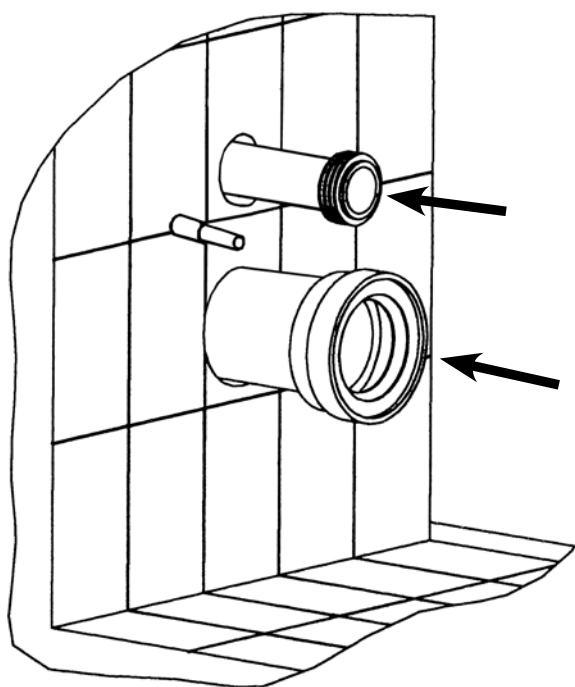


24


①

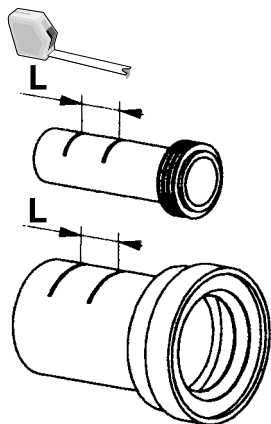


②

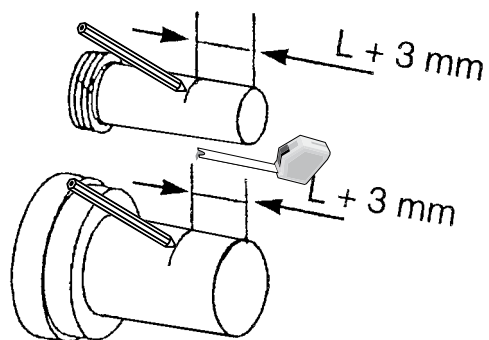

③

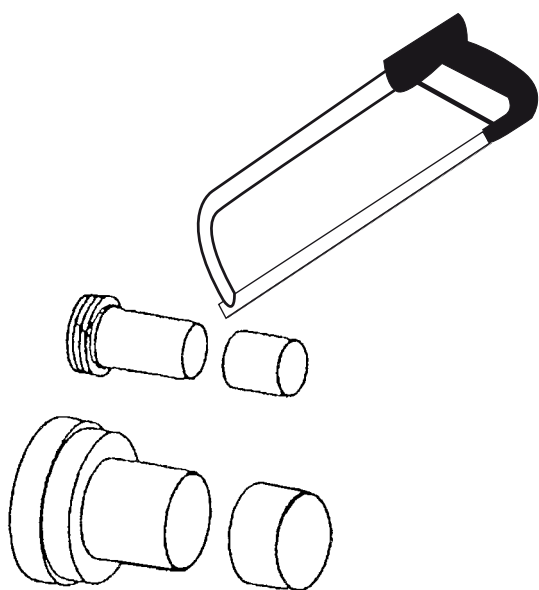


④

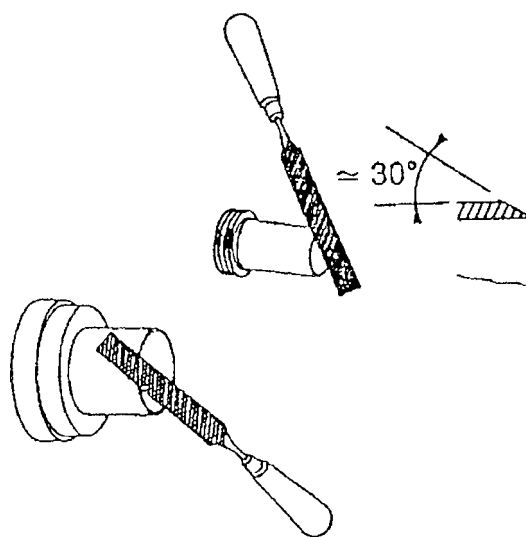


25


①

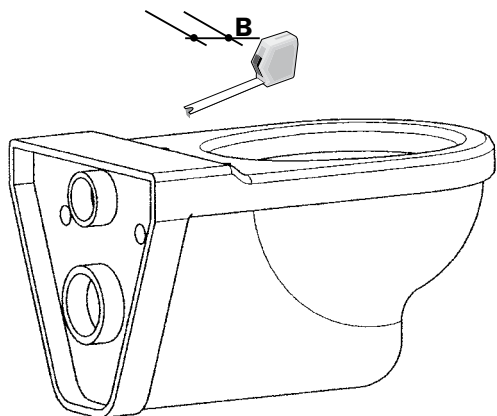




②

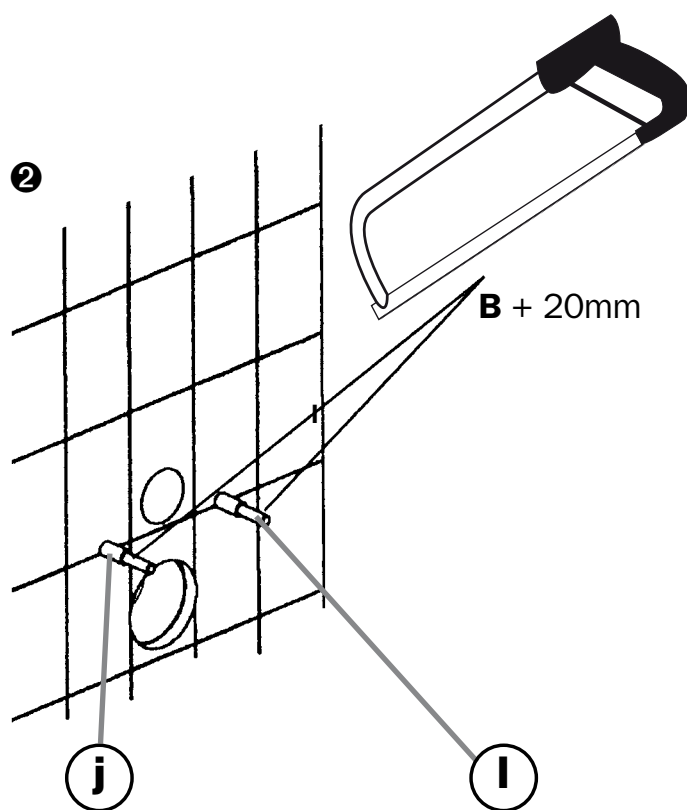

26

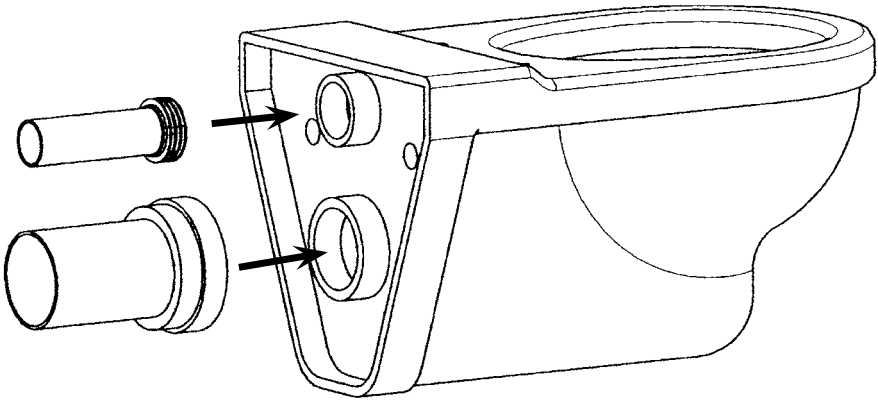


27

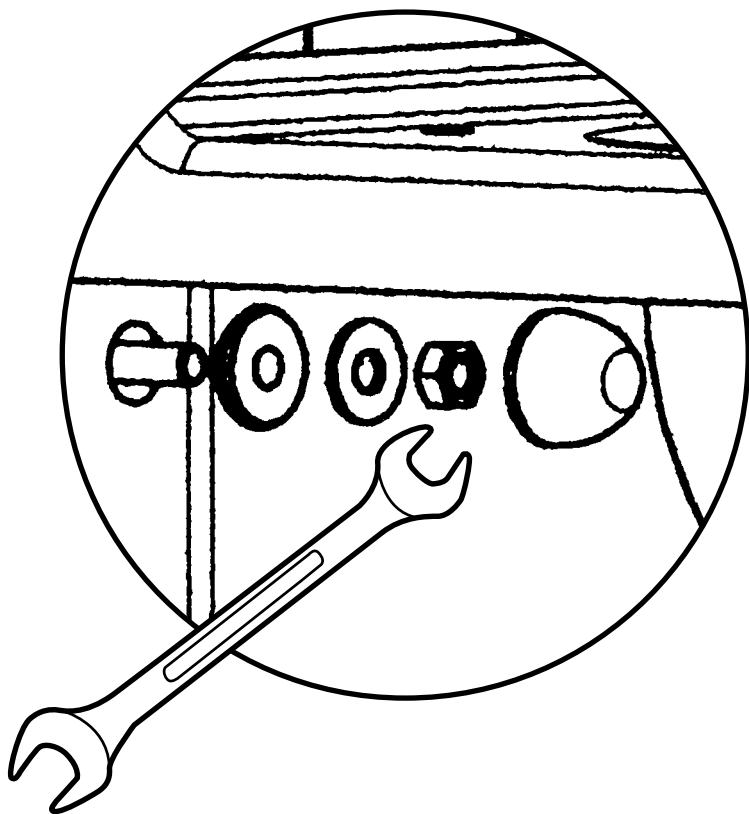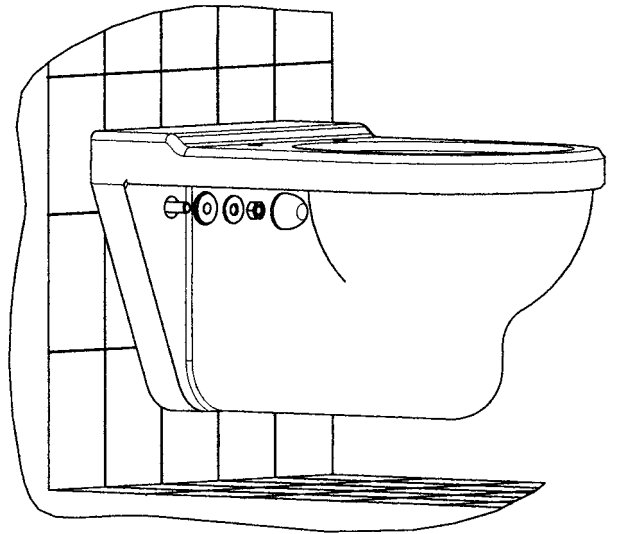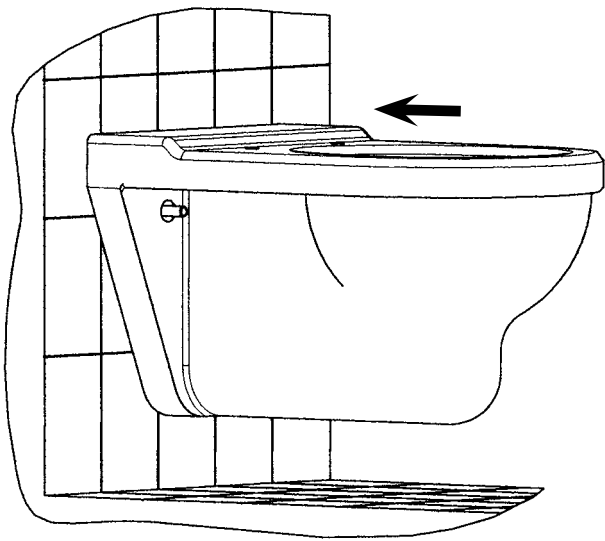


28

1

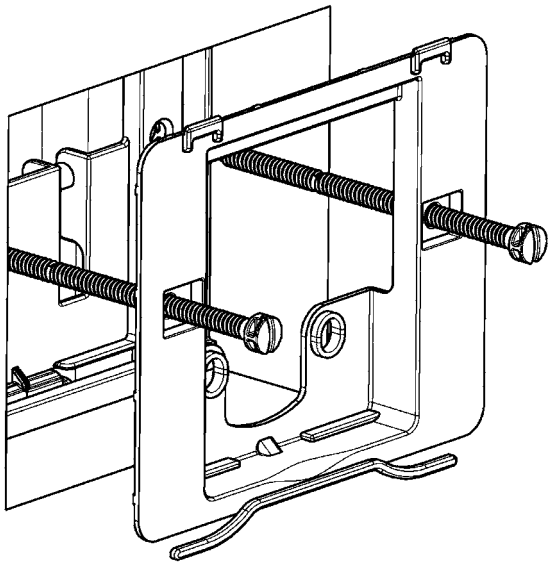


2

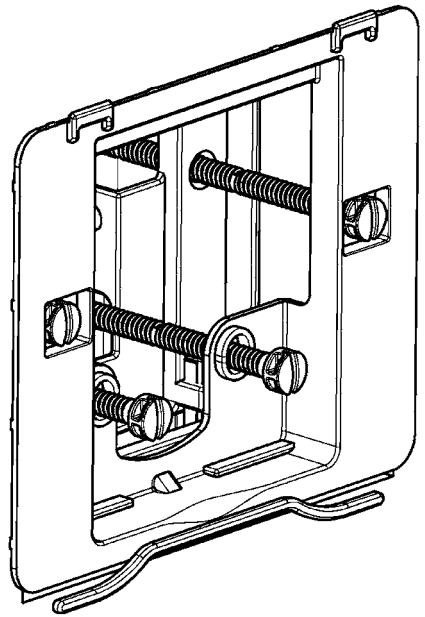


29

1

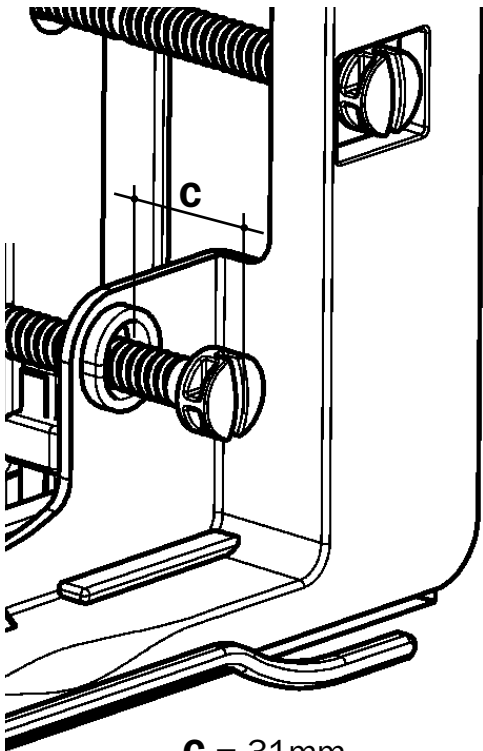

2

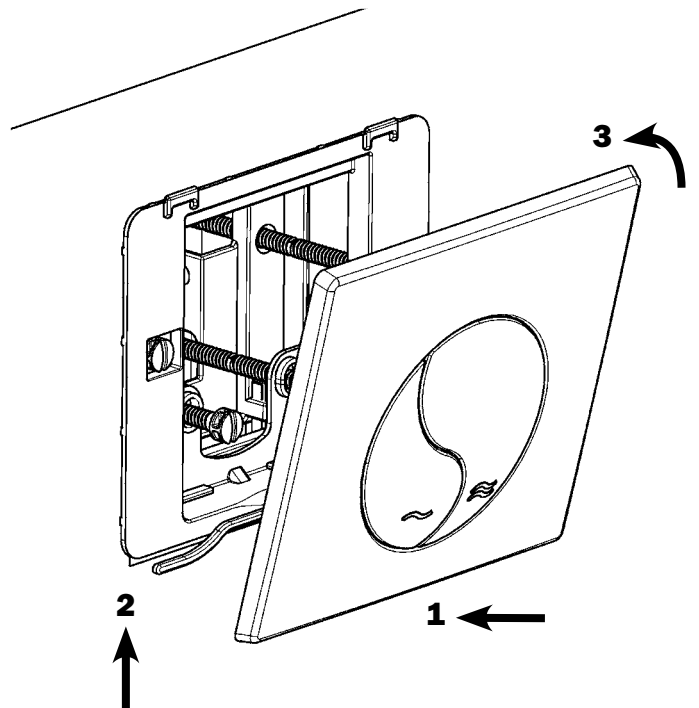

GB : Maintenance

F : Maintenance

D :

E :

S :

N :

DK :

FL :

PL :

RU :

LT :

RO :

NL :

