

FIXING INSTRUCTIONS

RIVIERA 45/99B

IMPORTANT

Before starting work please...

- Read carefully these instructions.
- Remove all protection from pottery and check for surface damage or defects as no responsibility can be accepted for obvious defects after installation.
- Check all parts against the parts list.
- Prepare a firm working surface (e.g. floor or bench) for cistern assembly, covering work surface with a cloth to prevent scratching the glazed faces of the cistern.



WARNING


Alterations to these cistern fittings
may infringe water regulations and will
invalidate our Guarantee

WRAS Approved Inlet Valve COMPACT 99B

WRAS Approved Outlet Flush Valve SKIPPER 45


WC Suite UK Water Supply compliant

PARTS LIST

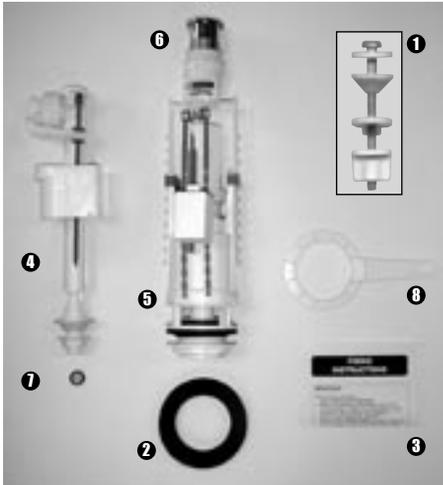

- ❶ 2 x Cistern fixings
- ❷ 1 x Sealing gasket
- ❸ 1 x Fixing instructions
- ❹ 1 x Inlet valve
- ❺ 1 x Outlet valve
- ❻ 1 x Button
- ❼ 1 x Filter (inlet)
- ❽ 1 x Spanner

ASSEMBLING THE CISTERN

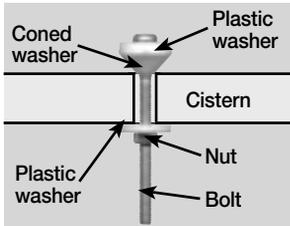

- ❶ Assemble fixing bolts to cistern as shown




- ❷ Assemble outlet valve with washer on the inside of cistern and secure with locking nut




- ❸ Assemble inlet valve with washer on the inside of cistern and secure with backnut, check float moves freely




④ Place gasket onto outlet valve

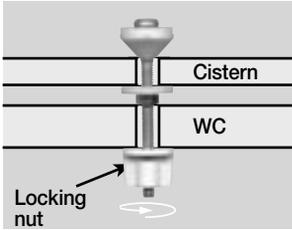

⑤ Secure cistern to WC with locking nuts

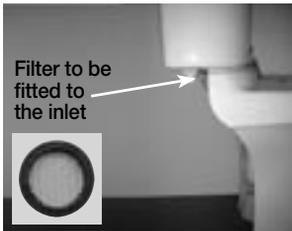

⑥ Connect water supply to inlet valve

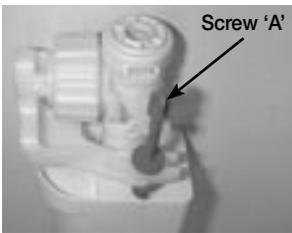

⑦ Adjust inlet valve float with screw 'A' to set water line



6L waterline mark




⑧ Assemble push button as shown

SERVICING THE VALVE



Remove valve from cistern as shown

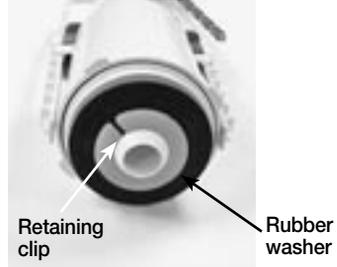

Remove clip and replace the washer

CARE INSTRUCTIONS

Wipe around the pan, cistern, seat & cover with soft damp cloth. DO NOT use scouring powder or abrasive cloths or scourers.

Due to continuing product development we reserve the right to update and amend technical details without prior notice.

CONSUMER GUARANTEE

We are proud of our products and guarantee them against faulty material or manufacture, provided they have been installed, cared for and used in accordance with our instructions.

SIAMP 4, quai Antoine 1er - BP 219 MC 98007 MONACO CEDEX
Tel: 00 377 93 15 53 75 - Fax: 00 377 92 05 71 04 Website www.siamp.com

kiwa
approved
product

