

FIXING INSTRUCTIONS

OPTIMA 49

IMPORTANT

Before starting work please...

- Read carefully these instructions.
- Remove all protection from pottery and check for surface damage or defects as no responsibility can be accepted for obvious defects after installation.
- Check all parts against the parts list.
- Prepare a firm working surface (e.g. floor or bench) for cistern assembly, covering work surface with a cloth to prevent scratching the glazed faces of the cistern.




WARNING

Alterations to these cistern fittings may infringe water regulations and will invalidate our Guarantee


WRAS Approved Outlet Flush Valve OPTIMA 49
WC Suite UK Water Supply compliant

PARTS LIST

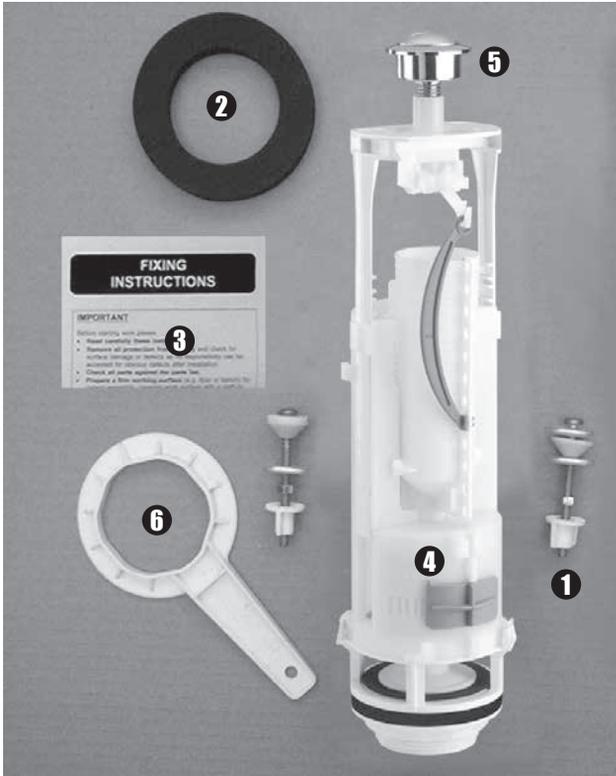

- ❶ 2 x Cistern fixings
- ❷ 1 x Sealing gasket
- ❸ 1 x Fixing instructions
- ❹ 1 x Outlet valve
- ❺ 1 x Button
- ❻ 1 x Spanner

ASSEMBLING THE CISTERN

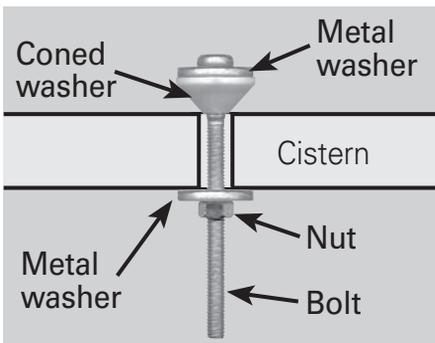

- ❶ Assemble fixing bolts to cistern as shown




- ❷ Assemble outlet valve with washer on the inside of cistern and secure with locking nut




ATTENTION
DO NOT OVERTIGHT




1

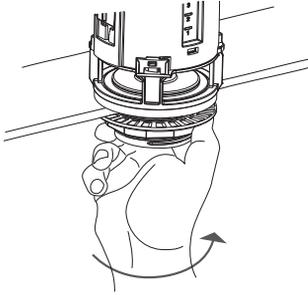

2

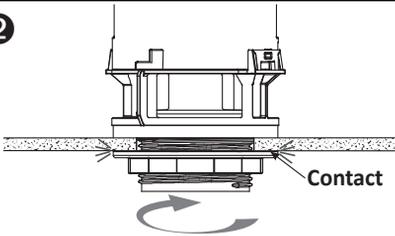

3

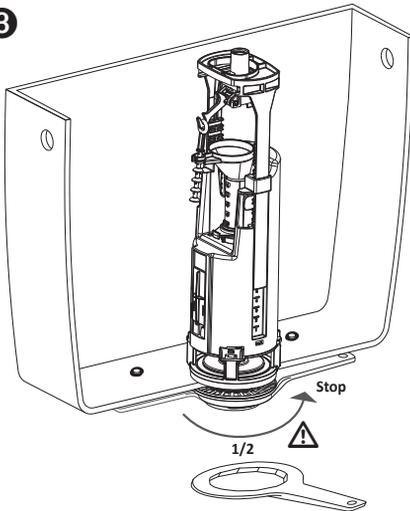


NB : Manually screw the flush valve nut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum) with the appropriate spanner.

Excessive tightening can damage the mechanism and would not be covered by the guarantee.



3 Place gasket onto outlet valve

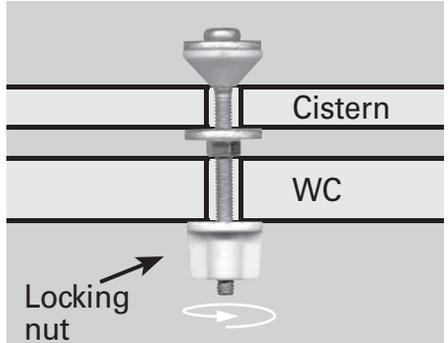

4 Secure cistern to WC with locking nuts




5 Assemble push button as shown

SERVICING THE VALVE



Remove valve from cistern as shown

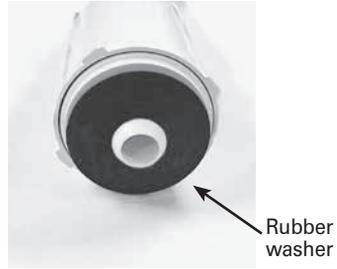

Replace the washer

CARE INSTRUCTIONS

Wipe around the pan, cistern, seat & cover with soft damp cloth. DO NOT use scouring powder or abrasive cloths or scourers.

Due to continuing product development we reserve the right to update and amend technical details without prior notice.

kiwa
approved
product



UK WATER SUPPLY
REGULATIONS

For further enquiries, contact:

SIAMP

Siamp Ltd / Unit C2 / Meadowbank Business Park
Tweedale Way / Hollinwood / Oldham / Greater Manchester / OL9 8EH
Telephone : 0161 681 2120 / Fax : 0161 681 2130 / aftersales@siamp.co.uk