


# SIAMP




Monaco

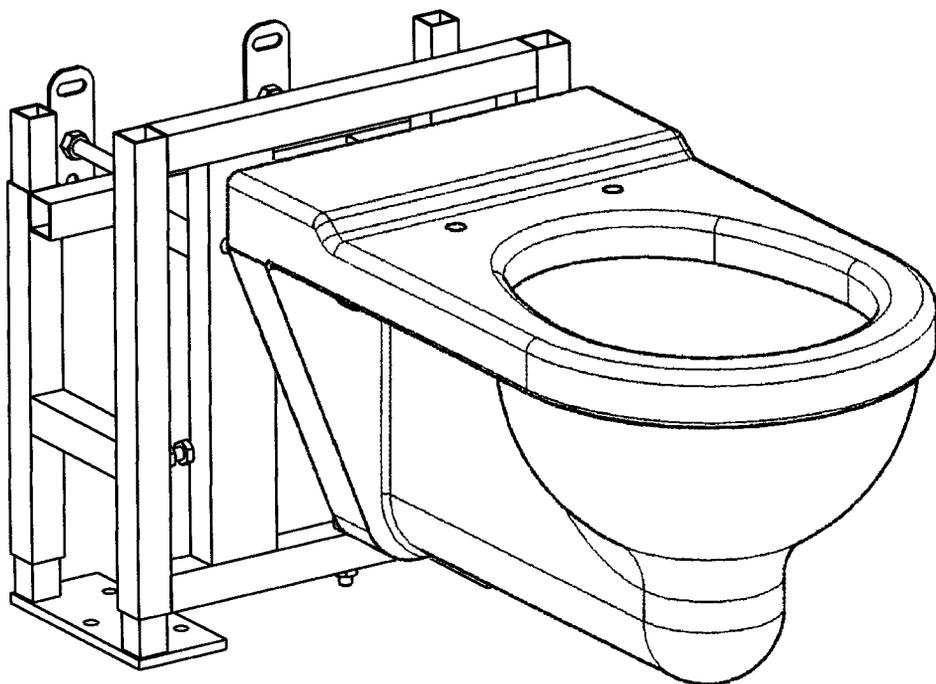

## TOILET BOWL OR BIDET FRAME

ASSEMBLY INSTRUCTION

# I - ASSEMBLING ATTACHING RODS

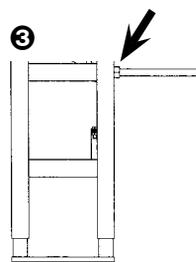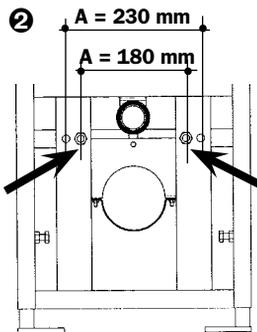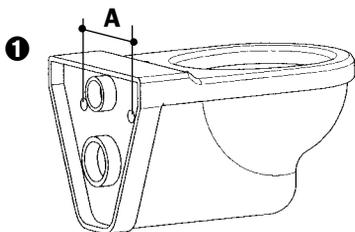


❶ Measure the center distance (A) of the toilet bowl or bidet

❷ Insert the rods into the holes of the frame, corresponding to the center distance



❸ Lock the rods with nuts

⚠ If it's necessary to fix the frame against the wall, secure the attaching tabs to the rods

⚠ attaching tabs

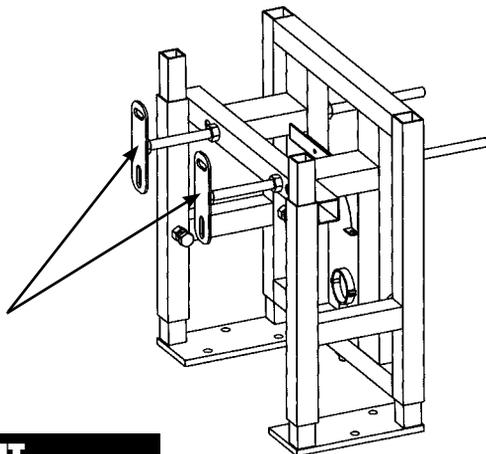

# II - ADJUSTMENT OF THE FRAME HEIGHT

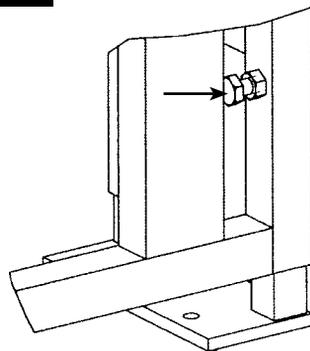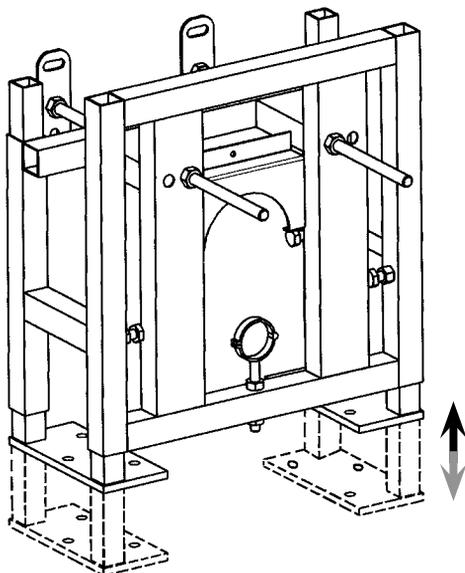

❶ Position the frame in its final location



❷ Undo the 4 setscrews

❸ Adjust the height of the feet so that the top of the toilet bowl or bidet is at a height of 400 mm from the finished floor level.

❹ Check that the frame is level (vertically and horizontally) and tighten the setscrews

⚠ If the frame is being attached to an unfinished floor surface, the maximum thickness of the finished floor surface shall not be more than 185 mm.


### III - PREPARING FOR ATTACHMENT

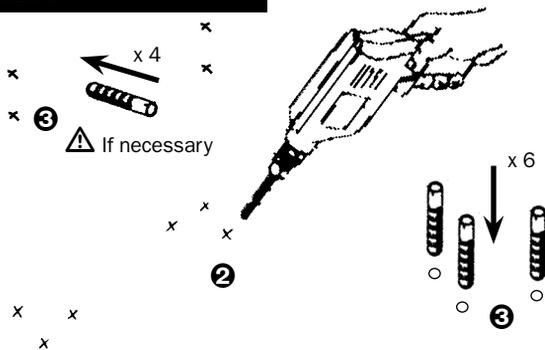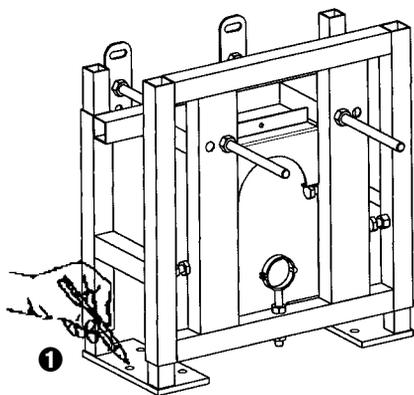


- 1 Mark the drilling points (6 for floor and if necessary 4 for wall)
- 2 Remove the frame and drill to a depth of 70 mm at the least, using an 10 mm diameter drill bit
- 3 Position the screw plugs in the holes
- 4 Move the frame back in place and connect the drain pipe

### IV - CONNECTING THE DRAIN OUTLET

#### Toilet bowl

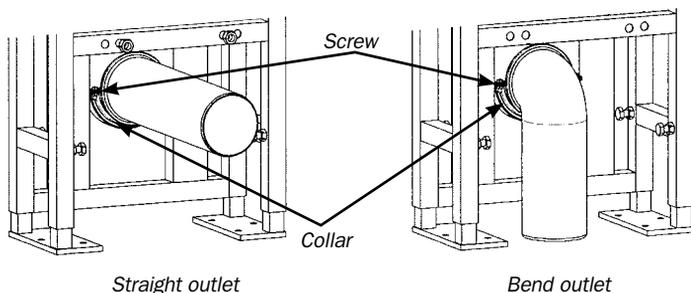


#### Bidet

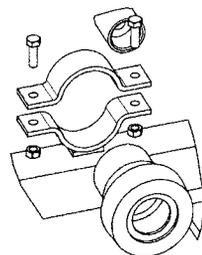

**⚠ Drain pipe not supplied**


### V - ATTACHING THE FRAME

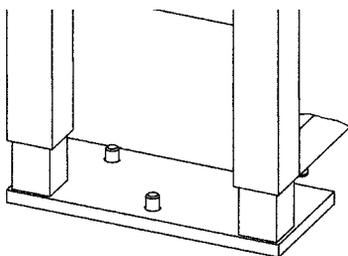

- 1 Attach the frame definitively

## XI - ATTACHING THE TOILET BOWL OR THE BIDET

- ❶ Make connections:
- Cistern inlet and drain outlet for toilet bowl
  - or
  - Water inlets and drain outlet for bidet

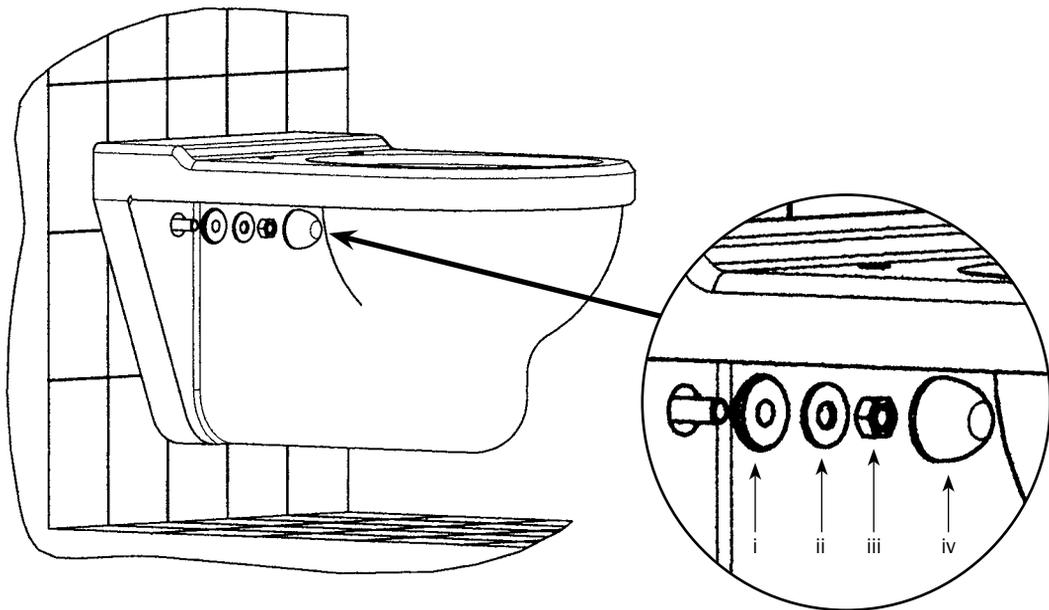

- ❷ When the toilet bowl is correctly positioned, attach it using the kit complying with the part stacking order:
- i = centering washer
  - ii = metal washer
  - iii = nut
  - iv = cover

⚠ The fixing kit is not supplied

# SIAMP

Monaco

4, quai Antoine 1<sup>er</sup> - BP 219 - MC 98007 MONACO Cedex

Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04

E-mail: [contact@siamp.com](mailto:contact@siamp.com)

Site Internet: <http://www.siamp.com>