

# FIXING INSTRUCTIONS


## SIAMP

Monaco


For after sales issues or technical assistance  
or information, please contact us at:

4, quai Antoine 1<sup>er</sup> - B.P. 219 - MC 98007 MONACO Cedex  
Tél. : +377 93 15 53 75 - Fax : +377 92 05 71 04  
E-mail : contact@siamp.com - Website : www.siamp.com

**Pacific**  
Thermoplastic  
toilet seat  
*Adjustable Hinges*

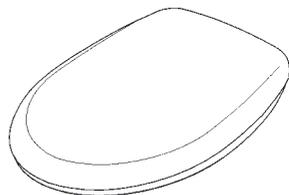


## I - HINGES DESCRIPTION

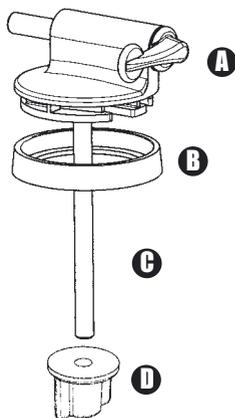


- A** Hinge receiver (x2)
- B** Base (x2)
- C** Screw (x2)
- D** Nut (x2)

## II - ASSEMBLING THE HINGES

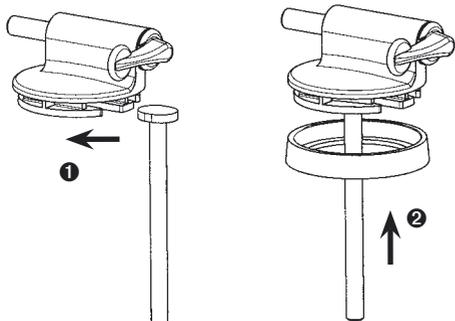


- 1** Insert screw **C** into receiver **A**
- 2** Position base **B** under receiver **A**

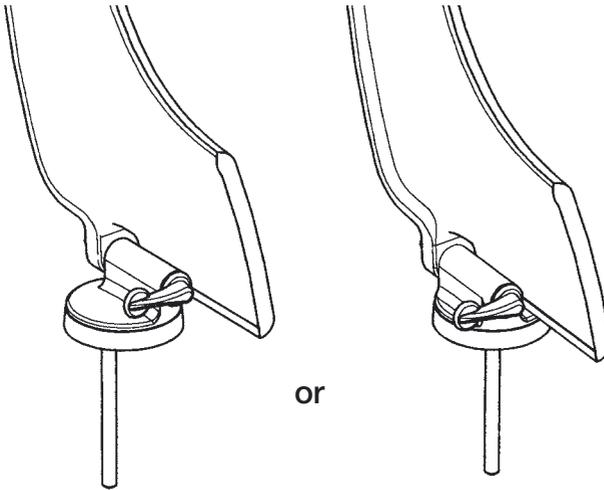


③ Line up each hinge with the two present holes of the toilet pan

### III - ATTACHING THE SEAT

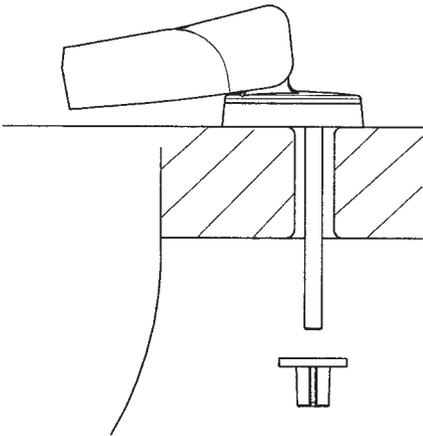

- Fit and secure toilet seat to toilet pan
- Push nut over thread to lock onto washer and tighten

### IV - CLEANING INSTRUCTIONS

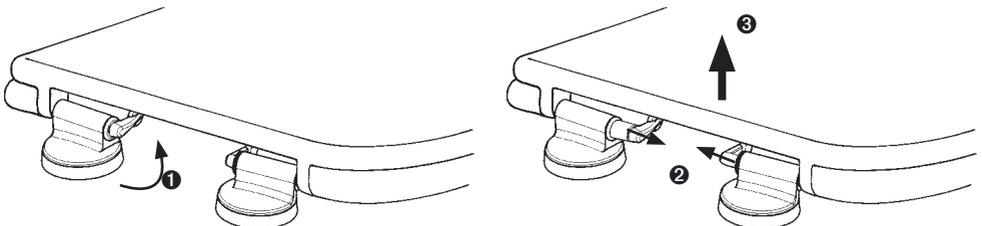

To clean use only warm soapy water and dry with a soft cloth.

Do not use abrasive cleaners or detergents, as this could damage the surface of the seat.