


Monaco



SINGLE FLUSH VALVE *STORM* 33A

BOTTOM INLET VALVE *COMPACT* 99B

DESCRIPTION

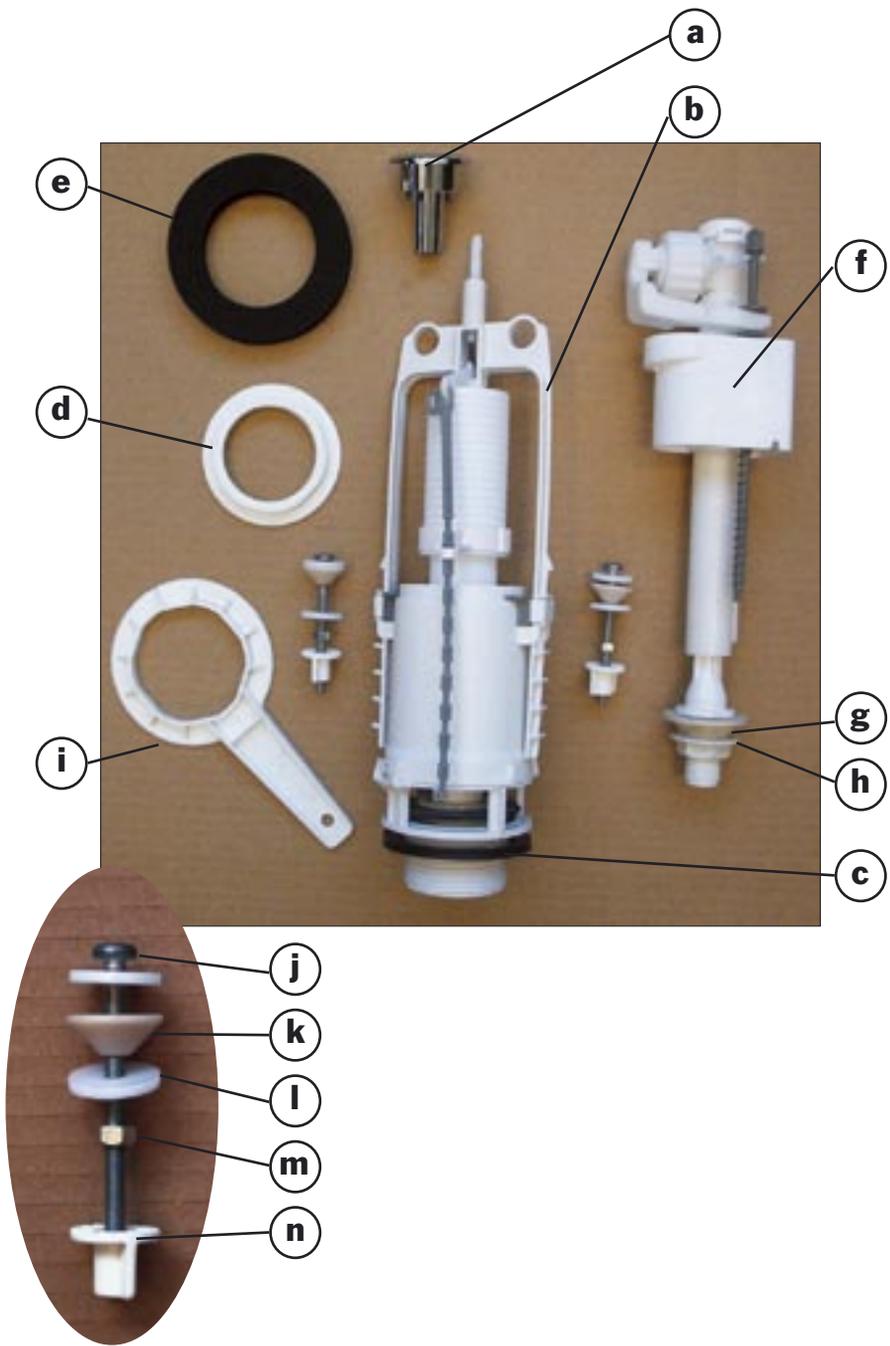

PARTS SUPPLIED

- Ⓐ Pushbutton (1)
- Ⓑ Valve body (1)
- Ⓒ Rubber Washer (1)
- Ⓓ Fixing nut (1)
- Ⓔ Sealing Gasket (1)
- Ⓕ Inlet valve (1)
- Ⓖ Inlet Rubber Washer (1)
- Ⓗ Backnut (1)

FITTINGS SUPPLIED

- Ⓘ Spanner (1)
- Ⓙ Bolt (2)
- Ⓚ Sealing washer (2)
- Ⓛ Washer (4)
- Ⓜ Nut (2)
- Ⓝ Butterfly nut (2)

Tools required (not supplied):

- Slotted screwdriver and adjustable spanner.

Advice:

• Before you Start

- Read these instructions carefully.
- Check the pack and make sure you have all the parts on the pack list.
- Remove all packaging from pottery and check for surface damage or defects.
- Prepare a firm working surface (e.g; floor or bench) for cistern assembly, covering work surface with cloth to prevent scratching the glazed faces of the cistern.

• Care & Use

- Wipe clean with a soft damp cloth around the WC suite.
- Never use scourers or abrasives.

I - ASSEMBLING THE INLET VALVE


- 1 Place Inlet valve (F) through Inlet hole with inlet Rubber Washer (G) inside the cistern.
- 2 Secure with backnut (H) but ensure float moves freely up and down valve body.
NB : Manually screw the backnut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum). Excessive tightening can damage the mechanism and would not be covered by the guarantee.
- 3 Slide bolt (J) through washer (K) and sealing washer (L) then place through cistern and secure with washer (K) and nut (M) using adjustable spanner.



An approved double check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting.


II - ASSEMBLING THE OUTLET VALVE

- 1 Assemble the valve body (B) through cistern with rubber washer (C) on inside of the cistern.
- 2 Secure Fixing nut (D).
NB : Manually screw the flush valve nut until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum) with the spanner (I).
Excessive tightening can damage the mechanism and would not be covered by the guarantee.

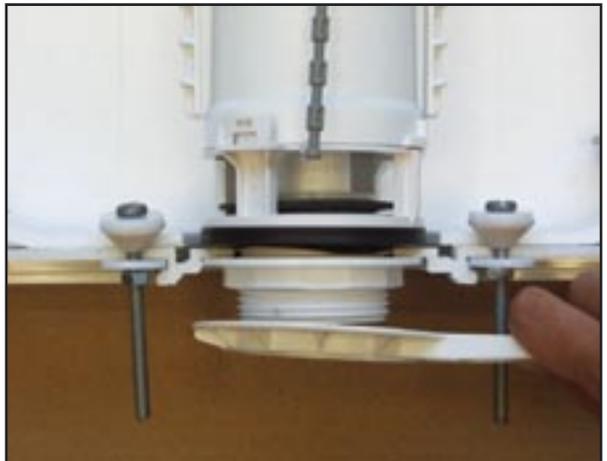

III - ASSEMBLING CISTERN TO PAN

- 1 Slide sealing gasket (E) over fixing nut
- 2 Slide cistern onto W.C. backplate by locating screws through W.C.
- 3 Secure using butterfly nut (N).

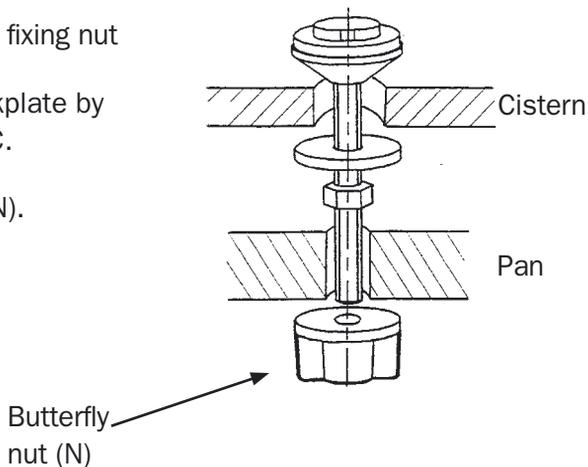


IV - ADJUSTMENT OF VALVE HEIGHT

Try the lid on the cistern to see if the valve is too high or too low :

To adjust :

- 1 Remove clips (x2) (1)
- 2 Unclip rod (2)
- 3 Adjust to correct height
- 4 Replace clips (x2) (1)
- 5 Push down at point (3) and clip rod in at (2).

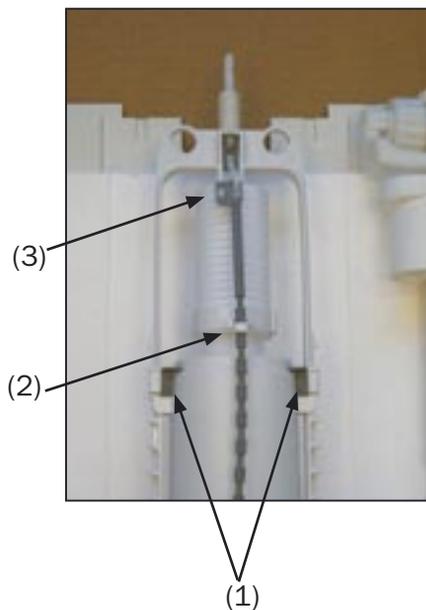

V - SETTING WATER LEVEL

- 1 Connect the supply to the inlet valve.
N.B. : Make connecting tightness with filter seal.


WARNINGS:

- 1 - Do not overtight in any case.
 - 2 - Do not use any sealing paste and/or compound in any case
 - 3 - Do not use connector handling the internal part of the inlet valve.
- SIAMP will be not responsible in case these warnings are not respected.**
- 2 Allow cistern to fill and by screwing the grey bolt slide the float to set water level to waterline.
 - 3 Ensure movement of float is not restricted.



VI - ASSEMBLING THE BUTTON

- 1 Screw the button down, without pushing the central part.

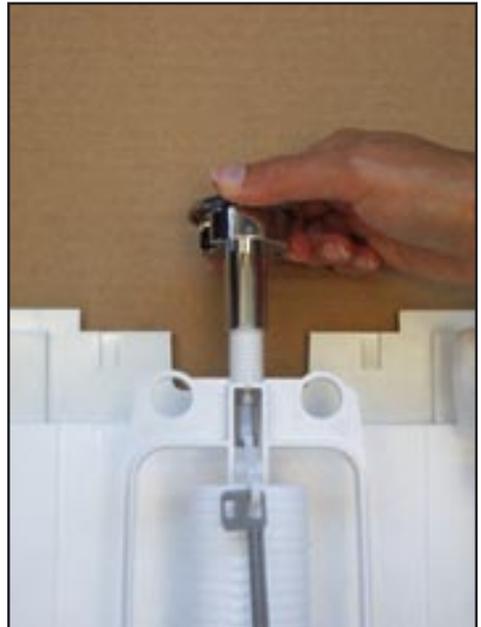


THE FINISHED ASSEMBLY INSIDE THE CISTERN



MAINTENANCE

Servicing the valve

- ① To access the valve, unscrew the assembly as shown.

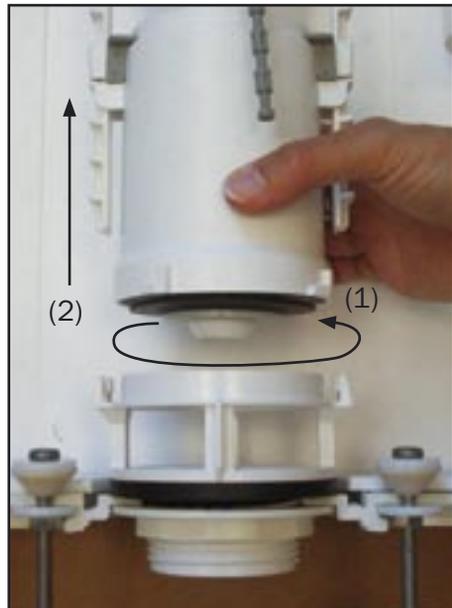

**For further enquiries
Contact Customer Services Mark2 on 01204 360 710**

SINGLE FLUSH VALVE *STORM* 33A

BOTTOM INLET VALVE *COMPACT* 99B



kiwa
approved
product



UK WATER SUPPLY
REGULATIONS

SIAMP

Monaco

4, quai Antoine 1^{er} - BP 219 - MC 98007 MONACO Cedex

Tél. 00 377 93 15 53 75 - Fax : 00 377 92 05 71 04

E-mail: contact@siamp.com

Site Internet : <http://www.siamp.com>