


I - PREPARATION OF THE MECHANISM

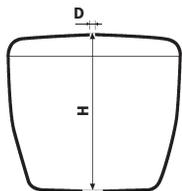


Measure the cistern:


- H (from top of lid to inside bottom of cistern)
- D (diameter of hole in lid)

⚠ **Check the positioning of the stirrup** if the stirrup (n) is positioned correctly with reference to the table below (pin (i) clipped into the right notch), move on to step 9; otherwise, go through all the following steps in order:

- 1 Unclip the pulls (d)
- 2 Remove the pins (i)
- 3 Remove the stirrup (n)
- 4 If necessary, cut the overflow (m) as shown in the table
- 5 If necessary, cut the pulls (d)
- 6 Set the stirrup in the suitable notch - see table (n)
- 7 Attach the stirrup again using the pins (i)
- 8 Clip the pulls (d) back in place
- 9 Clip the small float (f) in place
- 10 Unscrew the nut (h)

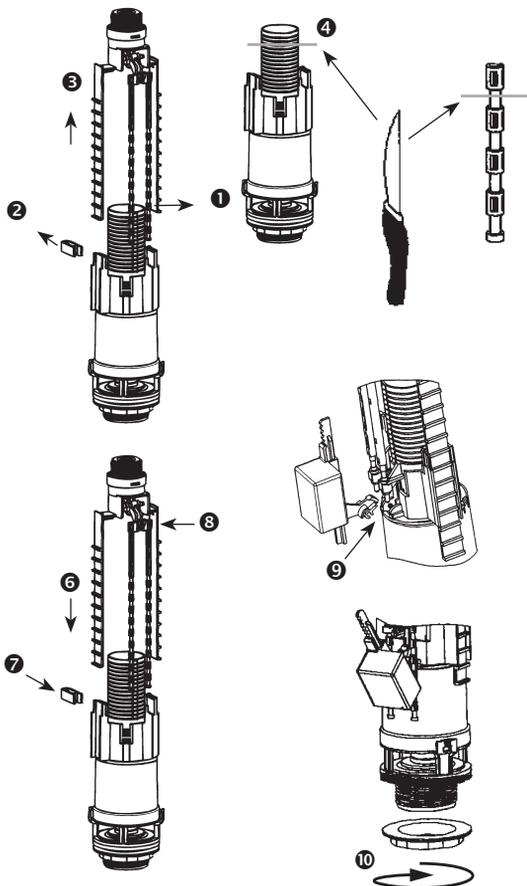

	Height of cistern H	
	Diameter D of hole in lid from 18 to 38 mm & 45 to 50 mm	Diameter D of hole in lid from 38 to 44 mm
10*	293 to 310	312 to 329
9*	309 to 325	328 to 344
8*	324 to 341	343 to 360
7	340 to 356	359 to 375
6	355 to 371	374 to 391
5	370 to 387	390 to 406
4	386 to 402	405 to 422
3	401 to 417	421 to 437
2	416 to 432	436 to 453
1	431 to 447	452 to 468

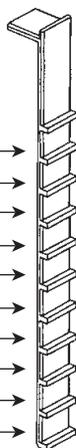

Stirrup notch	Overflow	Pulls
10	Cut between I and J	Cut
9	Cut between F and G	at 50 mm
8	Cut between C and D	from base


II - INSTALLATION

Position the mechanism in the cistern and secure it in place with the nut (h).


Manually screw the flush valve nut (h) until it is in contact with the ceramic. If necessary give an extra quarter turn (maximum) with the appropriate spanner.

NB : Excessive tightening can damage the mechanism and would not be covered by the guarantee.


NB: The small float (f) should be on the opposite side to the water inlet.

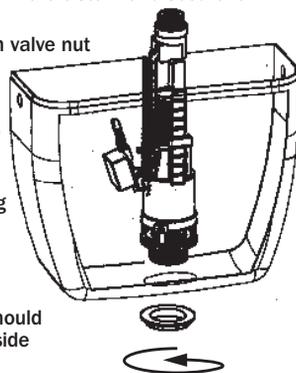

III - ASSEMBLY OF CISTERN TANK

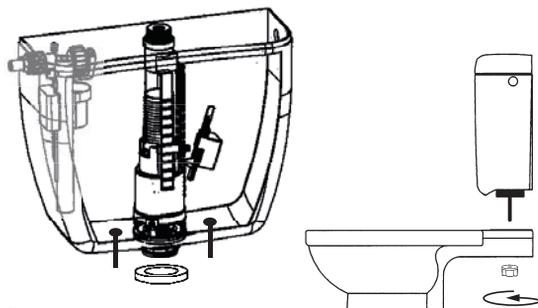


- 1 Attach the screws to the bottom of the cistern (see stack of parts indicated below)
- 2 Position the foam seal on the nut (h)
- 3 Position the cistern on the toilet bowl and attach it with the wing nuts

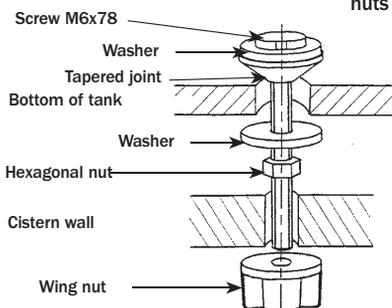

V - INSTALLING THE BUTTON


- 1 Once you have finished adjusting, make sure that the gray collar (c) is unscrewed entirely.
- 2 Fit the lid
- 3 If the lid hole (D) is < 38 mm and > 44, remove the rose (b)
- 4 Position the button on the lid and screw down until it locks.

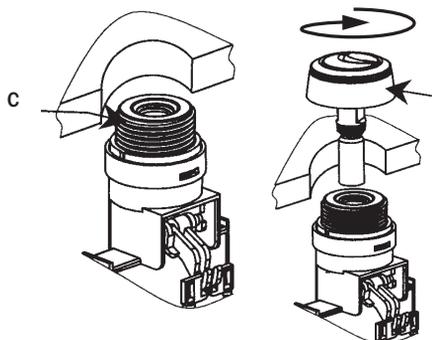

IV - ADJUSTMENT OF HALF FLUSH

First connect your float valve to the water system, open the stop valve and adjust the Full flush level using the float valve (see on back).

NB: the maximum water level should be 20 mm below the overflow (m).

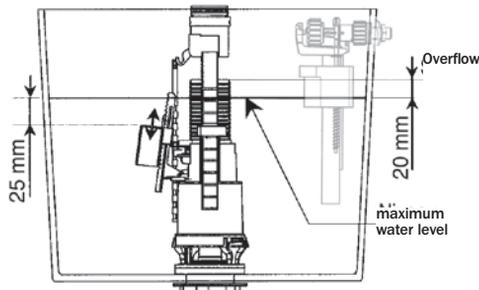


- 1 Fill the cistern to the maximum level (as indicated above)
- 2 Slide the small float (f) along the gray rocker (e) so that it is 25 mm at least below the water level.

NB: The more you depress the small float, the less flushing water you will have (minimum possible 3 liters).

VI - MAINTENANCE

Replacement of the seal

- 1 Open the cistern and turn the mechanism a quarter turn to separate it from the plug
- 2 Remove the seal attaching clip
- 3 Replace the seal
- 4 Fit the clip then relocate the mechanism, locking it on the plug
- 5 Close the cistern making sure that the control button is correctly assembled (see § V)

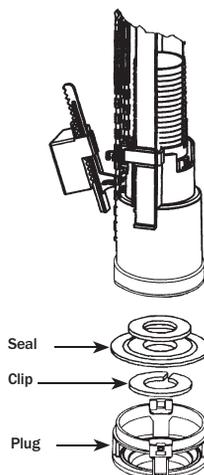


INSTALLING THE FLOAT VALVE

99T & 93T WITH TELESCOPIC TUBE


- ❶ Adjust telescopic tube (a) raise the grey blocking ring (b) screw or unscrew the graduated tube in way so that the inlet top not exceed the top of the tank (c) position back the grey ring
- ❷ Place inlet valve through inlet hole with inlet rubber washer inside the cistern
- ❸ Secure with backnut
- ❹ Connect the supply
- ❺ Adjust water level with grey adjusting screw.

N.B. Ensure tightness of connection to cistern with filter gasket.

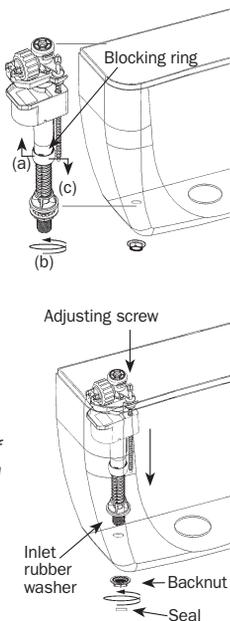

COMPACT 95L

- ❶ Position valve
- ❷ Fasten with nut
- ❸ Connect to water supply
- ❹ Adjust water level with the adjustment screw

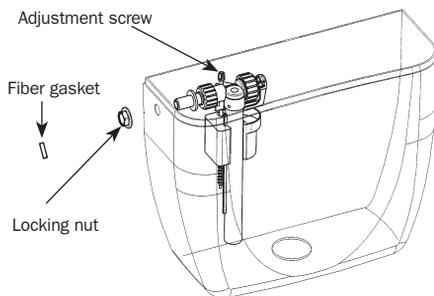


WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet valve.

SIAMP will be not responsible in case these warnings are not respected.

N.B.: In the tank, do not use any anti limescale products or chlorine based products which could damage the mechanism and would not be covered by the guarantee. For the maintenance of your unit, we recommend you to use the MULTICARE WC overall maintenance system.

99B & 93B

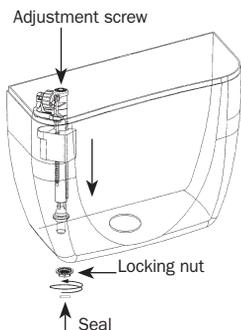

N.B. Ensure tightness of connection to cistern with filter gasket.

WARNINGS:

- 1 - Do not overtight in any case.
- 2 - Do not use any sealing paste and/or compound in any case
- 3 - Do not use connector handling the internal part of the inlet valve.

SIAMP will be not responsible in case these warnings are not respected.

MAINTENANCE (95L & 99B)

